

TOSHIBA

SERVICE MANUAL

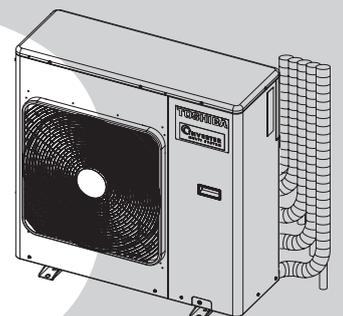
AIR-CONDITIONER

SPLIT TYPE

RAS-5M51U2ACVG-SG

R32

INVERTER



CONTENTS

1. SAFETY PRECAUTIONS	3
2. SPECIFICATIONS	10
3. REFRIGERANT R32	18
4. CONSTRUCTION VIEWS	26
5. WIRING DIAGRAM	27
6. SPECIFICATIONS OF ELECTRICAL PARTS.....	28
7. REFRIGERANT CYCLE DIAGRAM.....	29
8. CONTROL BLOCK DIAGRAM	31
9. OPERATION DESCRIPTION	32
10. INSTALLATION PROCEDURE	48
11. HOW TO DIAGNOSE THE TROUBLE	60
12. HOW TO REPLACE THE MAIN PARTS	84
13. EXPLODED VIEWS AND PARTS LIST.....	98

1. SAFETY PRECAUTIONS

The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications/Illustrated marks), and keep them.

[Explanation of illustrated marks]

Mark	Explanation
	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (including danger/warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.

■ Warning indications on the air conditioner unit

	WARNING (Risk of fire)	This mark is for R32 refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R32, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part it will create harmful gas and there is risk of fire
		Read the OWNER'S MANUAL carefully before operation.
		Service personnel are required to carefully read the OWNER'S MANUAL and INSTALLATION MANUAL before operation.
		Further information is available in the OWNER'S MANUAL, INSTALLATION MANUAL, and the like.

Be sure to follow the precautions provided here to avoid safety risks. The symbols and their meanings are shown below.

 DANGER	It indicates that incorrect use of this unit can result in a high possibility of severe injury(*1) or death.
 WARNING	It indicates that incorrect use of this unit may cause severe injury or death.
 CAUTION	It indicates that incorrect use of this unit may cause personal injury(*2), or property damage(*3).

*1: A severe injury refers to blindness, injury, burns (hot or cold), electrical shock, bone fracture, or poisoning that leaves after effects and requires hospitalization or extended out-patient treatment.

*2: Personal injury means a slight accident, burn, or electrical shock which does not require admission or repeated hospital treatment.

*3: Property damage means greater damage which affects assets or resources

For general public use

Power supply cord of parts of appliance for outdoor use shall be at least polychloroprene sheathed flexible cord (design H07RN-F) or cord designation 602 5 IEC66 (1.5 mm² or more). (Shall be installed in accordance with national wiring regulations.)

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

CAUTION

To disconnect the appliance from the main power supply

This appliance must be connected to the main power supply by means of a circuit breaker or a switch with a contact separation of at least 3 mm in all poles.

CAUTION

NEW REFRIGERANT AIR CONDITIONER INSTALLATION

THIS AIR CONDITIONER USES THE NEW HFC REFRIGERANT (R32), WHICH DOES NOT DESTROY THE OZONE LAYER.

R32 REFRIGERANT IS APT TO BE AFFECTED BY IMPURITIES SUCH AS WATER, OXIDIZING MEMBRANES, AND OILS BECAUSE THE PRESSURE OF R32 REFRIGERANT IS APPROX. 1.6 TIMES OF REFRIGERANT R22.

AS WELL AS THE ADOPTION OF THIS NEW REFRIGERANT, REFRIGERATING MACHINE OIL HAS ALSO BEEN CHANGED. THEREFORE, DURING INSTALLATION WORK, BE SURE THAT WATER, DUST, FORMER REFRIGERANT, OR REFRIGERATING MACHINE OIL DOES NOT ENTER THE REFRIGERATION CYCLE OF A NEW-REFRIGERANT AIR CONDITIONER. TO AVOID MIXING REFRIGERANT AND REFRIGERATING MACHINE OIL, THE SIZES OF CHARGING PORT CONNECTING SECTIONS ON THE MAIN UNIT ARE DIFFERENT FROM THOSE FOR THE CONVENTIONAL REFRIGERANT, AND DIFFERENT SIZE TOOLS ARE ALSO REQUIRED. FOR CONNECTING PIPES, USE NEW AND CLEAN PIPING MATERIALS WITH HIGH PRESSURE WITHSTAND CAPABILITIES, DESIGNED FOR R32 ONLY, AND ENSURE THAT WATER OR DUST DOES NOT ENTER. MOREOVER, DO NOT USE ANY EXISTING PIPING AS ITS PRESSURE WITHSTAND MAY BE INSUFFICIENT AND MAY CONTAIN IMPURITIES.

 **DANGER**

- THE MANUFACTURER SHALL NOT ASSUME ANY LIABILITY FOR THE DAMAGE CAUSED BY NOT OBSERVING THE DESCRIPTION OF THIS MANUAL.
- FOR USE BY QUALIFIED PERSONS ONLY.
- MEANS FOR DISCONNECTION FROM THE SUPPLY HAVING A CONTACT SEPARATION OF AT LEAST 3 MM IN ALL POLES MUST BE INCORPORATED IN THE FIXED WIRING.
- TURN OFF MAIN POWER SUPPLY BEFORE ATTEMPTING ANY ELECTRICAL WORK. MAKE SURE ALL POWER SWITCHES ARE OFF. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.
- CONNECT THE CONNECTING CABLES CORRECTLY. IF THE CONNECTING CABLES ARE CONNECTED WRONGLY, ELECTRIC PARTS MAY BE DAMAGED.
- CHECK THE EARTH WIRE THAT IT IS NOT BROKEN OR DISCONNECTED BEFORE INSTALLATION.
- DO NOT INSTALL NEAR CONCENTRATIONS OF COMBUSTIBLE GAS OR GAS VAPORS. FAILURE TO FOLLOW THIS INSTRUCTION CAN RESULT IN FIRE OR EXPLOSION.
- TO PREVENT OVERHEATING THE INDOOR UNIT AND CAUSING A FIRE HAZARD, PLACE THE UNIT WELL AWAY (MORE THAN 2 M) FROM HEAT SOURCES SUCH AS RADIATORS, HEATERS, FURNACE, STOVES, ETC.
- WHEN MOVING THE AIR CONDITIONER FOR INSTALLING IT IN ANOTHER PLACE AGAIN, BE VERY CAREFUL NOT TO GET THE SPECIFIED REFRIGERANT (R32) WITH ANY OTHER GASEOUS BODY INTO THE REFRIGERATION CYCLE. IF AIR OR ANY OTHER GAS IS MIXED IN THE REFRIGERANT, THE GAS PRESSURE IN THE REFRIGERATION CYCLE BECOMES ABNORMALLY HIGH AND IT RESULTANTLY CAUSES BURST OF THE PIPE AND INJURIES ON PERSONS.
- IN THE EVENT THAT THE REFRIGERANT GAS LEAKS OUT OF THE PIPE DURING THE INSTALLATION WORK, IMMEDIATELY LET FRESH AIR INTO THE ROOM. IF THE REFRIGERANT GAS IS HEATED BY FIRE OR SOMETHING ELSE, IT CAUSES GENERATION OF POISONOUS GAS.
- WHEN INSTALLING OR RE-INSTALLING THE AIR CONDITIONER, DO NOT INJECT AIR OR OTHER SUBSTANCES BESIDES THE DESIGNATED REFRIGERANT "R32" INTO THE REFRIGERATING CYCLE.
IF AIR OR OTHER SUBSTANCES ARE MIXED, AN ABNORMAL PRESSURE CAN OCCUR IN THE REFRIGERATING CYCLE, AND THIS CAN CAUSE AN INJURY DUE TO A PIPE RUPTURE.

 **WARNING**

About the refrigerant

- This product contains fluorinated greenhouse gases
- Do not vent gases to the atmosphere.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant cycle parts.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Be aware that refrigerants may not contain an odour.
- The refrigerant inside the unit is flammable. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, it may result in fire or the formation of a harmful gas.
- Turn off any combustible heating devices, ventilate the room, and contact the dealer from which you purchased the unit.
- Do not use the unit until a service person confirms that the portion from which the refrigerant leaked is repaired.
- When installing, relocating, or servicing the air conditioner, use only the specific refrigerant (R32) to charge the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines.
- Pipe-work shall be protected from physical damage.
- Compliance with national gas regulations shall be observed.
- Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Installation work must be requested from the supplying retail dealership or professional vendors. Self-installation may cause water leakage, electrical shock, or fire as a result of improper installation.
- Specified tools and pipe parts for model R32 are required, and installation work must be done in accordance with the manual. HFC type refrigerant R32 has 1.6 Times more pressure than that of conventional refrigerant (R22). Use the specified pipe parts, and ensure correct installation, otherwise damage and/or injury may be caused. At the same time, water leakage, electrical shock, and fire may occur.
- Be sure to install the unit in a place which can sufficiently bear its weight. If the load bearing of the unit is not enough, or installation of the unit is improper, the unit may fall and result in injury.
- Electrical work must be performed by a qualified electrical engineer in accordance with the code governing such installation work, internal wiring regulations, and the manual. A dedicated circuit and the rated voltage must be used. Insufficient power supply or improper installation may cause electrical shock or fire.
- Use a crimping cable to connect wires in the indoor/outdoor units. Midway connection, stranded wire, and single-wire connections are not allowed. Improper connection or fixing may cause a fire.

 **WARNING**

- Wiring between the indoor unit and outdoor units must be well shaped so that the cover can be firmly placed. Improper cover installation may cause increased heat, fire, or electrical shock at the terminal area.
- Be sure to use only approved accessories or the specified parts. Failure to do so may cause the unit to fall, water leakage, fire or electrical shock.
- After the installation work, ensure that there is no leakage of refrigerant gas. If the refrigerant gas leaks out of the pipe into the room and is heated by fire or something else from a fan heater, stove or gas range, it causes generation of poisonous gas.
- Make sure the equipment is properly earthed. Do not connect the earth wire to a gas pipe, water pipe, lightning conductor, or telephone earth wire. Improper earth work may be the cause of electrical shock.
- Do not install the unit where flammable gas may leak. If there is any gas leakage or accumulation around the unit, it can cause a fire
- Do not select a location for installation where there may be excessive water or humidity, such as a bathroom. Deterioration of insulation may cause electrical shock or fire
- Installation work must be performed following the instructions in this installation manual. Improper installation may cause water leakage, electrical shock or fire. Check the following items before operating the unit.
 - Be sure that the pipe connection is well placed and there are no leaks.
 - Check that the service valve is open. If the service valve is closed, it may cause overpressure and result in compressor damage. At the same time, if there is a leak in the connection part, it may cause air suction and overpressure, resulting in burst or injury.
- The installation of pipe work shall be kept to a minimum.
- The following must be certainly done during pump down.
 - Do not incorporate air into the refrigeration cycle.
 - Close the 2 service valves. Stop the compressor and remove the refrigerant pipe. If the refrigerant pipe is removed when the compressor is operating and service valves are opened, the refrigerant cycle will inhale unwanted matter such as air and the pressure in the cycle becomes abnormally elevated. It may cause a burst or injury.

 **WARNING**

- Do not modify the power cable, connect the cable midway, or use a multiple outlet extension cable. Doing so may cause contact failure, insulation failure, or excess current, resulting in fire or electrical shock
- If you detect any damage, do not install the unit. Contact your supplying dealer immediately.
- Never modify this unit by removing any of the safety guards or bypassing any of the safety interlock switches.
- Do not wash air conditioners with pressure washers. Electric leaks may cause electric shocks or fires.
- Be sure to comply with local regulations/codes when running the wire from the outdoor unit to the indoor unit. (Size of wire and wiring method etc.)
- When installing the air conditioner in a small room, provide appropriate measures to ensure that the concentration of refrigerant leakage occur in the room does not exceed the critical level. It is not dangerous refrigerant; it has not toxicity. However, a concentration above 0.3 kg/m³ as criterion still causes suffocation. The volume of refrigerant charged to the multi system air conditioner is more than the volume charged to a conventional individual system.
- Minimum floor area for installation the Multi System air conditioner, When combined with the indoor product, shall be installed in a room with a floor area follow as below table

Refrigerant amount (kg)	Minimum floor area, When combined with indoor product. (m ²)	
	HIGH-WALL	
≤ 1.84	-	
1.92	4	
2.12	4	
2.32	5	
2.39	5	
2.52	6	
2.72	7	
2.92	8	
3.19	10	

- Before operating the air conditioner after having completed the work, check that the electrical parts control box cover of the indoor unit and valve cover of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock etc. if the power is turned on without first conducting these checks.
- Make sure drain hose insulation if cooling operation is used at sub-zero ambient temperature.

CAUTION

- Please read this installation manual carefully before installing the unit. It contains further important instructions for proper installation.
- Exposure of unit to water or other moisture before installation could result in electric shock. Do not store it in a wet basement or expose to rain or water.
- After unpacking the unit, examine it carefully for possible damage.
- Do not install in a place that can increase the vibration of the unit. Do not install in a place that can amplify the noise level of the unit or where noise and discharged air might disturb neighbours.
- This appliance must be connected to the main power supply by means of a circuit breaker depending on the place where the unit is installed. Failure to do so may cause electrical shock.
- Follow the instructions in this installation manual to arrange the drain pipe for proper drainage from the unit. Ensure that drained water is discharged. Improper drainage can result in water leakage, causing water damage to furniture.
- Tighten the flare nut with a torque wrench using the prescribed method. Do not apply excess torque. Otherwise, the nut may crack after a long period of usage and it may cause the leakage of refrigerant.
- Wear gloves (heavy gloves such as cotton gloves) for installation work. Failure to do so may cause personal injury when handling parts with sharp edges.
- Do not touch the air intake section or the aluminium fins of the outdoor unit. It may cause injury.
- Do not install the outdoor unit in a place which can be a nest for small animals. Small animals could enter and contact internal electrical parts, causing a failure or fire
- Request the user to keep the place around the unit tidy and clean.
- Make sure to conduct a test run after the installation work, and explain how to use and maintain the unit to the customer in accordance with the manual. Ask the customer to keep the operation manual along with the installation manual.
- Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury .

Requirement of report to the local power supplier

Please make absolutely sure that the installation of this appliance is reported to the local power supplier before installation. If you experience any problems or if the installation is not accepted by the supplier, the service agency will take adequate countermeasures.

■ Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases

Do not vent gases into the atmosphere.

Refrigerant type: **R32**

GWP⁽¹⁾ value: **675** * (ex. R32 ref. AR4)

⁽¹⁾GWP = global warming potential

The refrigerant quantity is indicated on the unit name plate.

* This value is based on F gas regulation 517/2014

⚠ CAUTION

- Exposure of unit to water or other moisture before installation may result in an electrical short.
Do not store in a wet basement or expose to rain or water.
- Do not install in a place that can increase the vibration of the unit. Do not install in a place that can amplify the noise level of the unit or where noise or discharged air might disturb neighbors.
- To avoid personal injury, be careful when handling parts with sharp edges.
- **Perform the specified installation work to guard against an earthquake.**
If the air conditioner is not installed appropriately, accidents may occur due to the falling unit.

2. SPECIFICATIONS

The indoor and outdoor units that can be used in combination are shown in the tables below.

Table of models that can be used in combination

Type	Outdoor unit	Combinations of indoor unit models that can be connected
Cooling	RAS-5M51U2ACVG-SG	Refer to page 11 to 16

NOTES

A 1-room connection is not an option for the indoor units (you cannot connect only one indoor unit).
Be sure to connect indoor units in two or more.

2-1. Specifications <Cooling Only Models> RAS-5M51U2ACVG-SG

Unit models	Outdoor units	RAS-5M51U2ACVG-SG		
	Indoor unit connecting of below performance spec.	RAS-M10U2KCVG-SG1 x5		
Cooling capacity (rated)	(kW)	8.30		
Cooling capacity (range)	(kW)	3.70 - 11.5		
COP	-	4.90		
Electrical characteristics	Power supply	220-240V., 50Hz.		
	Power consumption	(W)	1695	
	Running current	(A)	8.20/7.85/7.55	
	Power factor	(%)	94	
	Starting current	(A)	8.20	
Outdoor unit operating noise	Sound pressure level	(dBA)	53	
	Sound power level	(dBA)	66	
Characteristic and component parts spec.	Compressor	Model	-	DX270A2T-20L
		Type	-	Twin rotary with DC-inverter variable speed control
		Output	(W)	2200
	Fan motor	Model	-	WDF-340-A100-1
		Type	-	DC motor with variable speed control circuit
		Output	(W)	100W
	Airflow rate	(m ³ /h)	4460	
	Refrigerant	Type	-	R32
		Weight charging	(kg.)	2.35
	Unit dimension	Height	(mm.)	890
		Width	(mm.)	900
		Depth	(mm.)	320
	Net weight	(kg.)	74	
Piping connection	Connecting method	-	Flare connection	
	Diameter	Unit A (liquid / gas side)	(mm.)	6.35 / 12.7
		Unit B (liquid / gas side)	(mm.)	6.35 / 12.7
		Unit C (liquid / gas side)	(mm.)	6.35 / 9.52
		Unit D (liquid / gas side)	(mm.)	6.35 / 9.52
		Unit E (liquid / gas side)	(mm.)	6.35 / 9.52
	Maximum length (each unit)	(mm.)	20	
	Maximum length (total)	(mm.)	30	
	Maximum length (chargless)	(mm.)	30	
	Maximum height different	(mm.)	10	
Wiring connection	Main power supply	-	3wires included earth	
	Inter connection (each room)	-	4wires included earth	
Usable temperature range (outside)	(°C)	10 - 46 °C		
Outdoor unit accessory	-	-		

- * Performance specification with others Indoor unit combine are refer to combination table.
- * The specifications may be subject to change without notice for purpose of improvement.

2-2. Performance with single and maximum Indoor unit combination

Outdoor unit : RAS-5M51U2ACVG-SG

Operation mode : Cooling

Current limit : none

220V

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER Rated
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.85	4.15	4.25	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.75	5.95	7.15	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.70	7.30	8.00	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.8	625	2000	2490	3.65	9.70	11.80	3.00
	26	-	-	-	-	7.10	-	-	-	-	2.4	7.1	7.2	625	2370	2465	3.65	11.35	11.65	3.00
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1695	3165	4.10	8.20	15.00	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	11.5	725	1695	3160	4.10	8.20	14.95	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	4.10	8.15	14.95	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	11.5	725	1690	3150	4.10	8.15	14.90	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	11.5	725	1685	3145	4.10	8.15	14.90	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	4.10	8.15	14.95	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	11.5	725	1690	3150	4.10	8.15	14.90	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	11.5	725	1685	3145	4.10	8.15	14.90	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	11.5	725	1685	3140	4.10	8.15	14.90	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	11.5	725	1690	3155	4.10	8.15	15.00	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	11.5	725	1690	3150	4.10	8.15	14.95	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	11.5	725	1685	3140	4.10	8.15	14.90	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	11.5	725	1685	3140	4.10	8.15	14.90	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	11.5	725	1690	3150	4.10	8.15	14.95	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	11.5	725	1685	3145	4.10	8.15	14.95	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	11.5	725	1685	3135	4.10	8.10	14.85	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	11.5	725	1680	3135	4.10	8.10	14.85	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1690	3150	4.10	8.15	14.90	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	11.5	725	1685	3140	4.10	8.15	14.85	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	11.5	725	1680	3135	4.10	8.10	14.85	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	11.5	725	1680	3135	4.10	8.10	14.85	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	11.5	725	1680	3135	4.10	8.10	14.85	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	11.5	725	1680	3135	4.10	8.10	14.85	4.94

230V

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER Rated
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.70	3.95	4.05	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.75	5.70	6.80	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.55	7.00	7.65	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.8	625	2000	2490	3.50	9.30	11.30	3.00
	26	-	-	-	-	7.10	-	-	-	-	2.4	7.1	7.2	625	2370	2465	3.50	10.85	11.15	3.00
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1695	3165	3.95	7.85	14.35	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	11.5	725	1695	3160	3.95	7.85	14.30	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	3.95	7.80	14.30	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	11.5	725	1690	3150	3.95	7.80	14.25	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	11.5	725	1685	3145	3.95	7.80	14.25	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	3.95	7.80	14.30	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	11.5	725	1690	3150	3.95	7.80	14.25	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	11.5	725	1685	3145	3.95	7.80	14.25	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	11.5	725	1685	3140	3.95	7.80	14.25	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	11.5	725	1690	3155	3.95	7.80	14.35	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	11.5	725	1690	3150	3.95	7.80	14.30	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	11.5	725	1685	3140	3.95	7.80	14.25	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	11.5	725	1685	3140	3.95	7.80	14.25	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	11.5	725	1690	3150	3.95	7.80	14.30	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	11.5	725	1685	3145	3.95	7.80	14.30	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	11.5	725	1685	3135	3.95	7.75	14.20	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	11.5	725	1680	3135	3.95	7.80	14.20	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1690	3150	3.95	7.80	14.25	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	11.5	725	1685	3140	3.95	7.80	14.20	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	11.5	725	1680	3135	3.95	7.75	14.20	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	11.5	725	1680	3135	3.95	7.75	14.20	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	11.5	725	1680	3135	3.95	7.75	14.20	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	11.5	725	1680	3135	3.95	7.75	14.20	4.94

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.55	3.80	3.85	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.44	5.45	6.55	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.40	6.70	7.30	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.8	625	2000	2490	3.35	8.90	10.85	3.00
	26	-	-	-	-	7.10	-	-	-	-	2.4	7.1	7.2	625	2370	2465	3.35	10.40	10.70	3.00
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1695	3165	3.80	7.55	13.75	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	11.5	725	1695	3160	3.80	7.55	13.70	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	3.80	7.50	13.70	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	11.5	725	1690	3150	3.80	7.45	13.65	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	11.5	725	1685	3145	3.80	7.50	13.65	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	11.5	725	1690	3155	3.80	7.50	13.70	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	11.5	725	1690	3150	3.80	7.50	13.65	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	11.5	725	1685	3145	3.80	7.50	13.65	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	11.5	725	1685	3140	3.80	7.50	13.65	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	11.5	725	1690	3155	3.80	7.50	13.75	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	11.5	725	1690	3150	3.80	7.50	13.70	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	11.5	725	1685	3140	3.80	7.50	13.65	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	11.5	725	1685	3140	3.80	7.50	13.65	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	11.5	725	1690	3150	3.80	7.50	13.70	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	11.5	725	1685	3145	3.80	7.50	13.70	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	11.5	725	1685	3135	3.80	7.45	13.60	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	11.5	725	1680	3135	3.80	7.45	13.60	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	11.5	725	1690	3150	3.80	7.50	13.65	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	11.5	725	1685	3140	3.80	7.50	13.60	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	11.5	725	1680	3135	3.80	7.45	13.60	4.94
18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	11.5	725	1680	3135	3.80	7.45	13.60	4.94	
24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	11.5	725	1680	3135	3.80	7.45	13.60	4.94	
26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	11.5	725	1680	3135	3.80	7.45	13.60	4.94	

• The above specification values are those under the conditions that the indoor DB/WB=27/19°C and the outdoor DB/WB=35/-°C.

Outdoor unit : RAS-5M51U2ACVG-SG

Operation mode : Cooling

Current limit : 11.0A

220V

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.85	4.15	4.25	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.75	5.95	7.15	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.70	7.30	8.00	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.6	625	2000	2325	3.65	9.70	11.00	3.00
5 units	26	-	-	-	-	6.90	-	-	-	-	2.4	6.9	6.9	625	2305	2305	3.65	11.00	11.00	2.99
	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	9.6	725	1695	2290	4.10	8.20	11.00	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	9.6	725	1695	2290	4.10	8.20	11.00	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	9.6	725	1690	2290	4.10	8.00	11.00	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	9.6	725	1685	2290	4.10	8.10	11.00	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	9.6	725	1680	2290	4.10	8.10	11.00	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	9.6	725	1690	2290	4.10	8.15	11.00	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	9.6	725	1685	2290	4.10	8.15	11.00	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	9.6	725	1680	2290	4.10	8.10	11.00	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	9.6	725	1680	2290	4.10	8.10	11.00	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	9.6	725	1680	2290	4.10	8.10	11.00	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	9.6	725	1680	2290	4.10	8.10	11.00	4.94

230V

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.70	3.95	4.05	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.59	5.70	6.80	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.55	7.00	7.65	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.7	625	2000	2430	3.50	9.30	11.00	3.00
5 units	26	-	-	-	-	7.10	-	-	-	-	2.4	7.1	7.15	625	2370	2420	3.50	10.85	10.95	3.00
	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	9.9	725	1695	2410	3.95	7.85	11.00	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	9.9	725	1695	2410	3.95	7.85	11.00	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	9.9	725	1685	2410	3.95	7.75	11.00	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	9.9	725	1680	2410	3.95	7.80	11.00	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	9.9	725	1690	2410	3.95	7.80	11.00	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	9.9	725	1685	2410	3.95	7.80	11.00	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	9.9	725	1680	2410	3.95	7.75	11.00	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	9.9	725	1680	2410	3.95	7.75	11.00	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	9.9	725	1680	2410	3.95	7.75	11.00	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	9.9	725	1680	2410	3.95	7.75	11.00	4.94

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.55	3.80	3.85	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.44	5.45	6.55	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.40	6.70	7.30	3.05
	24	-	-	-	-	6.00	-	-	-	-	2.4	6.0	6.8	625	2000	2490	3.35	8.90	10.85	3.00
	26	-	-	-	-	7.10	-	-	-	-	2.4	7.1	7.2	625	2370	2465	3.35	10.40	10.70	3.00
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	10.2	725	1695	2520	3.80	7.55	11.00	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	10.2	725	1695	2520	3.80	7.55	11.00	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	10.2	725	1690	2520	3.80	7.45	11.00	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	10.2	725	1685	2520	3.80	7.45	11.00	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	10.2	725	1680	2520	3.80	7.45	11.00	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	10.2	725	1690	2520	3.80	7.50	11.00	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	10.2	725	1685	2520	3.80	7.50	11.00	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	10.2	725	1680	2520	3.80	7.45	11.00	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	10.2	725	1680	2520	3.80	7.45	11.00	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	10.2	725	1680	2520	3.80	7.45	11.00	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	10.2	725	1680	2520	3.80	7.45	11.00	4.94

• The above specification values are those under the conditions that the indoor DB/WB=27/19°C and the outdoor DB/WB=35/-°C.

Outdoor unit : RAS-5M51U2ACVG-SG

Operation mode : Cooling

Current limit : 8.5A

220V

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.85	4.15	4.25	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.75	5.95	7.15	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.70	7.30	8.00	3.05
	24	-	-	-	-	5.20	-	-	-	-	2.4	5.2	5.2	625	1690	1690	3.65	8.50	8.50	3.08
	26	-	-	-	-	5.30	-	-	-	-	2.4	5.3	5.3	625	1650	1740	3.65	8.40	8.50	3.21
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.5	725	1695	1765	4.10	8.20	8.50	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	8.5	725	1695	1765	4.10	8.20	8.50	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	8.5	725	1690	1765	4.10	8.00	8.50	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	8.5	725	1685	1765	4.10	8.10	8.50	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	8.5	725	1680	1765	4.10	8.10	8.50	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.5	725	1690	1765	4.10	8.15	8.50	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	8.5	725	1685	1765	4.10	8.15	8.50	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	8.5	725	1680	1765	4.10	8.10	8.50	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	8.5	725	1680	1765	4.10	8.10	8.50	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	8.5	725	1680	1765	4.10	8.10	8.50	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	8.5	725	1680	1765	4.10	8.10	8.50	4.94

230V

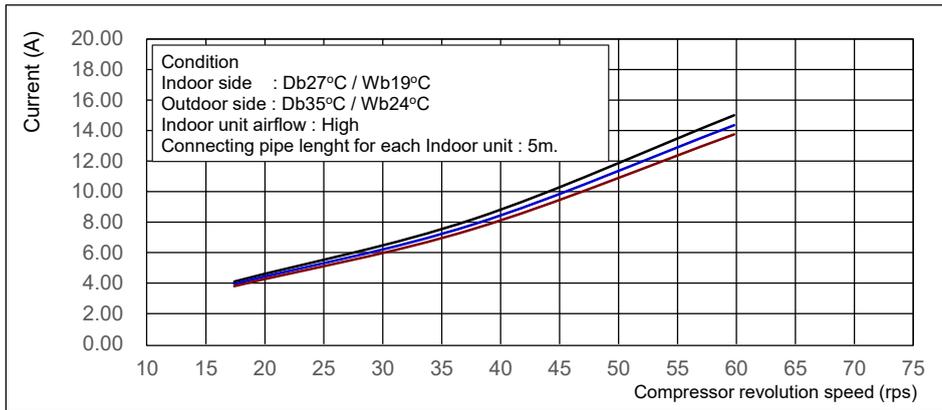
Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.70	3.95	4.05	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.59	5.70	6.80	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.55	7.00	7.65	3.05
	24	-	-	-	-	5.40	-	-	-	-	2.4	5.4	5.4	625	1790	1790	3.50	8.50	8.50	3.02
	26	-	-	-	-	5.60	-	-	-	-	2.4	5.6	5.6	625	1760	1820	3.50	8.50	8.50	3.18
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.6	725	1695	1845	3.95	7.85	8.50	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	8.6	725	1695	1845	3.95	7.85	8.50	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	8.6	725	1685	1845	3.95	7.75	8.50	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	8.6	725	1680	1845	3.95	7.80	8.50	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.6	725	1690	1845	3.95	7.80	8.50	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	8.6	725	1685	1845	3.95	7.80	8.50	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	8.6	725	1680	1845	3.95	7.75	8.50	4.94
	18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	8.6	725	1680	1845	3.95	7.75	8.50	4.94
	24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	8.6	725	1680	1845	3.95	7.75	8.50	4.94
	26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	8.6	725	1680	1845	3.95	7.75	8.50	4.94

Operating status	Indoor unit					Unit capacity (kW)					Total									
											Cooling capacity (kW)			Power consumption (W)			Operating current (A)			EER
	A	B	C	D	E	A	B	C	D	E	Min	Rated	Max.	Min	Rated	Max.	Min	Rated	Max.	Rated
1 unit	10	-	-	-	-	2.70	-	-	-	-	1.4	2.7	3.2	630	730	780	3.55	3.80	3.85	3.70
	13	-	-	-	-	3.70	-	-	-	-	1.4	3.7	4.4	630	1180	1470	3.44	5.45	6.55	3.14
	18	-	-	-	-	4.50	-	-	-	-	1.4	4.5	5.0	630	1475	1665	3.40	6.70	7.30	3.05
	24	-	-	-	-	5.50	-	-	-	-	2.4	5.5	5.8	625	1880	1890	3.35	8.45	8.50	2.93
26	-	-	-	-	5.80	-	-	-	-	2.4	5.8	5.8	625	1910	1910	3.35	8.50	8.50	3.04	
5 units	10	10	10	10	10	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.8	725	1695	1920	3.80	7.55	8.50	4.90
	13	10	10	10	10	2.02	1.57	1.57	1.57	1.57	3.7	8.3	8.8	725	1695	1920	3.80	7.55	8.50	4.90
	18	10	10	10	10	2.38	1.48	1.48	1.48	1.48	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	24	10	10	10	10	2.94	1.34	1.34	1.34	1.34	3.7	8.3	8.8	725	1690	1920	3.80	7.45	8.50	4.91
	26	10	10	10	10	3.10	1.30	1.30	1.30	1.30	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	13	13	10	10	10	1.93	1.93	1.48	1.48	1.48	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	18	13	10	10	10	2.24	1.83	1.41	1.41	1.41	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	24	13	10	10	10	2.80	1.66	1.28	1.28	1.28	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	26	13	10	10	10	2.97	1.61	1.24	1.24	1.24	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	13	13	13	10	10	1.82	1.82	1.82	1.42	1.42	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	18	13	13	10	10	2.14	1.74	1.74	1.34	1.34	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	24	13	13	10	10	2.68	1.59	1.59	1.22	1.22	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	26	13	13	10	10	2.86	1.53	1.53	1.19	1.19	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	13	13	13	13	10	1.74	1.74	1.74	1.74	1.34	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	18	13	13	13	10	2.04	1.66	1.66	1.66	1.28	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	24	13	13	13	10	2.57	1.52	1.52	1.52	1.17	3.7	8.3	8.8	725	1685	1920	3.80	7.45	8.50	4.93
	26	13	13	13	10	2.72	1.48	1.48	1.48	1.14	3.7	8.3	8.8	725	1680	1920	3.80	7.45	8.50	4.94
	13	13	13	13	13	1.66	1.66	1.66	1.66	1.66	3.7	8.3	8.8	725	1690	1920	3.80	7.50	8.50	4.91
	18	13	13	13	13	1.94	1.59	1.59	1.59	1.59	3.7	8.3	8.8	725	1685	1920	3.80	7.50	8.50	4.93
	18	18	13	13	13	1.87	1.87	1.52	1.52	1.52	3.7	8.3	8.8	725	1680	1920	3.80	7.45	8.50	4.94
18	18	18	10	10	1.84	1.94	1.94	1.24	1.24	3.7	8.3	8.8	725	1680	1920	3.80	7.45	8.50	4.94	
24	18	13	10	10	2.57	1.87	1.52	1.17	1.17	3.7	8.3	8.8	725	1680	1920	3.80	7.45	8.50	4.94	
26	18	10	10	10	2.84	1.89	1.19	1.19	1.19	3.7	8.3	8.8	725	1680	1920	3.80	7.45	8.50	4.94	

• The above specification values are those under the conditions that the indoor DB/WB=27/19°C and the outdoor DB/WB=35/-°C.


2-2-1. Operation Characteristic Curve

<Cooling>




2-2-2. Capacity Variation Ratio According to Outdoor Temperature
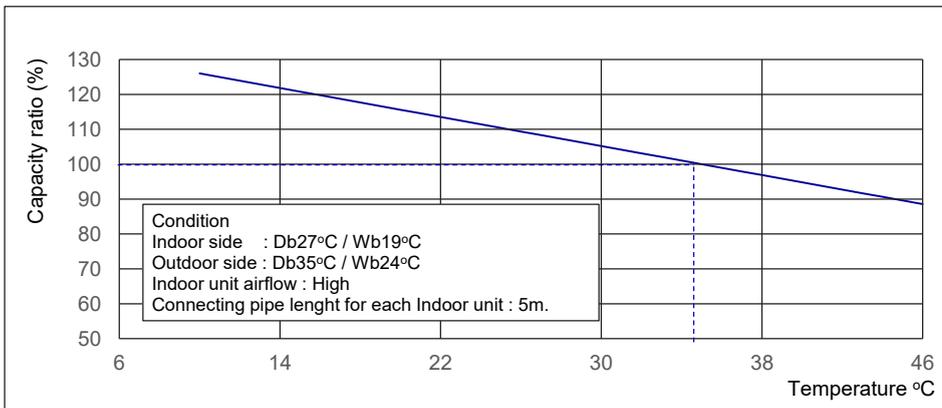
<Cooling>



2-2-3. Capacity Variation Ratio according to Pipe Length
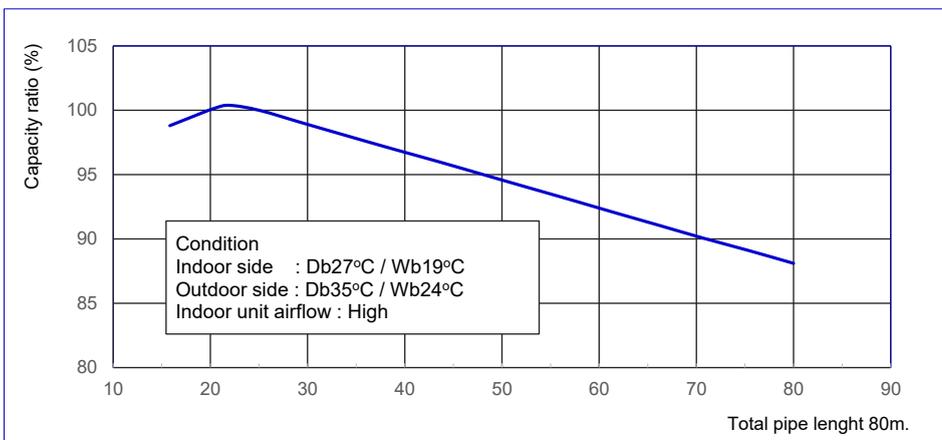
<Cooling>



3. REFRIGERANT R32

This air conditioner adopts the new refrigerant HFC (R32) which does not damage the ozone layer.

The next section describes the precautions for air conditioner using the new refrigerant. Conforming to contents of the next section together with the general cautions included in this manual, perform the correct and safe work.

3-1. Safety During Installation/Service

The basic installation servicing work procedures are the same as conventional R410A models.

As R32's pressure is about 1.6 times higher than that of R22, improper installation/servicing may cause a serious trouble. By using tools and materials exclusive for R32, it is necessary to carry out installation/servicing safely while taking the following precautions into consideration.

1. Never use refrigerant other than R32 in an air conditioner which is designed to operate with R32. If other refrigerant than R32 is mixed, pressure in the refrigeration cycle becomes abnormally high, and it may cause personal injury, etc. by a rupture.
2. Confirm the used refrigerant name, and use tools and materials exclusive for the refrigerant.
The refrigerant name R32 is indicated on the visible place of the outdoor unit of the air conditioner using R32 as refrigerant. To prevent mischarging, the diameter of the service port differs from that of R22. R32 and other HFCs are heavier than air, and therefore they are inclined to settle near the floor surface.
If the gas fills up the room or the bottom part of a room, it may also cause oxygen deficiency and may reach its combustion concentration.
In order to prevent oxygen deficiency and R32 combustion, keep the room well-ventilated for a healthy work environment.
In particular, using HFCs in a basement room or confined area creates a higher risk; be sure to furnish the room with local exhaust ventilation. If a refrigerant leak is confirmed in a room an inadequately ventilated location, do not use a flame until the area has been ventilated appropriately and the work environment has been improved.
The same applies in case of brazing, ensure appropriate ventilation to prevent oxygen deficiency and R32 combustion.
Check that there are no dangerous or combustible items nearby, and ensure a fire extinguisher is close at hand.
Keep a sufficient distance away from causes of fire (ignition sources) such as gas-burning equipment and electric heaters in places where installation, repairs, or similar work on air-conditioning equipment is performed.
3. If a refrigeration gas leakage occurs during installation/servicing, be sure to ventilate fully. If the refrigerant gas comes into contact with fire, a poisonous gas may occur.
4. When installing or removing an air conditioner, do not allow air moisture dust or oil to remain in the refrigeration cycle. Otherwise, pressure in the refrigeration cycle may become abnormally high so that a rupture or personal injury may be caused.
5. After completion of installation work, check to make sure that there is no refrigeration gas leakage. If the refrigerant gas leaks into the room, coming into contact with fire in the fan-driven heater, space heater, etc., a poisonous gas may occur
6. When an air conditioning system charged with a large volume of refrigerant is installed in a small room, it is necessary to exercise care so that, even when refrigerant leaks, its concentration does not exceed the marginal level.
If the refrigerant gas leakage occurs and its concentration exceeds the marginal level, an oxygen starvation accident may result.
7. Be sure to carry out installation or removal according to the installation manual. Improper installation may cause refrigeration trouble, water leakage, electric shock, fire, etc.
8. Unauthorized modifications to the air conditioner may be dangerous. If a breakdown occurs please call a qualified air conditioner technician or electrician.
Improper repair's may result in water leakage, electric shock and fire, etc.

3-2. Refrigerant Piping Installation

3-2-1. Piping Materials and Joints Used

For the refrigerant piping installation, copper pipes and joints are mainly used. Copper pipes and joints suitable for the refrigerant must be chosen and installed. Furthermore, it is necessary to use clean copper pipes and joints whose interior surfaces are less affected by contaminants.

1. Copper Pipes

It is necessary to use seamless copper pipes which are made of either copper or copper alloy and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface).

Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an air conditioner using R32 incurs pressure higher than when using R22, it is necessary to choose adequate materials.

Thicknesses of copper pipes used with R32 are as shown in Table 3-2-1. Never use copper pipes thinner than 0.8 mm even when it is available on the market.

Table 3-2-1 Thicknesses of annealed copper pipes

		Thickness (mm)	
Nominal diameter	Outer diameter (mm)	R32(R410A)	R22
1/4	6.35	0.80	0.80
3/8	9.52	0.80	0.80
1/2	12.70	0.80	0.80
5/8	15.88	1.00	1.00

2. Joints

For copper pipes, flare joints or socket joints are used. Prior to use, be sure to remove all contaminants.

a) Flare Joints

Flare joints used to connect the copper pipes cannot be used for pipings whose outer diameter exceeds 20 mm. In such a case, socket joints can be used.

Sizes of flare pipe ends, flare joint ends and flare nuts are as shown in Tables 3-2-3 to 3-2-6 below.

b) Socket Joints

Socket joints are such that they are brazed for connections, and used mainly for thick pipings whose diameter is larger than 20 mm.

Thicknesses of socket joints are as shown in Table 3-2-2.

Table 3-2-2 Minimum thicknesses of socket joints

Nominal diameter	Reference outer diameter of copper pipe jointed (mm)	Minimum joint thickness (mm)
1/4	6.35	0.50
3/8	9.52	0.60
1/2	12.70	0.70
5/8	15.88	0.80

3-2-2. Processing of Piping Materials

When performing the refrigerant piping installation, care should be taken to ensure that water or dust does not enter the pipe interior, that no other oil than lubricating oils used in the installed air-water heat pump is used, and that refrigerant does not leak. When using lubricating oils in the piping processing, use such lubricating oils whose water content has been removed. When stored, be sure to seal the container with an airtight cap or any other cover.

1. Flare processing procedures and precautions

a) Cutting the Pipe

By means of a pipe cutter, slowly cut the pipe so that it is not deformed.

b) Removing Burrs and Chips

If the flared section has chips or burrs, refrigerant leakage may occur.

Carefully remove all burrs and clean the cut surface before installation.

c) Insertion of Flare Nut

d) Flare Processing

Make certain that a clamp bar and copper pipe have been cleaned.

By means of the clamp bar, perform the flare processing correctly.

Use either a flare tool for R32 or conventional flare tool.

Flare processing dimensions differ according to the type of flare tool. When using a conventional flare tool, be sure to secure "dimension A" by using a gauge for size adjustment.

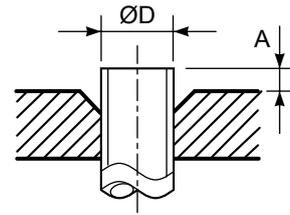


Fig. 3-2-1 Flare processing dimensions

Table 3-2-3 Dimensions related to flare processing for R32(R410A)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	A (mm)		
			Flare tool for R32 clutch type	Conventional flare tool	
				Clutch type	Wing nut type
1/4	6.35	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0
3/8	9.52	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0
1/2	12.70	0.8	0 to 0.5	1.0 to 1.5	2.0 to 2.5
5/8	15.88	1.0	0 to 0.5	1.0 to 1.5	2.0 to 2.5

Table 3-2-4 Dimensions related to flare processing for R22

Nominal diameter	Outer diameter (mm)	Thickness (mm)	A (mm)		
			Flare tool for R22 clutch type	Conventional flare tool	
				Clutch type	Wing nut type
1/4	6.35	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
3/8	9.52	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
1/2	12.70	0.8	0 to 0.5	0.5 to 1.0	1.5 to 2.0
5/8	15.88	1.0	0 to 0.5	0.5 to 1.0	1.5 to 2.0

Table 3-2-5 Flare and flare nut dimensions for R32(R410A)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Dimension (mm)				Flare nut width (mm)
			A	B	C	D	
1/4	6.35	0.8	9.1	9.2	6.5	13	17
3/8	9.52	0.8	13.2	13.5	9.7	20	22
1/2	12.70	0.8	16.6	16.0	12.9	23	26
5/8	15.88	1.0	19.7	19.0	16.0	25	29

Table 3-2-6 Flare and flare nut dimensions for R22

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Dimension (mm)				Flare nut width (mm)
			A	B	C	D	
1/4	6.35	0.8	9.0	9.2	6.5	13	17
3/8	9.52	0.8	13.0	13.5	9.7	20	22
1/2	12.70	0.8	16.2	16.0	12.9	20	24
5/8	15.88	1.0	19.7	19.0	16.0	23	27
3/4	19.05	1.0	23.3	24.0	19.2	34	36

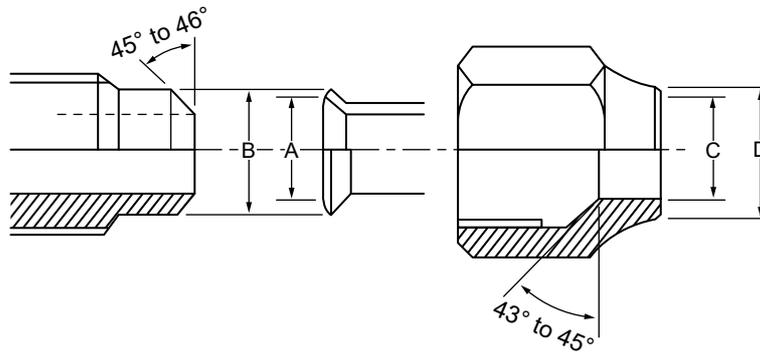


Fig. 3-2-2 Relations between flare nut and flare seal surface

2. Flare Connecting Procedures and Precautions

- Make sure that the flare and union portions do not have any scar or dust, etc.
- Correctly align the processed flare surface with the union axis.
- Tighten the flare with designated torque by means of a torque wrench. The tightening torque for R32 is the same as that for conventional R22. Incidentally, when the torque is weak, the gas leakage may occur. When it is strong, the flare nut may crack and may be made non-removable. When choosing the tightening torque, comply with values designated by manufacturers. Table 3-2-7 shows reference values.

NOTE :

When applying oil to the flare surface, be sure to use oil designated by the manufacturer. If any other oil is used, the lubricating oils may deteriorate and cause the compressor to burn out.

Table 3-2-7 Tightening torque of flare for R32(R410A) [Reference values]

Nominal diameter	Outer diameter (mm)	Tightening torque N•m (kgf•cm)	Tightening torque of torque wrenches available on the market N•m (kgf•cm)
1/4	6.35	14 to 18 (140 to 180)	16 (160), 18 (180)
3/8	9.52	33 to 42 (330 to 420)	42 (420)
1/2	12.70	50 to 62 (500 to 620)	55 (550)
5/8	15.88	63 to 77 (630 to 770)	65 (650)

3-3. Tools

3-3-1. Required Tools

The service port diameter of packed valve of the outdoor unit in the air-water heat pump using R32 is changed to prevent mixing of other refrigerant. To reinforce the pressure-resisting strength, flare processing dimensions and opposite side dimension of flare nut (For Ø12.7 copper pipe) of the refrigerant piping are lengthened.

The used refrigerating oil is changed, and mixing of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

1. Tools exclusive for R32 (Those which cannot be used for conventional refrigerant (R22))
2. Tools exclusive for R32, but can be also used for conventional refrigerant (R22)
3. Tools commonly used for R32 and for conventional refrigerant (R22)

The table below shows the tools exclusive for R32 and their interchangeability.

Tools exclusive for R32 (The following tools for R410A are required.)

Tools whose specifications are changed for R32 and their interchangeability

No.	Used tool	Usage	R32(R410A) air-water heat pump installation		Conventional air-water heat pump installation
			Existence of new equipment for R32	Whether conven- tional equipment can be used	Whether new equipment can be used with conventional refrigerant
1	Flare tool	Pipe flaring	Yes	*(Note 1)	○
2	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
3	Torque wrench (For Ø12.7)	Connection of flare nut	Yes	✕	✕
4	Gauge manifold	Evacuating, refrigerant charge, run check, etc.	Yes	✕	✕
5	Charge hose				
6	Vacuum pump adapter	Vacuum evacuating	Yes	✕	○
7	Electronic balance for refrigerant charging	Refrigerant charge	Yes	✕	○
8	Leakage detector	Gas leakage check	Yes	✕	○

(Note 1) When flaring is carried out for R32(R410A) using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.


- | | | |
|--|-----------------------------|---|
| 1. Vacuum pump
Use vacuum pump by attaching
vacuum pump adapter. | 4. Reamer | 9. Hole core drill (Ø65) |
| 2. Torque wrench (For Ø6.35, Ø9.52) | 5. Pipe bender | 10. Hexagon wrench
(Opposite side 4mm) |
| 3. Pipe cutter | 6. Level vial | 11. Tape measure |
| | 7. Screwdriver (+, -) | 12. Metal saw |
| | 8. Spanner or Monkey wrench | |

Also prepare the following equipments for other installation method and run check.

- | | |
|----------------|---------------------------------|
| 1. Clamp meter | 3. Insulation resistance tester |
| 2. Thermometer | 4. Electroscop |

3-4. Recharging of Refrigerant

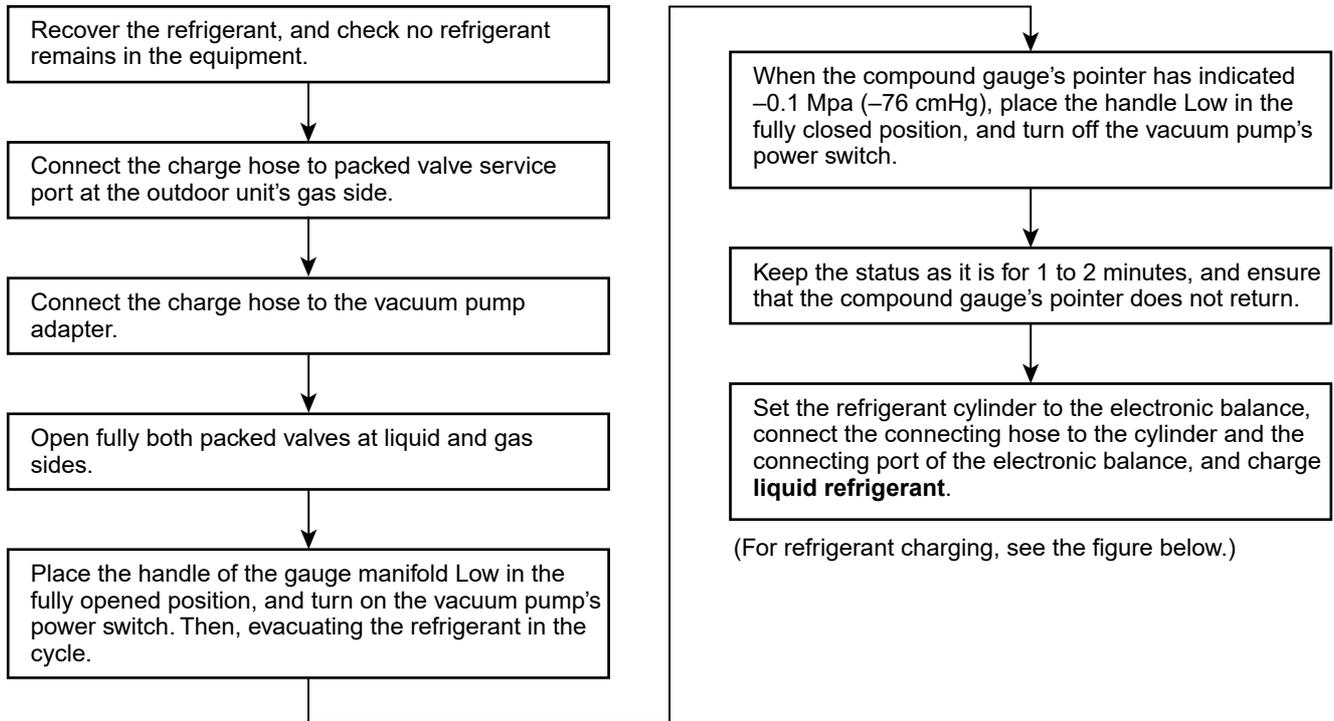When it is necessary to recharge refrigerant, charge the specified amount of new refrigerant according to the following steps.



1. Never charge refrigerant exceeding the specified amount.
2. If the specified amount of refrigerant cannot be charged, charge refrigerant **bit by bit** in COOL mode.
3. Do not carry out additional charging.

When additional charging is carried out if refrigerant leaks, the refrigerant composition changes in the refrigeration cycle, that is characteristics of the air conditioner changes, refrigerant exceeding the specified amount is charged, and working pressure in the refrigeration cycle becomes abnormally high pressure, and may cause a rupture or personal injury.

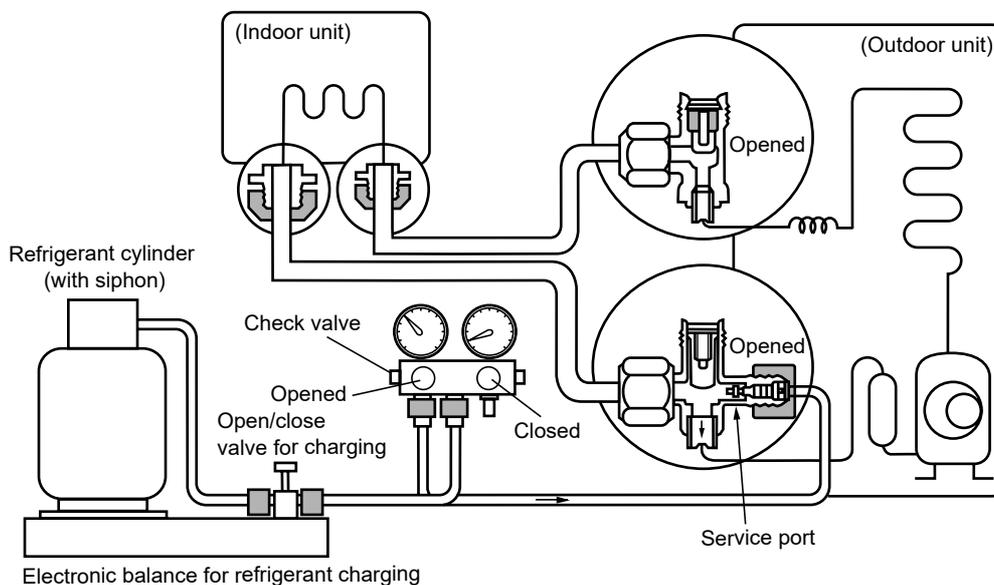


Fig. 3-4-1 Configuration of refrigerant charging

1. Be sure to make setting so that **liquid** can be charged.
2. When using a cylinder equipped with a siphon, liquid can be charged without turning it upside down.

Accordingly, when charging refrigerant from the refrigerant cylinder to the equipment, charge it turning the cylinder upside down if cylinder is not equipped with siphon.

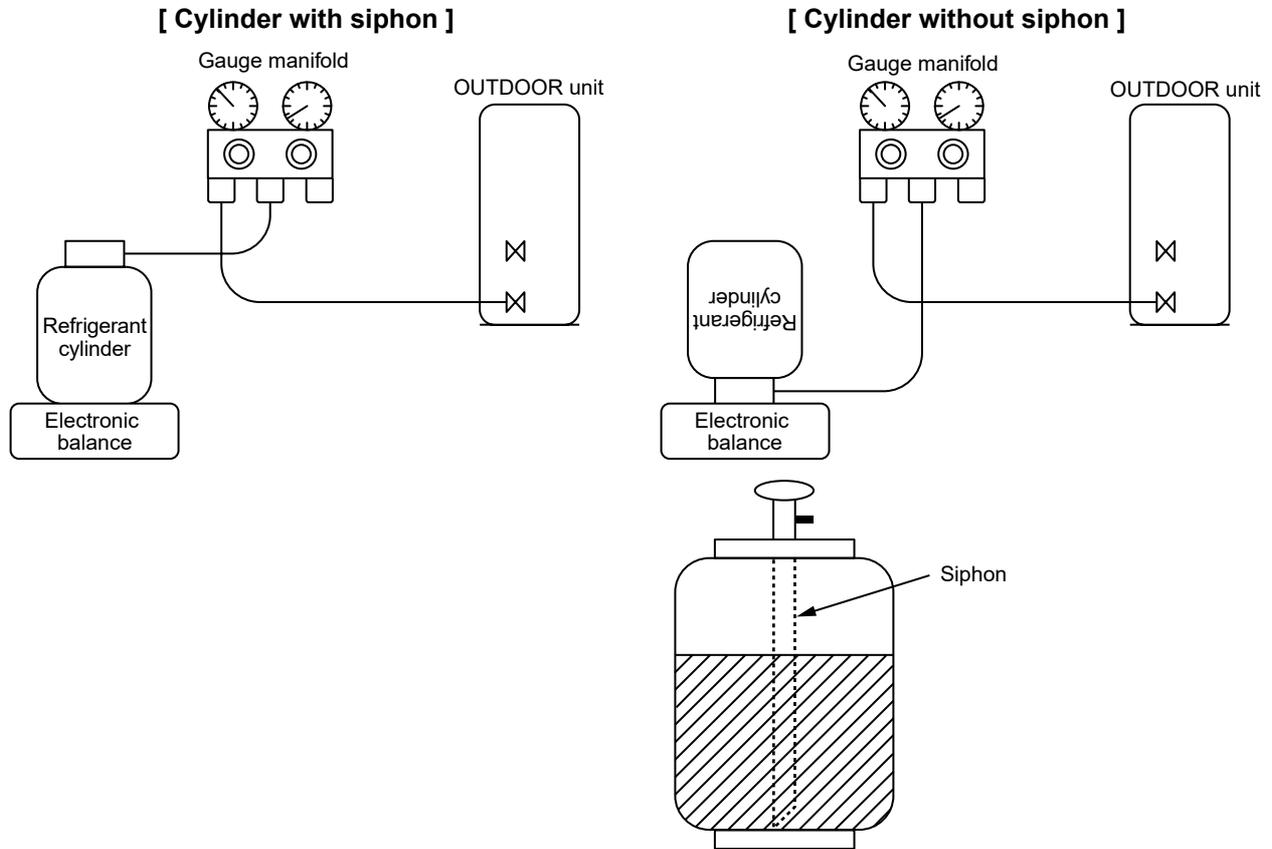


Fig. 3-4-2

3-5. Brazing of Pipes

3-5-1. Materials for Brazing

1. Silver brazing filler

Silver brazing filler is an alloy mainly composed of silver and copper. It is used to join iron, copper or copper alloy, and is relatively expensive though it excels in solderability.

2. Phosphor bronze brazing filler

Phosphor bronze brazing filler is generally used to join copper or copper alloy.

3. Low temperature brazing filler

Low temperature brazing filler is generally called solder, and is an alloy of tin and lead. Since it is weak in adhesive strength, do not use it for refrigerant pipes.

1. Phosphor bronze brazing filler tends to react with sulfur and produce a fragile compound water solution, which may cause a gas leakage. Therefore, use any other type of brazing filler at a hot spring resort, etc., and coat the surface with a paint.
2. When performing brazing again at time of servicing, use the same type of brazing filler.

3-5-2. Flux

1. Reason why flux is necessary

- By removing the oxide film and any foreign matter on the metal surface, it assists the flow of brazing filler.
- In the brazing process, it prevents the metal surface from being oxidized.
- By reducing the brazing filler's surface tension, the brazing filler adheres better to the treated metal.

2. Characteristics required for flux

- Activated temperature of flux coincides with the brazing temperature.
- Due to a wide effective temperature range, flux is hard to carbonize.
- It is easy to remove slag after brazing.
- The corrosive action to the treated metal and brazing filler is minimum.
- It excels in coating performance and is harmless to the human body.

As the flux works in a complicated manner as described above, it is necessary to select an adequate type of flux according to the type and shape of treated metal, type of brazing filler and brazing method, etc.

3. Types of flux

• Noncorrosive flux

Generally, it is a compound of borax and boric acid.

It is effective in case where the brazing temperature is higher than 800°C.

• Activated flux

Most of fluxes generally used for silver brazing are this type.

It features an increased oxide film removing capability due to the addition of compounds such as potassium fluoride, potassium chloride and sodium fluoride to the borax-boric acid compound.

4. Piping materials for brazing and used brazing filler/flux

Piping material	Used brazing filler	Used flux
Copper - Copper	Phosphor copper	Do not use
Copper - Iron	Silver	Paste flux
Iron - Iron	Silver	Vapor flux

1. Do not enter flux into the refrigeration cycle.
2. When chlorine contained in the flux remains within the pipe, the lubricating oil deteriorates. Therefore, use a flux which does not contain chlorine.
3. When adding water to the flux, use water which does not contain chlorine (e.g. distilled water or ion-exchange water).
4. Remove the flux after brazing.

3-5-3. Brazing

As brazing work requires sophisticated techniques, experiences based upon a theoretical knowledge, it must be performed by a person qualified.

In order to prevent the oxide film from occurring in the pipe interior during brazing, it is effective to proceed with brazing while letting dry Nitrogen gas (N₂) flow.

Never use gas other than Nitrogen gas.

1. Brazing method to prevent oxidation

- 1) Attach a reducing valve and a flow-meter to the Nitrogen gas cylinder.
- 2) Use a copper pipe to direct the piping material, and attach a flow-meter to the cylinder.
- 3) Apply a seal onto the clearance between the piping material and inserted copper pipe for Nitrogen in order to prevent backflow of the Nitrogen gas.
- 4) When the Nitrogen gas is flowing, be sure to keep the piping end open.
- 5) Adjust the flow rate of Nitrogen gas so that it is lower than 0.05 m³/Hr or 0.02 MPa (0.2kgf/cm²) by means of the reducing valve.
- 6) After performing the steps above, keep the Nitrogen gas flowing until the pipe cools down to a certain extent (temperature at which pipes are touchable with hands).
- 7) Remove the flux completely after brazing.


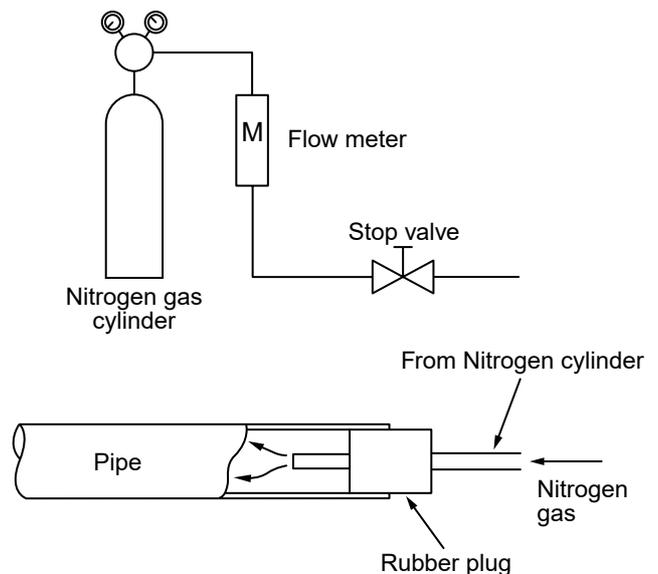


Fig. 3-5-1 Prevention of oxidation during brazing


4. CONSTRUCTION VIEWS

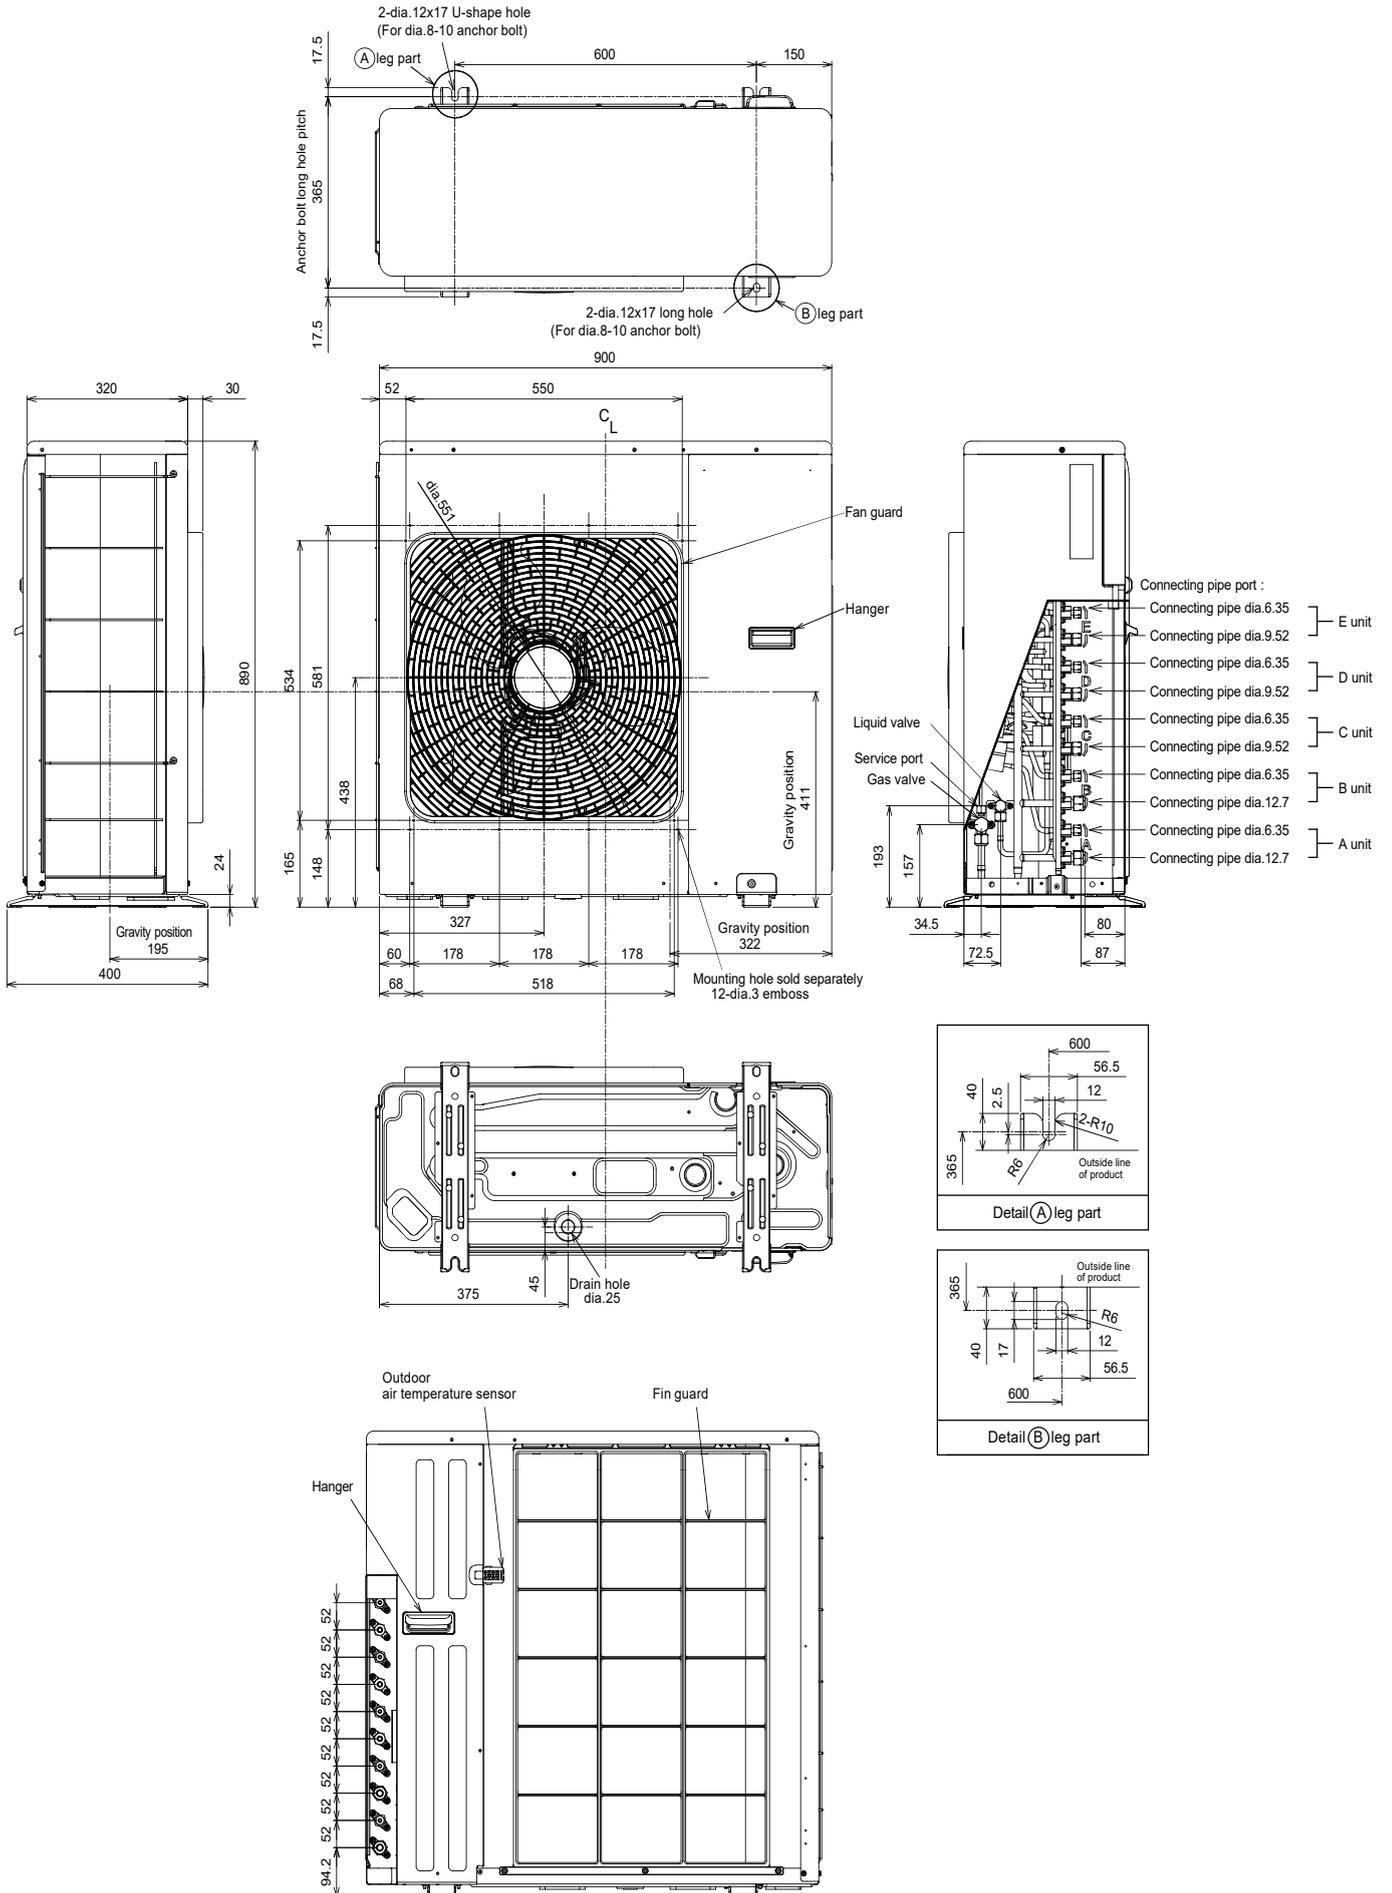Outdoor Unit



5. WIRING DIAGRAM

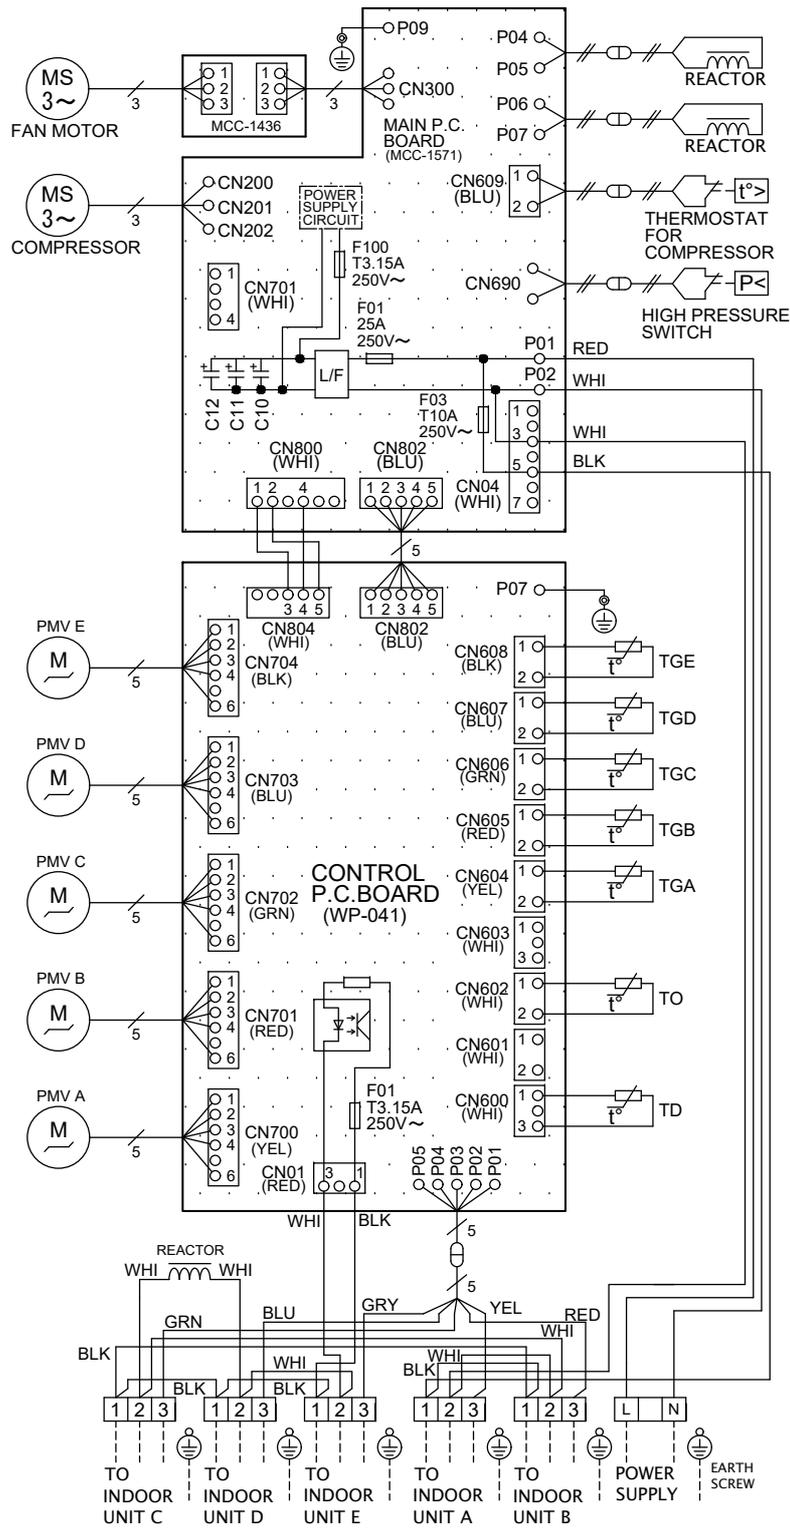Outdoor Unit



WIRING DIAGRAM

TERMINAL OF COMPRESSOR
WHITE(S) BLACK(C)

THE SIGN () IS DISPLAYED IN THE TERMINAL COVER.

Symbol	Part name
PMV	PULSE MOTOR VALVE
TD	DISCHARGE PIPE TEMP. SENSOR
TO	OUTDOOR TEMP. SENSOR
TGA-TGE	GAS SIDE PIPE TEMP. SENSOR A-E
L / F	LINE FILTER


COLOR IDENTIFICATION

BLK:BLACK	GRN:GREEN
BLU:BLUE	WHI:WHITE
RED:RED	YEL:YELLOW
GRY:GRAY	

6. SPECIFICATIONS OF ELECTRICAL PARTS

No.	Parts name	Model name	Rating
1	Compressor	DX270A2T-20L	3 Phases (4-Poles) ; 2200 W
2	Outdoor fan motor	WDF-340-A100-1	Output 100 W
3	Reactor	CH-56-3Z-T	5.8 mH, 18.5 A
4	Reactor	CH-76-VK	9.9 mH, 1 A
5	PMV coil	UKV-A039	DC 12 V
6	P.C. board (Main PCB)	MCC-1571	AC 220–240 V
7	P.C. board (Control PCB)	WP-041	DC 5V
8	P.C. board (Fan motor connection)	MCC-1436P	AC 220–240V
9	Fuse (Mounted on P.C. board MCC-1571)	—	AC 250V, 25 A
10	Fuse (Mounted on P.C. board MCC-1571)	—	AC 250V, 10 A
11	Fuse (Mounted on P.C. board MCC-1571, WP-041)	—	AC 250V, 3.15 A
12	Outdoor temp. sensor (TO sensor)	—	10 k Ω (25°C)
13	Discharge temp. sensor (TD sensor)	—	50 k Ω (25°C)
14	Temp. sensor at A room gas side (TGa-sensor)	—	10 k Ω (25°C)
15	Temp. sensor at B room gas side (TGb-sensor)	—	10 k Ω (25°C)
16	Temp. sensor at C room gas side (TGc-sensor)	—	10 k Ω (25°C)
17	Temp. sensor at D room gas side (TGd-sensor)	—	10 k Ω (25°C)
18	Temp. sensor at E room gas side (TGe-sensor)	—	10 k Ω (25°C)
19	Compressor thermo.	CS-12AL	ON: 90°C, OFF: 125°C
20	High-pressure SW	ACB-1UB177W	OFF : 4.5MPa
21	Terminal block (9P)	—	AC 250 V, 20 A

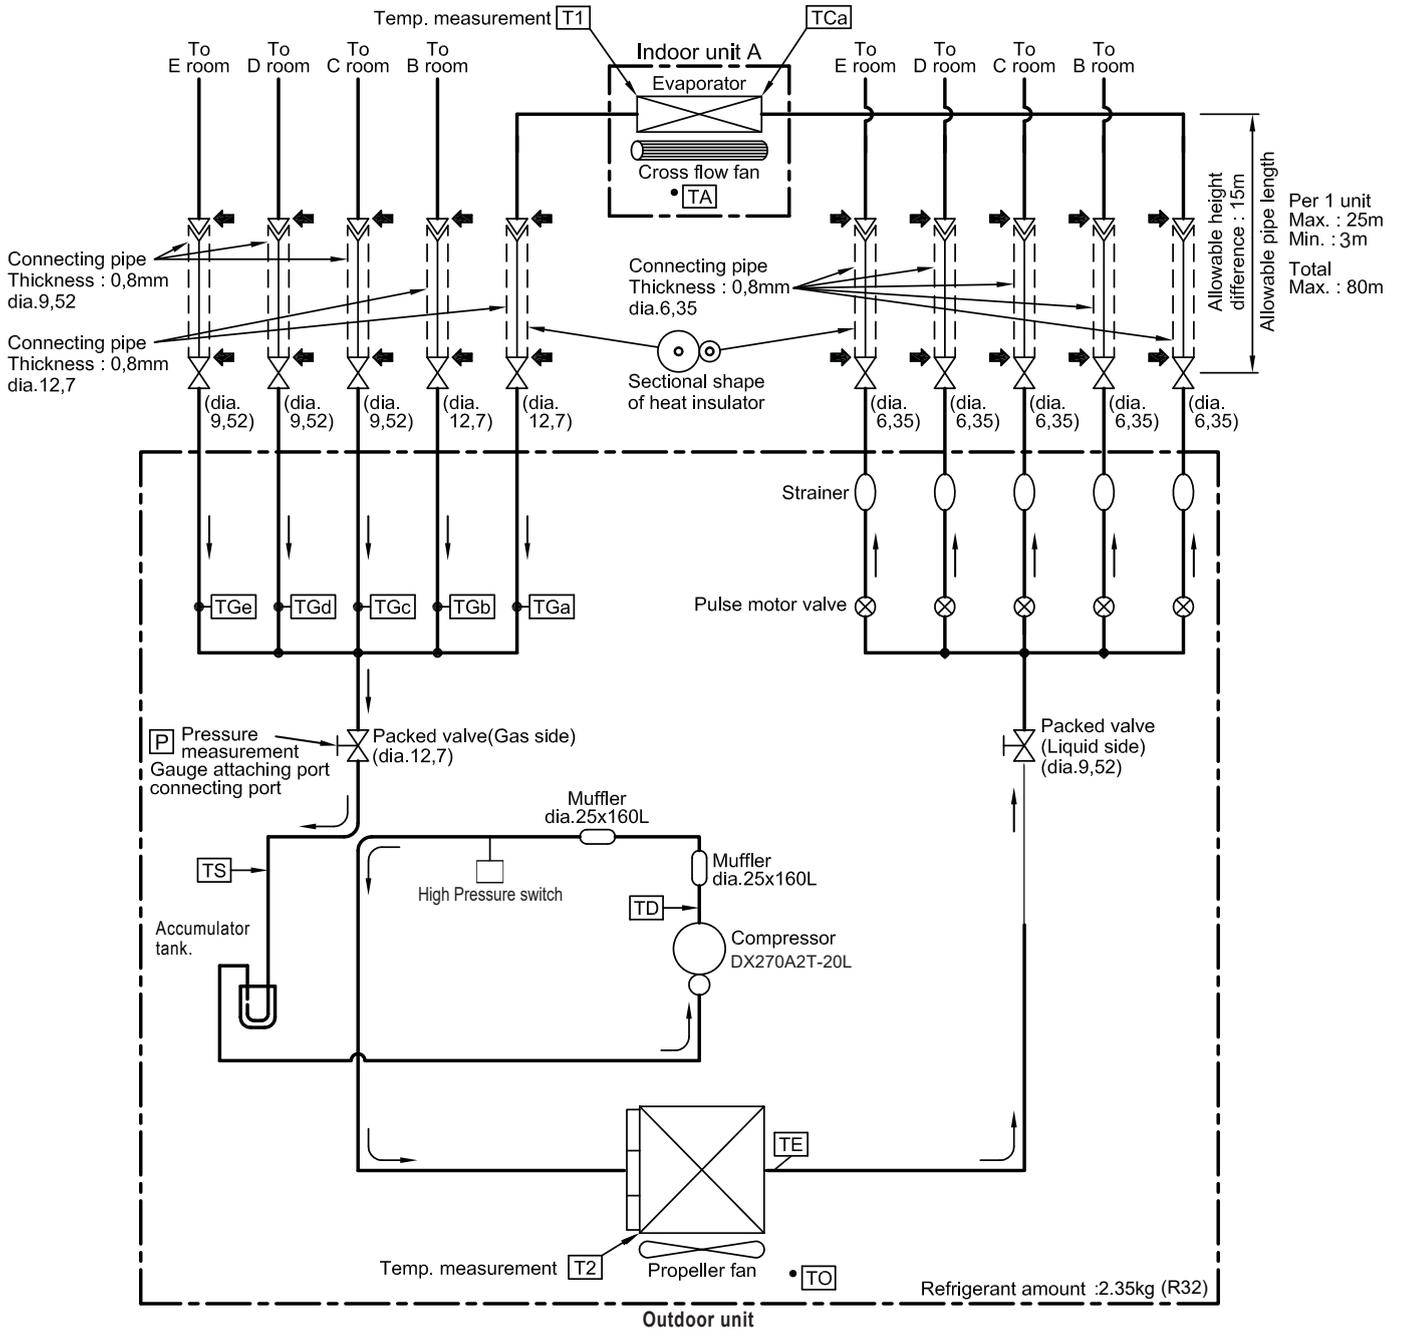7. REFRIGERANT CYCLE DIAGRAM



NOTE :

- You need not add refrigerant if the piping length is 40m or less.
- If the length exceeds 41m, add 20g of refrigerant per 1 meter over.
- Connection of only one indoor unit is unavailable. Two or more indoor units should be connected.

Operation data

Outdoor unit : RAS-5M51U2ACVG-SG

Operation mode : Cooling

Condition (dry bulb / wet bulb) : Indoor side 27/19°C, Outdoor side 35/24°C

Current limit : none


Indoor unit					Standard pressure	Heat exchanger pipe temperature		Compressor revolution (rps)
A	B	C	D	E	P (MPa)	T1 (°C)	T2 (°C)	
10	-	-	-	-	0.8 - 1.0	12 - 14	38 - 44	19
13	-	-	-	-	0.8 - 1.0	12 - 14	38 - 44	31
18	-	-	-	-	0.8 - 1.0	12 - 14	38 - 44	40
24	-	-	-	-	0.6 - 0.8	8 - 10	40 - 46	47
26	-	-	-	-	0.6 - 0.8	8 - 10	40 - 46	60
10	10	10	10	10	1.2 - 1.4	18 - 20	44 - 46	38
13	10	10	10	10	1.2 - 1.4	18 - 20	44 - 46	38
18	10	10	10	10	1.2 - 1.4	18 - 20	44 - 46	38
24	10	10	10	10	1.2 - 1.4	18 - 20	44 - 46	37
26	10	10	10	10	1.2 - 1.4	18 - 20	44 - 46	36
13	13	10	10	10	1.2 - 1.4	18 - 20	44 - 46	38
18	13	10	10	10	1.2 - 1.4	18 - 20	44 - 46	36
24	13	10	10	10	1.2 - 1.4	18 - 20	44 - 46	37
26	13	10	10	10	1.2 - 1.4	18 - 20	44 - 46	36
13	13	13	10	10	1.2 - 1.4	18 - 20	44 - 46	38
18	13	13	10	10	1.2 - 1.4	18 - 20	44 - 46	38
24	13	13	10	10	1.2 - 1.4	18 - 20	44 - 46	37
26	13	13	10	10	1.2 - 1.4	18 - 20	44 - 46	36
13	13	13	13	10	1.2 - 1.4	18 - 20	44 - 46	38
18	13	13	13	10	1.2 - 1.4	18 - 20	44 - 46	38
24	13	13	13	10	1.2 - 1.4	18 - 20	44 - 46	37
26	13	13	13	10	1.2 - 1.4	18 - 20	44 - 46	36
13	13	13	13	13	1.2 - 1.4	18 - 20	44 - 46	38
18	13	13	13	13	1.2 - 1.4	18 - 20	44 - 46	38
18	18	13	13	13	1.2 - 1.4	18 - 20	44 - 46	38
18	18	18	10	10	1.2 - 1.4	18 - 20	44 - 46	38
24	18	13	10	10	1.2 - 1.4	18 - 20	44 - 46	37
26	18	10	10	10	1.2 - 1.4	18 - 20	44 - 46	36

NOTES:

1. Measure surface temperature of heat exchanger pipe around of heat exchanger path U bent. (Thermistor thermometer).
2. Connecting piping condition : 5 meters × 5 units (5 m / each indoor unit).

8. CONTROL BLOCK DIAGRAM

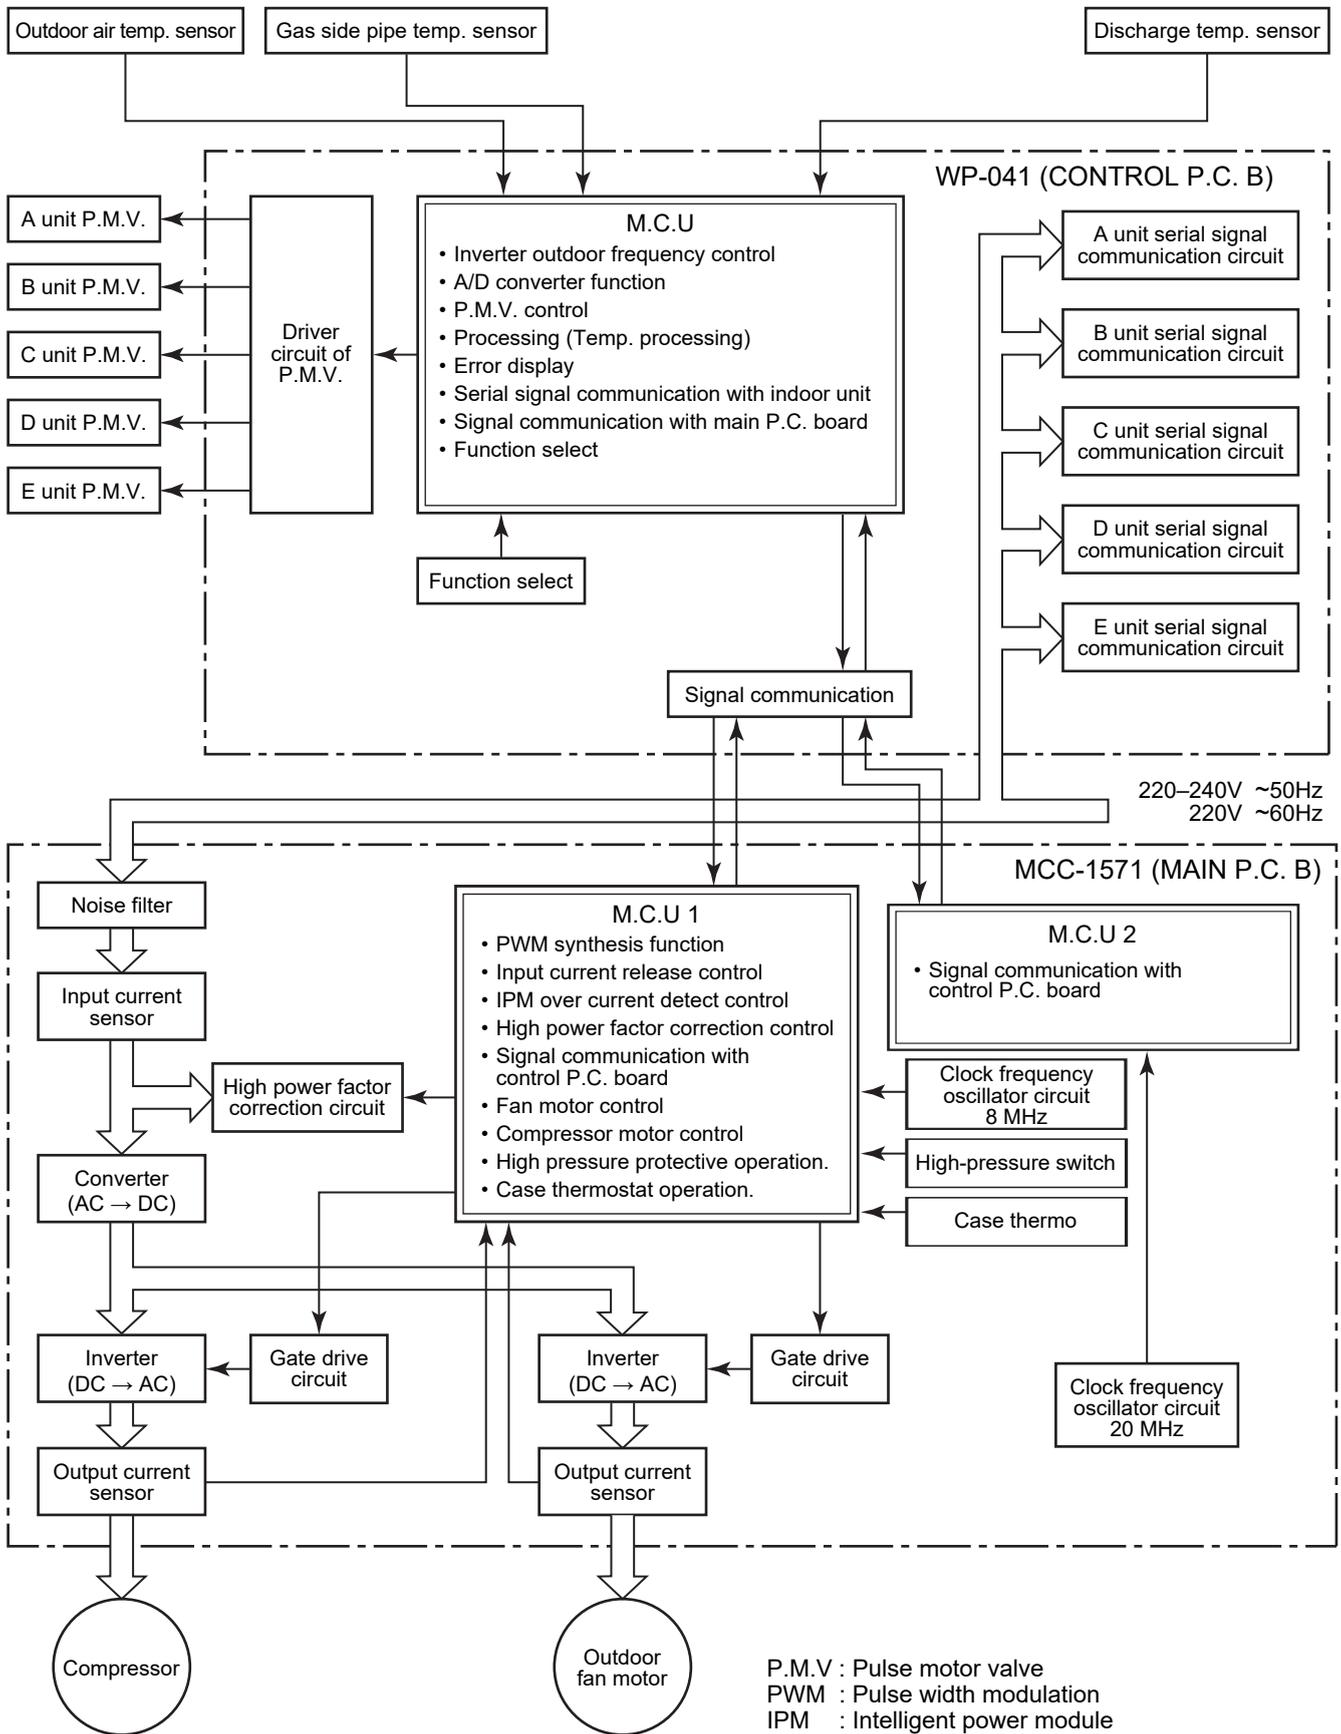Outdoor Unit (Inverter Assembly)



9. OPERATION DESCRIPTION

9-1. Outline of Air Conditioner Control

This air conditioner is a capacity-variable type air conditioner, which uses DC motor for the indoor fan motor and the outdoor fan motor. And the capacity-proportional control compressor which can change the motor speed in the range from 12 to 100 rps is mounted.

The DC motor drive circuit is mounted to the indoor unit. The compressor and the inverter to control fan motor are mounted to the outdoor unit.

The entire air conditioner is mainly controlled by the indoor unit controller.

The indoor unit controller drives the indoor fan motor based upon command sent from the remote controller, and transfers the operation command to the outdoor unit controller.

The outdoor unit controller receives operation command from the indoor unit side, and controls the outdoor fan and the pulse motor valve. (PMV)

Besides, detecting revolution position of the compressor motor, the outdoor unit controller controls speed of the compressor motor by controlling output voltage of the inverter and switching timing of the supply power (current transfer timing) so that motors drive according to the operation command.

And then, the outdoor unit controller transfers reversely the operating status information of the outdoor unit to control the indoor unit controller.

As the compressor adopts four-pole brushless DC motor, the frequency of the supply power from inverter to compressor is two-times cycles of the actual number of revolution.

1. Role of indoor unit controller

The indoor unit controller judges the operation commands from the remote controller and assumes the following functions.

- Judgment of suction air temperature of the indoor heat exchanger by using the indoor temp. sensor. (TA sensor)
- Judgment of the indoor heat exchanger temperature by using heat exchanger sensor (TC sensor) (Prevent-freezing control, etc.)
- Louver motor control
- Indoor fan motor operation control
- LED (Light Emitting Diode) display control
- Transferring of operation command signal (Serial signal) to the outdoor unit
- Reception of information of operation status (Serial signal including outside temp. data) to the outdoor unit and judgment/display of error
- Air purifier operation control

2. Role of outdoor unit controller

Receiving the operation command signal (Serial signal) from the indoor unit controller, the outdoor unit performs its role.

- Compressor operation control
 - Operation control of outdoor fan motor
 - P.M.V. control
- } Operations followed to judgment of serial signal from indoor side.

- Detection of inverter input current and current release operation
- Over-current detection and prevention operation to IGBT module (Compressor stop function)
- Compressor and outdoor fan stop function when serial signal is off (when the serial signal does not reach the board assembly of outdoor control by trouble of the signal system)
- Transferring of operation information (Serial signal) from outdoor unit controller to indoor unit controller
- Detection of outdoor temperature and operation revolution control

3. Contents of operation command signal (Serial signal) from indoor unit controller to outdoor unit controller

The following three types of signals are sent from the indoor unit controller.

- Operation mode set on the remote controller
- Compressor revolution command signal defined by indoor temperature and set temperature (Correction along with variation of room temperature and correction of indoor heat exchanger temperature are added.)
- Temperature of indoor heat exchanger
- For these signals ([Operation mode] and [Compressor revolution] indoor heat exchanger temperature), the outdoor unit controller monitors the input current to the inverter, and performs the followed operation within the range that current does not exceed the allowable value.

4. Contents of operation command signal (Serial signal) from outdoor unit controller to indoor unit controller

The following signals are sent from the outdoor unit controller.

- The current operation mode
 - The current compressor revolution
 - Outdoor temperature
 - Existence of protective circuit operation
- For transferring of these signals, the indoor unit controller monitors the contents of signals, and judges existence of trouble occurrence. Contents of judgment are described below.
- Whether distinction of the current operation status meets to the operation command signal
 - Whether protective circuit operates
- When no signal is received from the outdoor unit controller, it is assumed as a trouble.

9-2. Operation Description

- 1. Basic operation 34
- 2. Outdoor fan motor control 35
- 3. Capacity control 36
- 4. Current release control 36
- 5. Compressor protective control 37
- 6. Discharge temperature control..... 37
- 7. Pulse motor valve (PMV) control..... 37

9-3. Service switch (SW801, SW802) operations..... 38

**9-4. Intermittent Operation Control for indoor fans of the Indoor unit at
Thermo-off side in Heating operation46**



Item	Operation flow and applicable data, etc.	Description
1. Basic operation	<p>1. Operation control</p> <p>Receiving the user's operation condition setup, the operation statuses of indoor/outdoor units are controlled.</p> <ol style="list-style-type: none"> 1) The operation conditions are selected by the remote controller as shown in the below. 2) A signal is sent by ON button of the remote controller. 3) The signal is received by a sensor of the indoor unit and processed by the indoor controllers as shown in the below. 4) The indoor controller controls the indoor fan motor and louver motor. 5) The indoor controller sends the operation command to the outdoor controller, and sends/receives the control status with a serial signal. 6) The outdoor controller controls the operation as shown in the below, and also controls the compressor, outdoor fan motor and pulse motor valve. 	
<p>Remote controller</p> <p>The diagram illustrates the control flow between three main units: the Remote controller, the Indoor unit, and the Outdoor unit. The Remote controller (top) includes a 'Selection of operation conditions' block and an 'ON/OFF' button. A dashed arrow points from the 'ON/OFF' button to the 'Signal receiving' block of the Indoor unit. The Indoor unit (middle) contains 'Signal receiving', 'Indoor unit control', 'Operation command', and 'Serial signal send/receive' blocks. A solid arrow points from 'Indoor unit control' to 'Operation command', and another solid arrow points from 'Operation command' to 'Serial signal send/receive'. A bidirectional solid arrow connects the 'Serial signal send/receive' blocks of the Indoor and Outdoor units. The Outdoor unit (bottom) features 'Serial signal send/receive' and 'Outdoor unit control' blocks. A solid arrow points from 'Serial signal send/receive' to 'Outdoor unit control'. To the right of the Outdoor unit is an 'Inverter' block connected to an AC power source (indicated by a circle with a tilde symbol). The Inverter is connected to three components: a Compressor, an Outdoor fan motor, and a Pulse motor valve (P.M.V.).</p>		


Item	Operation flow and applicable data, etc.	Description
2. Outdoor fan motor control	<p>The blowing air volume at the outdoor unit side is controlled.</p> <p>Receiving the operation command from the controller of indoor unit, the controller of outdoor unit controls fan speed.</p> <p>* For the fan motor, a DC motor with non-stage variable speed system is used.</p> <p>However, it is limited to 8 stages for reasons of controlling.</p> <pre> graph TD A[Air conditioner ON (Remote controller)] --> B[Indoor unit controller] B --> C[1) Outdoor unit operation command (Outdoor fan control)] C --> D{2) Fan speed ≥ 400 when the motor stopped.} D -- YES --> E[OFF status of fan motor continues.] D -- NO --> F[Fan motor ON] F --> G{3) Fan lock} G -- YES --> H[Air conditioner OFF] H --> I[Alarm display] G -- NO --> J[4) Motor operates as shown in the table below.] </pre>	<ol style="list-style-type: none"> 1) The operation command sent from the remote controller is processed by the indoor unit controller and transferred to the controller of the outdoor unit. 2) When strong wind blows at outdoor side, the operation of air conditioner continues with the fan motor stopped. 3) Whether the fan is locked or not is detected, and the operation of air conditioner stops and an alarm is displayed if the fan is locked. 4) According to each operation mode, by the conditions of outdoor temperature (To) and compressor revolution, the speed of the outdoor fan shown in the table is selected.

Cooling operation, dry operation

Compressor revolution (rps)			~ 17	~ 19	~ 38	38 ~
Outdoor temperature sensor (To)	Normal operation	To ≥ 38°C	550	550	900	900
		28 ≤ To < 38°C	550	750	900	900
		15 ≤ To < 28°C	450	650	750	900
		10 ≤ To < 15°C	450	650	650	650
		5 ≤ To < 10°C	390	550	550	650
		0 ≤ To < 5°C	390	450	450	550
	To < 0°C	off*	off*	off*	off*	
	Sleep operation	To ≥ 38°C	550	750	900	900
		To < 38°C	550	650	750	900
To abnormal			550	750	900	900

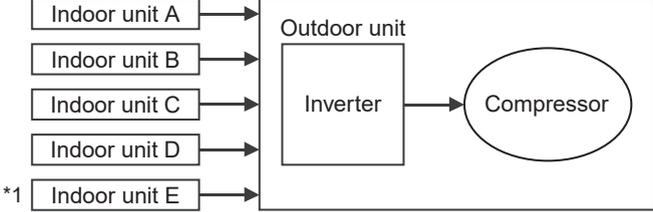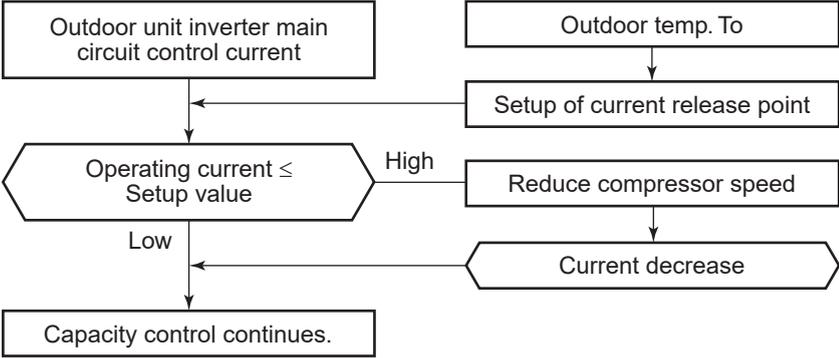To : Outdoor temp sensor

Item	Operation flow and applicable data, etc.	Description																												
<p>3. Capacity control</p>	<p>1) Five and Four indoor units from A to E determine the respective instruction revolutions from the difference between the remote controller setting temperature (Ts) and the indoor temperature (Ta), and transmit this to the outdoor unit.</p> <p>2) The outdoor unit receives the instructions from the indoor units, and the inverter operates the compressor at the calculated revolutions.</p> <p>3) The compressor operation range in each operating mode is shown in the left table.</p>  <table border="1" data-bbox="480 656 1104 1055"> <thead> <tr> <th>Operation mode</th> <th>No. of operating unit</th> <th>Combination of indoor units</th> <th>Compressor revolution (rps)</th> </tr> </thead> <tbody> <tr> <td rowspan="9">COOL</td> <td rowspan="5">1 unit</td> <td>M10</td> <td>12 to 22</td> </tr> <tr> <td>M13</td> <td>12 to 34</td> </tr> <tr> <td>M18</td> <td>12 to 44</td> </tr> <tr> <td>M24</td> <td>12 to 50</td> </tr> <tr> <td>M26</td> <td>12 to 64</td> </tr> <tr> <td>2 units</td> <td>○ *2</td> <td>12 to 56</td> </tr> <tr> <td>3 units</td> <td>○ *2</td> <td>16 to 59</td> </tr> <tr> <td>4 units</td> <td>○ *2</td> <td>16 to 62</td> </tr> <tr> <td>*1 5 units</td> <td>○ *2</td> <td>16 to 80</td> </tr> </tbody> </table> <p>*1 : 5 rooms model only. *2 : In case that any multiple indoor units are combined.</p>	Operation mode	No. of operating unit	Combination of indoor units	Compressor revolution (rps)	COOL	1 unit	M10	12 to 22	M13	12 to 34	M18	12 to 44	M24	12 to 50	M26	12 to 64	2 units	○ *2	12 to 56	3 units	○ *2	16 to 59	4 units	○ *2	16 to 62	*1 5 units	○ *2	16 to 80	
Operation mode	No. of operating unit	Combination of indoor units	Compressor revolution (rps)																											
COOL	1 unit	M10	12 to 22																											
		M13	12 to 34																											
		M18	12 to 44																											
		M24	12 to 50																											
		M26	12 to 64																											
	2 units	○ *2	12 to 56																											
	3 units	○ *2	16 to 59																											
	4 units	○ *2	16 to 62																											
	*1 5 units	○ *2	16 to 80																											
<p>4. Current release control</p>	<p>This function prevents troubles on the electronic parts of the compressor driving inverter.</p> <p>This function also controls drive circuit of the compressor speed so that electric power of the compressor drive circuit does not exceed the specified value.</p>  <table border="1" data-bbox="177 1731 769 2051"> <thead> <tr> <th>Outdoor temp.</th> <th>Cooling current release value</th> </tr> </thead> <tbody> <tr> <td>45°C</td> <td rowspan="2">9.5 A</td> </tr> <tr> <td>40°C</td> </tr> <tr> <td>16°C</td> <td>12.0 A</td> </tr> <tr> <td>11°C</td> <td rowspan="2">15.0 A</td> </tr> <tr> <td>10.5°C</td> </tr> </tbody> </table>	Outdoor temp.	Cooling current release value	45°C	9.5 A	40°C	16°C	12.0 A	11°C	15.0 A	10.5°C	<p>1) The input current of the outdoor unit is detected in the inverter section of the outdoor unit.</p> <p>2) According to the detected outdoor temperature, the specified value of the current is selected.</p> <p>3) Whether the current value exceeds the specified value or not is judged.</p> <p>4) If the current value exceeds the specified value, this function reduces the compressor speed and controls speed up to the closest one commanded from the indoor unit within the range which does not exceed the specified value.</p>																		
Outdoor temp.	Cooling current release value																													
45°C	9.5 A																													
40°C																														
16°C	12.0 A																													
11°C	15.0 A																													
10.5°C																														

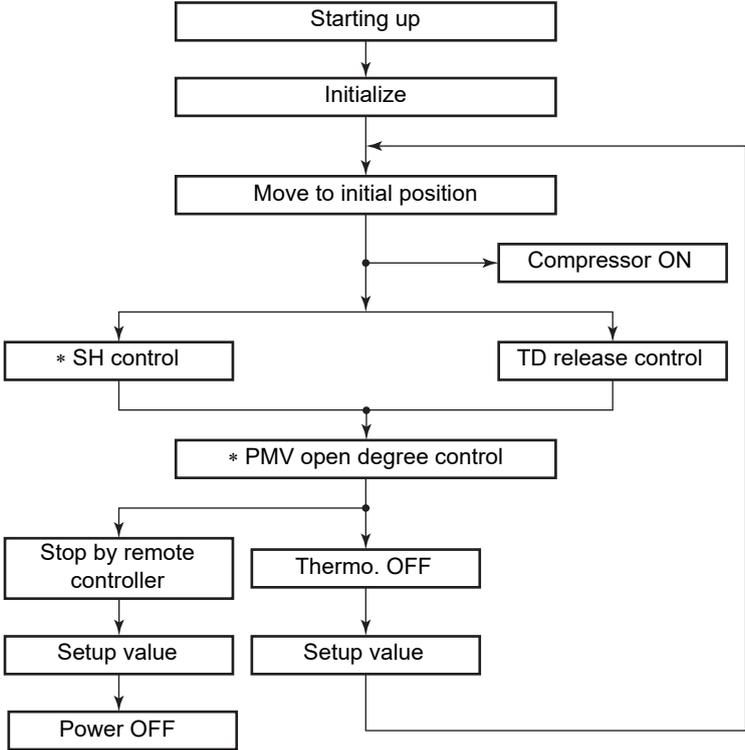Item	Operation flow and applicable data, etc.	Description														
5. Compressor protective control	<p>1) This control purposes to raise the operation frequency until 36Hz for 2 minutes in order to protect the compressor (Prevention of oil accumulation in the refrigerating cycle) when the status that the operation frequency is 36Hz or less has continued for 10 hours was calculated. The operation frequency follows the normal indoor command after controlling.</p> <p>2) Although the compressor may stop by THERMO-OFF control when the room temperature varies and then attains the set temperature by this control, it is not abnormal.</p> <p>3) During this control works, it stopping the operation by the remote controller, the operation does not continue.</p>															
6. Discharge temperature control	<table border="1" data-bbox="181 607 959 947"> <thead> <tr> <th>Td value</th> <th>Control operation</th> </tr> </thead> <tbody> <tr> <td>120 °C</td> <td>Judges as an error and stops the compressor.</td> </tr> <tr> <td>115 °C</td> <td>Reduce the compressor speed.</td> </tr> <tr> <td>111 °C</td> <td>Reduce slowly compressor speed.</td> </tr> <tr> <td>108 °C</td> <td>Keeps the compressor speed.</td> </tr> <tr> <td>101 °C</td> <td>If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.</td> </tr> <tr> <td>101 °C</td> <td>Operates with speed commanded by the serial signal.</td> </tr> </tbody> </table>	Td value	Control operation	120 °C	Judges as an error and stops the compressor.	115 °C	Reduce the compressor speed.	111 °C	Reduce slowly compressor speed.	108 °C	Keeps the compressor speed.	101 °C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.	101 °C	Operates with speed commanded by the serial signal.	<p>1. Purpose This function detects error on the refrigerating cycle or error on the compressor, and performs protective control.</p> <p>2. Operation Control of the compressor speed. The speed control is performed as described in the left table based upon the discharge temperature.</p>
Td value	Control operation															
120 °C	Judges as an error and stops the compressor.															
115 °C	Reduce the compressor speed.															
111 °C	Reduce slowly compressor speed.															
108 °C	Keeps the compressor speed.															
101 °C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.															
101 °C	Operates with speed commanded by the serial signal.															
7. Pulse motor valve (PMV) control	<p>This function controls throttle amount of the refrigerant in the refrigerating cycle. According to operating status of the air conditioner, this function also controls the open degree of valve with an expansion valve with pulse motor.</p>  <pre> graph TD Start[Starting up] --> Init[Initialize] Init --> Move[Move to initial position] Move --> Comp[Compressor ON] Comp --> SH[* SH control] Comp --> TD[TD release control] SH --> PMV[* PMV open degree control] TD --> PMV PMV --> Stop[Stop by remote controller] PMV --> Thermo[Thermo. OFF] Stop --> Setup1[Setup value] Thermo --> Setup2[Setup value] Setup1 --> Power[Power OFF] Setup2 --> Power </pre> <p>* SH (Super Heat amount) = T_g (Temperature of gas pipe of outdoor unit) – T_c (Heat exchanger temperature at evaporation side) * PMV: Pulse Motor Valve</p>	<p>1) When starting the operation, move the valve once until it fits to the stopper. (Initialize) * In this time, "Click" sound may be heard.</p> <p>2) Adjust the open degree of valve by super heat amount. (SH control)</p> <p>3) If the discharge temperature was excessively up, adjust the open degree of valve so that it is in the range of set temperature. (Discharge temp. control)</p> <p>4) When turning off the compressor by thermo. OFF or STOP by remote controller, the open degree of the PMV is adjusted to the setup value.</p>														

9-3. Service switch (SW801, SW802) operations

Various displays and various operations are enabled by push buttons (service) switches and LED on the outdoor control P.C. board.

9-3-1. LED display

5 patterns are provided for LED display.

○:ON (○*:3 sec ON/0.5 sec OFF), ●:OFF, ◎:Rapid Flashing(5 times/sec), ◇:Slow Flashing(1 time/sec)

D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)
●/○(*)/◎	●/○(*)/◎	●/○(*)/◎	●/○(*)/◎	●/○(*)/◎/◇	●/○/◎/◇

In the initial status of LED display, D805 is ON as below.


Normal						Error occurring					
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)
●	●	●	●	●	○	●/○*	●/○*	●/○*	●/○*	●/○*	○
○:ON ●:OFF						○:ON ○*:3 sec ON/0.5 sec OFF ●:OFF					

When the initial status does not appear (in case of flashing of D804 or D805), LED display can be returned to the initial status by pushing and holding the service switches SW801 and SW802 for 5 seconds or more simultaneously.

9-3-2. Service switch setting and service support function

You can choose service switch setting and service support function.

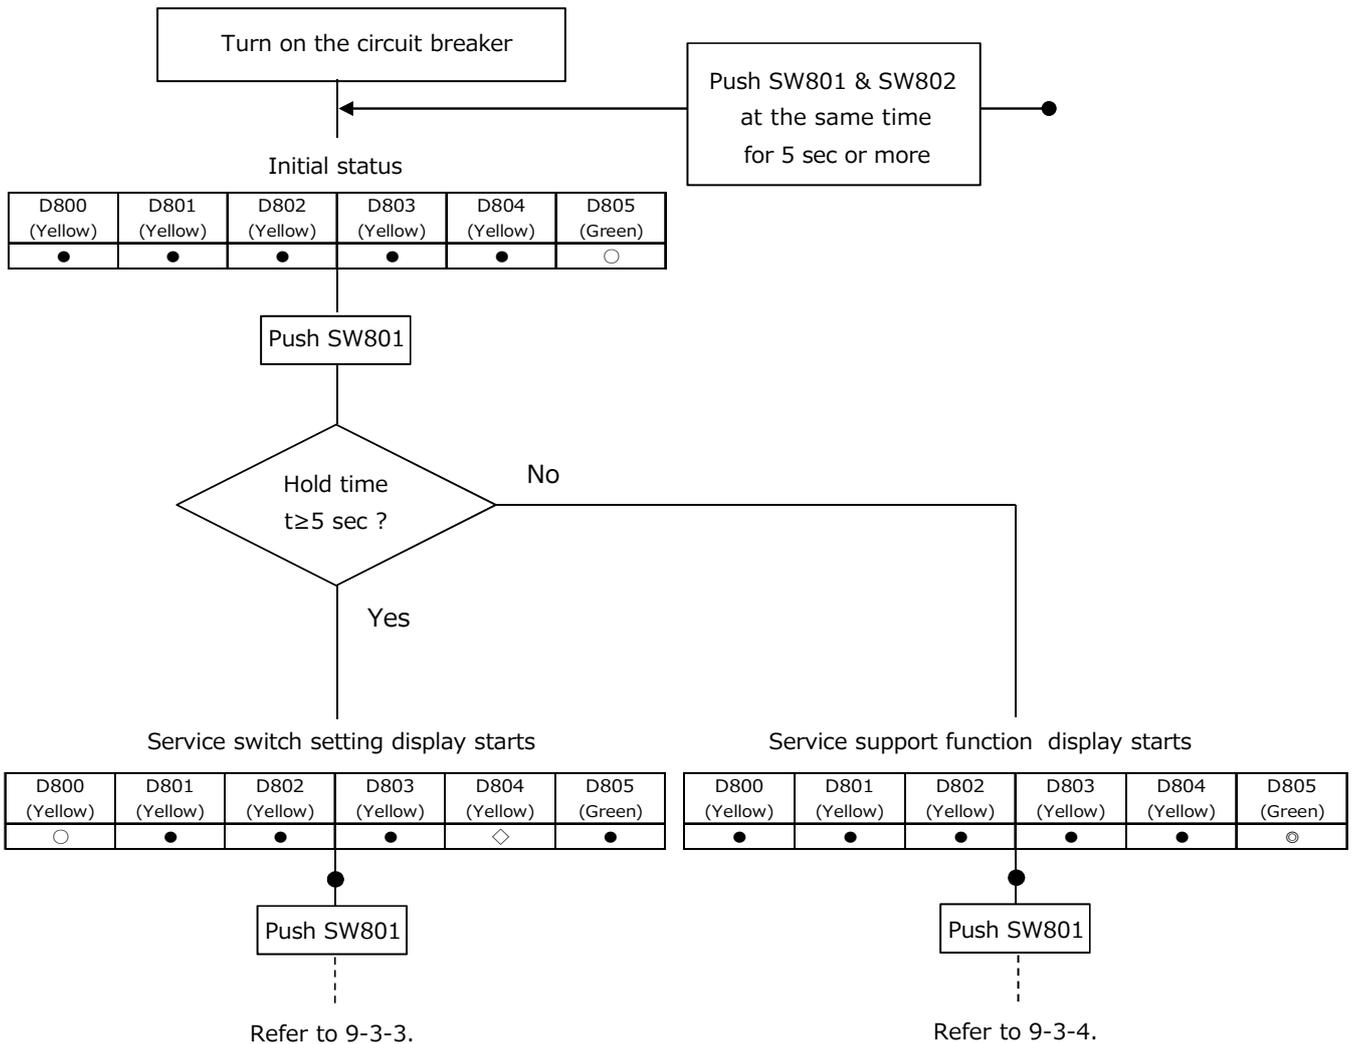Operating method is as below.



9-3-3. Service switch setting

Various settings are available by setting service switches.

[Operating method]

- 1) Check LED display is the initial status. If it is not so, set the initial status.
- 2) Push and hold SW801 for 5 seconds or more and then check D804 flashes slowly (1 times/sec).
- 3) Push SW801 several times and then stop it at the LED display of function item to be set up.
- 4) Push SW802 and then D805 will flash rapidly (5 times/sec). (D805 is turned off by pressing the SW802 again.)
- 5) Push and hold SW802 for 5 seconds or more. D804 changes to slow flashing, D805 changes to lighting and then various settings are validated.
- 6) When you want to continue the settings, moreover repeat items from 3) to 5).
- 7) To invalidate various settings, execute items 1) to 3), push SW802 and then D805 will turn off.
- 8) Push and hold SW802 for 5 seconds or more. D804 changes to slow flashing, D805 is turned off and then various settings are invalidated.

* If an unknown point generated on the way of the operation, push and hold SW801 and SW802 for 5 seconds or more simultaneously. You can return to the item 1).

[Confirmation method of various settings]

You can confirm that various settings are validated.

- 1) Check LED displays are in the initial status. If it are not so, return them to the initial status.
- 2) Push and hold SW801 for 5 seconds or more. D804 changes to slow flashing.
- 3) Push SW801 several times and then stop it at the point where LED display (D800 to D804) to be checked. If the setting became valid, D804 and D805 flash rapidly. (When the setup was invalid, D804 flashes rapidly and D805 goes off.)
- 4) Push SW801 and SW802 for 5 seconds or more simultaneously to return LED display to the initial status.

No.	Display					Item	Control contents																								
	D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)			D805 (GN)																							
1	○	●	●	●		Refrigerant collection operation At shipment from factory (default) D805 (Green) ●	<p>○:ON (○*:3 sec ON/0.5 sec OFF)●:OFF ◎:Rapid Flashing(5 times/sec)◇:Slow Flashing(1 time/sec)</p> <p>The outdoor unit performs cooling operation. As the indoor unit does not operate by this switch setting only, carry out the operation beforehand. (Before switch setting, you have to operate in cooling mode of all indoor units.) During the check, the display is kept as below. *Operation is up to 10 minutes. *After the collection is finished, promptly stop the operation of all the indoor unit. (There are cases that the compressor restarts.)</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>○</td> <td>●</td> <td>●</td> <td>●</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	○	●	●	●	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
○	●	●	●	◇	○																										
2	●	●	○	●		Miswiring (mis piping) check At shipment from factory (default) D805 (Green) ●	<p>The outdoor unit performs cooling operation. As the indoor unit does not operate by this switch setting only, carry out the operation beforehand. (Before switch setting, you have to operate in cooling mode of all indoor units.) During the check, the display is kept as below. *Operation is up to 30 minutes. *You cannot check wiring/piping when the external temperature is 5°C or less. *During the check, the compressor and the fan of the outdoor/indoor unit repeat ON/OFF.</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>●</td> <td>●</td> <td>○</td> <td>●</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	●	●	○	●	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
●	●	○	●	◇	○																										
3	○	●	○	●		Fan motor operation check At shipment from factory (default) D805 (Green) ●	<p>Operate the fan motor forcedly. The motor rotates at 500rpm and operation is 2 minutes. During the check, the display is kept as below.</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>○</td> <td>●</td> <td>○</td> <td>●</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	○	●	○	●	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
○	●	○	●	◇	○																										
4	●	○	○	●	◇*1 or ◎*2	PMV operation check At shipment from factory (default) D805 (Green) ●	<p>PMV is initialized to order from unit A. (only one time) Checking its operation sound and you can see that it is operating. During the check, the display is kept as below.</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>●</td> <td>○</td> <td>○</td> <td>●</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	●	○	○	●	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
●	○	○	●	◇	○																										
5	○	○	○	●		Cooling only setting At shipment from factory (default) D805 (Green) ●	<p>When using the air conditioner as a cooling-only conditioner, set the switch. (If the heating mode is selected by remote control, outdoor unit will remain stop. If mixed with indoor unit cooling and heating, outdoor unit performs cooling operation.) When the setting is finished, the display is as below.</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>○</td> <td>○</td> <td>○</td> <td>●</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	○	○	○	●	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
○	○	○	●	◇	○																										
6	●	○	●	○		Power save function At shipment from factory (default) D805 (Green) ●	<p>When using the power save function, set the switch. The current limit is enabled. When the setting is finished, the display is as below.</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>●</td> <td>○</td> <td>●</td> <td>○</td> <td>◇</td> <td>○</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	●	○	●	○	◇	○												
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
●	○	●	○	◇	○																										
7	○	○	●	○		Select current limit At shipment from factory (default) D805 (Green) ●	<p>If you enabled the power save function, you have to choose two of the current limit value. When the setting is finished, the display is as below. (1)8.5A</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>○</td> <td>○</td> <td>●</td> <td>○</td> <td>◇</td> <td>○</td> </tr> </table> <p>(2)11.0A</p> <table border="1"> <tr> <td>D800 (Yellow)</td> <td>D801 (Yellow)</td> <td>D802 (Yellow)</td> <td>D803 (Yellow)</td> <td>D804 (Yellow)</td> <td>D805 (Green)</td> </tr> <tr> <td>○</td> <td>○</td> <td>●</td> <td>○</td> <td>◇</td> <td>●</td> </tr> </table>	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	○	○	●	○	◇	○	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	○	○	●	○	◇	●
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
○	○	●	○	◇	○																										
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)																										
○	○	●	○	◇	●																										

*1. Item and setting is displaying.
*2. Item and setting is selecting.

9-3-4. Service support function

Various displays are available by setting service switches.

[Operating method]

- 1) Check LED display is the initial status. If it is not so, set the initial status.
- 2) Push SW801 several times and stop it at the item that you want to check.

○:ON (○*:3 sec ON/0.5 sec OFF)●:OFF

◎:Rapid Flashing(5 times/sec) ◇:Slow Flashing(1 time /sec)

No.	Display						Item	Description
	D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)	D805 (GN)		
0	●	●	●	●	●		Error display (Error which is occurring at present)	The error which is occurring at present is displayed. LED goes off while an error does not occur. (Refer to table A)
1	○	●	●	●	●		Error display (The latest error: The latest error including this moment)	After error status was eliminated, if you want to check the error which occurred before, call this setting and check it. (Even after turning off the power supply once, you can recheck it.) * This error display displays only the errors related to compressor stop. * In the case that an error occurred at present, the same contents as that at present is displayed. (Refer to table B)
2	●	○	●	●	●		Miswiring (mispiping) display	You can check the room judged as error by operating the miswiring (mispiping) check. (Refer to table C)
3	○	○	●	●	●		Discharge temperature sensor (TD) display	The detected value of the discharge temperature (TD) is displayed. (Refer to table C)
4	●	○	○	●	●		Outside temperature sensor (TO) display	The detected value of the outside temperature sensor (TO) is displayed. (Refer to table C)
5	○	○	○	●	●		Current display	The current value which flows to the outdoor unit is displayed. (Refer to table C)
6	●	●	●	○	●		Compressor operation frequency display	The operation frequency of the compressor is displayed. (Refer to table C)
7	○	●	●	○	●		PMV opening display (unit A)	The opening of PMV (Electronic expansion valve) is displayed. (Refer to table C)
8	●	○	●	○	●		PMV opening display (unit B)	The opening of PMV (Electronic expansion valve) is displayed. (Refer to table C)
9	○	○	●	○	●		PMV opening display (unit C)	The opening of PMV (Electronic expansion valve) is displayed. (Refer to table C)
10	●	●	○	○	●		PMV opening display (unit D)	The opening of PMV (Electronic expansion valve) is displayed. (Refer to table C)
11	○	●	○	○	●		PMV opening display (unit E)	The opening of PMV (Electronic expansion valve) is displayed. (Refer to table C)
12	●	○	○	○	●	◎	Gas temperature sensor (TG) display (unit A)	The detected value of the gas temperature sensor (TG) is displayed. (Refer to table C)
13	○	○	○	○	●		Gas temperature sensor (TG) display (unit B)	The detected value of the gas temperature sensor (TG) is displayed. (Refer to table C)
14	●	●	●	●	○		Gas temperature sensor (TG) display (unit C)	The detected value of the gas temperature sensor (TG) is displayed. (Refer to table C)
15	○	●	●	●	○		Gas temperature sensor (TG) display (unit D)	The detected value of the gas temperature sensor (TG) is displayed. (Refer to table C)
16	●	○	●	●	○		Gas temperature sensor (TG) display (unit E)	The detected value of the gas temperature sensor (TG) is displayed. (Refer to table C)
17	○	○	●	●	○		Indoor suction temperature sensor (TA) display (unit A)	The detected value of the indoor suction temperature sensor (TA) is displayed. (Refer to table C)
18	●	●	○	●	○		Indoor suction temperature sensor (TA) display (unit B)	The detected value of the indoor suction temperature sensor (TA) is displayed. (Refer to table C)
19	○	●	○	●	○		Indoor suction temperature sensor (TA) display (unit C)	The detected value of the indoor suction temperature sensor (TA) is displayed. (Refer to table C)
20	●	○	○	●	○		Indoor suction temperature sensor (TA) display (unit D)	The detected value of the indoor suction temperature sensor (TA) is displayed. (Refer to table C)
21	○	○	○	●	○		Indoor suction temperature sensor (TA) display (unit E)	The detected value of the indoor suction temperature sensor (TA) is displayed. (Refer to table C)
22	●	●	●	○	○		Indoor heat exchanger temperature sensor (TC/TCJ) display (unit A)	The detected value of the indoor heat exchanger temperature sensor (TC) is displayed. Only while you press the SW802, the detected value of the indoor heat exchanger temperature sensor (TCJ) is displayed. (Refer to table C)
23	○	●	●	○	○		Indoor heat exchanger temperature sensor (TC/TCJ) display (unit B)	The detected value of the indoor heat exchanger temperature sensor (TC) is displayed. Only while you press the SW802, the detected value of the indoor heat exchanger temperature sensor (TCJ) is displayed. (Refer to table C)
24	●	○	●	○	○		Indoor heat exchanger temperature sensor (TC/TCJ) display (unit C)	The detected value of the indoor heat exchanger temperature sensor (TC) is displayed. Only while you press the SW802, the detected value of the indoor heat exchanger temperature sensor (TCJ) is displayed. (Refer to table C)
25	○	○	●	○	○		Indoor heat exchanger temperature sensor (TC/TCJ) display (unit D)	The detected value of the indoor heat exchanger temperature sensor (TC) is displayed. Only while you press the SW802, the detected value of the indoor heat exchanger temperature sensor (TCJ) is displayed. (Refer to table C)
26	●	●	○	○	○		Indoor heat exchanger temperature sensor (TC/TCJ) display (unit E)	The detected value of the indoor heat exchanger temperature sensor (TC) is displayed. Only while you press the SW802, the detected value of the indoor heat exchanger temperature sensor (TCJ) is displayed. (Refer to table C)

- 3) Pushing SW802, the display changes to next item. To see other display contents, repeat that.
 4) To finish LED display, be sure to execute item 1) to return LED to the initial status (error display of current occurrence) and then finish LED display.

[Error display]

The error which is occurring at present and the latest error (including error that is occurring now) can be confirmed by checking display on the outdoor control P.C. board.

A. Error display which occurs at present

○:ON (○*:3 sec ON/0.5 sec OFF) ●:OFF
 ◎:Rapid Flashing(5 times/sec) ◇:Slow Flashing(1 time/sec)

Display						Indoor check code	Description
D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)	D805 (GN)		
●	●	●	●	●		-	Normal operation (no error)
○*	●	●	●	●		1C	Compressor case thermostat error
●	○*	●	●	●		21	High pressure switch error
○*	○*	●	●	●		1C	Compressor system error
●	●	○*	●	●		1d	Compressor lock
○*	●	○*	●	●		1F	Compressor breakdown
●	○*	○*	●	●		14	Driving element short circuit
○*	○*	○*	●	●		16	Position detection circuit error
●	●	●	○*	●		17	Current detection circuit error
○*	●	●	○*	●		1C	Communication error between MCU
●	○*	●	○*	●		1A	Fan system error
○*	○*	●	○*	●		1E	Discharge temperature error
●	●	○*	○*	●		19	Discharge temperature sensor (TD) error
1 ○	●	○*	○*	●	○	1b	Outdoor air temperature sensor (TO) error
2 ●	●	●	●	○		1C	Gas pipe (unit A) temperature sensor (TGa) error
2 ○	●	●	●	○*		1C	Gas pipe (unit B) temperature sensor (TGb) error
2 ●	○	●	●	○*		1C	Gas pipe (unit C) temperature sensor (TGc) error
2 ○	○*	●	●	○*		1C	Gas pipe (unit D) temperature sensor (TGd) error
2 ●	●	○	●	○*		1C	Gas pipe (unit E) temperature sensor (TGe) error
○*	●	○*	●	○*		-	PMV error (SH≥20)
●	○*	○*	●	○*		-	PMV error (SH≤-8)
●	●	●	○*	○*		20	PMV leakage error (unit A)
○*	●	●	○*	○*		20	PMV leakage error (unit B)
●	○*	●	○*	○*		20	PMV leakage error (unit C)
○*	○*	●	○*	○*		20	PMV leakage error (unit D)
●	●	○*	○*	○*		20	PMV leakage error (unit E)
○*	●	○*	○*	○*		-	Miswiring (mispipng) check error

*1: Back-up operation is performed without error display of the indoor unit.
 *2: Operated normally when the air conditioners in other rooms are driven.

B. Error display of the latest error (including error which occurs at present)

○:ON (○*:3 sec ON/0.5 sec OFF) ●:OFF
 ◎:Rapid Flashing(5 times/sec) ◇:Slow Flashing(1 time/sec)

Display						Indoor check code	Description
D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)	D805 (GN)		
●	●	●	●	●		-	Normal operation (no error)
◎	●	●	●	●		1C	Compressor case thermostat error
●	◎	●	●	●		21	High pressure switch error
◎	◎	●	●	●		1C	Compressor system error
●	●	◎	●	●		1d	Compressor lock
◎	●	◎	●	●		1F	Compressor breakdown
●	◎	◎	●	●		14	Driving element short circuit
◎	◎	◎	●	●		16	Position detection circuit error
●	●	●	◎	●		17	Current detection circuit error
◎	●	●	◎	●		1C	Communication error between MCU
●	◎	●	◎	●		1A	Fan system error
◎	◎	●	◎	●		1E	Discharge temperature error
●	●	◎	◎	●		19	Discharge temperature sensor (TD) error
◎	●	◎	◎	●	◇	1b	Outdoor air temperature sensor (TO) error
●	●	●	●	◎		1C	Gas pipe (unit A) temperature sensor (TGa) error
◎	●	●	●	◎		1C	Gas pipe (unit B) temperature sensor (TGb) error
●	◎	●	●	◎		1C	Gas pipe (unit C) temperature sensor (TGc) error
◎	◎	●	●	◎		1C	Gas pipe (unit D) temperature sensor (TGd) error
●	●	◎	●	◎		1C	Gas pipe (unit E) temperature sensor (TGe) error
◎	●	◎	●	◎		-	PMV error (SH≥20)
●	◎	◎	●	◎		-	PMV error (SH≤-8)
●	●	●	◎	◎		20	PMV leakage error (unit A)
◎	●	●	◎	◎		20	PMV leakage error (unit B)
●	●	●	◎	◎		20	PMV leakage error (unit C)
◎	◎	●	◎	◎		20	PMV leakage error (unit D)
●	●	◎	◎	◎		20	PMV leakage error (unit E)
◎	●	◎	◎	◎		-	Miswiring (mispipng) check error

C. Sensor, current, compressor operation frequency, PMV opening, Miswiring (mispiping) check display

Using the service display function, you can check a variety of information.

○:ON (○*:3 sec ON/0.5 sec OFF)●:OFF
 ◎:Rapid Flashing(5 times/sec)◇:Slow Flashing(1 time/sec)


No.	display					D805 (GN)	Contents				
	D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)		Temp. sensor (°C)	Current (A)	Compressor frequency (rps)	PMV opening (pls)	Miswiring (mispiping) check
0	●	●	●	●	●	◇	-26 or less	0~0.9	0~4.9	0~19	No error
1	○	●	●	●	●		-25~-21	1~1.9	5~9.9	20~39	Trouble in unit A
2	●	○	●	●	●		-20~-16	2~2.9	10~14.9	40~59	Trouble in unit B
3	○	○	●	●	●		-15~-11	3~3.9	15~19.9	60~79	Trouble in unit A and B
4	●	●	○	●	●		-10~-6	4~4.9	20~24.9	80~99	Trouble in unit C
5	○	●	○	●	●		-5~-1	5~5.9	25~29.9	100~119	Trouble in unit A and C
6	●	○	○	●	●		0~4	6~6.9	30~34.9	120~139	Trouble in unit B and C
7	○	○	○	●	●		5~9	7~7.9	35~39.9	140~159	Trouble in unit A,B and C
8	●	●	●	○	●		10~14	8~8.9	40~44.9	160~179	Trouble in unit D
9	○	●	●	○	●		15~19	9~9.9	45~49.9	180~199	Trouble in unit A and D
10	●	○	●	○	●		20~24	10~10.9	50~54.9	200~219	Trouble in unit B and D
11	○	○	●	○	●		25~29	11~11.9	55~59.9	220~239	Trouble in unit A,B and D
12	●	●	○	○	●		30~34	12~12.9	60~64.9	240~259	Trouble in unit C and D
13	○	●	○	○	●		35~39	13~13.9	65~69.9	260~279	Trouble in unit A,C and D
14	●	○	○	○	●		40~44	14~14.9	70~74.9	280~299	Trouble in unit B,C and D
15	○	○	○	○	●		45~49	15~15.9	75~79.9	300~319	Trouble in unit A,B,C and D
16	●	●	●	●	○		50~54	16~16.9	80~84.9	320~339	Trouble in unit E
17	○	●	●	●	○		55~59	17~17.9	85~89.9	340~359	Trouble in unit A and E
18	●	○	●	●	○		60~64	18~18.9	90~94.9	360~379	Trouble in unit B and E
19	○	○	●	●	○		65~69	19~19.9	95~99.9	380~399	Trouble in unit A,B and E
20	●	●	○	●	○		70~74	20~20.9	100~104.9	400~419	Trouble in unit C and E
21	○	●	○	●	○		75~79	21~21.9	105~109.9	420~439	Trouble in unit A,C and E
22	●	○	○	●	○		80~84	22~22.9	110~114.9	440~459	Trouble in unit B,C and E
23	○	○	○	●	○		85~89	23~23.9	115~119.9	460~479	Trouble in unit A,B,C and E
24	●	●	●	○	○		90~94	24~24.9	120~124.9	480~499	Trouble in unit D and E
25	○	●	●	○	○		95~99	25~25.9	125~129.9	500	Trouble in unit A,D and E
26	●	○	●	○	○		100~104	26~26.9	130~134.9	-	Trouble in unit B,D and E
27	○	○	●	○	○		105~109	27~27.9	135~139.9	-	Trouble in unit A,B,D and E
28	●	●	○	○	○		110~114	28~28.9	140~144.9	-	Trouble in unit C,D and E
29	○	●	○	○	○		115~119	29~29.9	145~149.9	-	Trouble in unit A,C,D and E
30	●	○	○	○	○		120 or more	30~30.9	150~154.9	-	Trouble in unit B,C,D and E
31	○	○	○	○	○	Sensor error	31 or more	155~ or more	-	Trouble in unit A,B,C,D and E	

(Note 1) Basically carry out the service switch settings while the machine stops. If carry out during the operation, the pressure may change suddenly and a danger may grow.

9-3-5. How to set the SERVICE SWITCH SETTING.


If you want to set the "COOLING ONLY SETTING OFF ⇒ ON" .

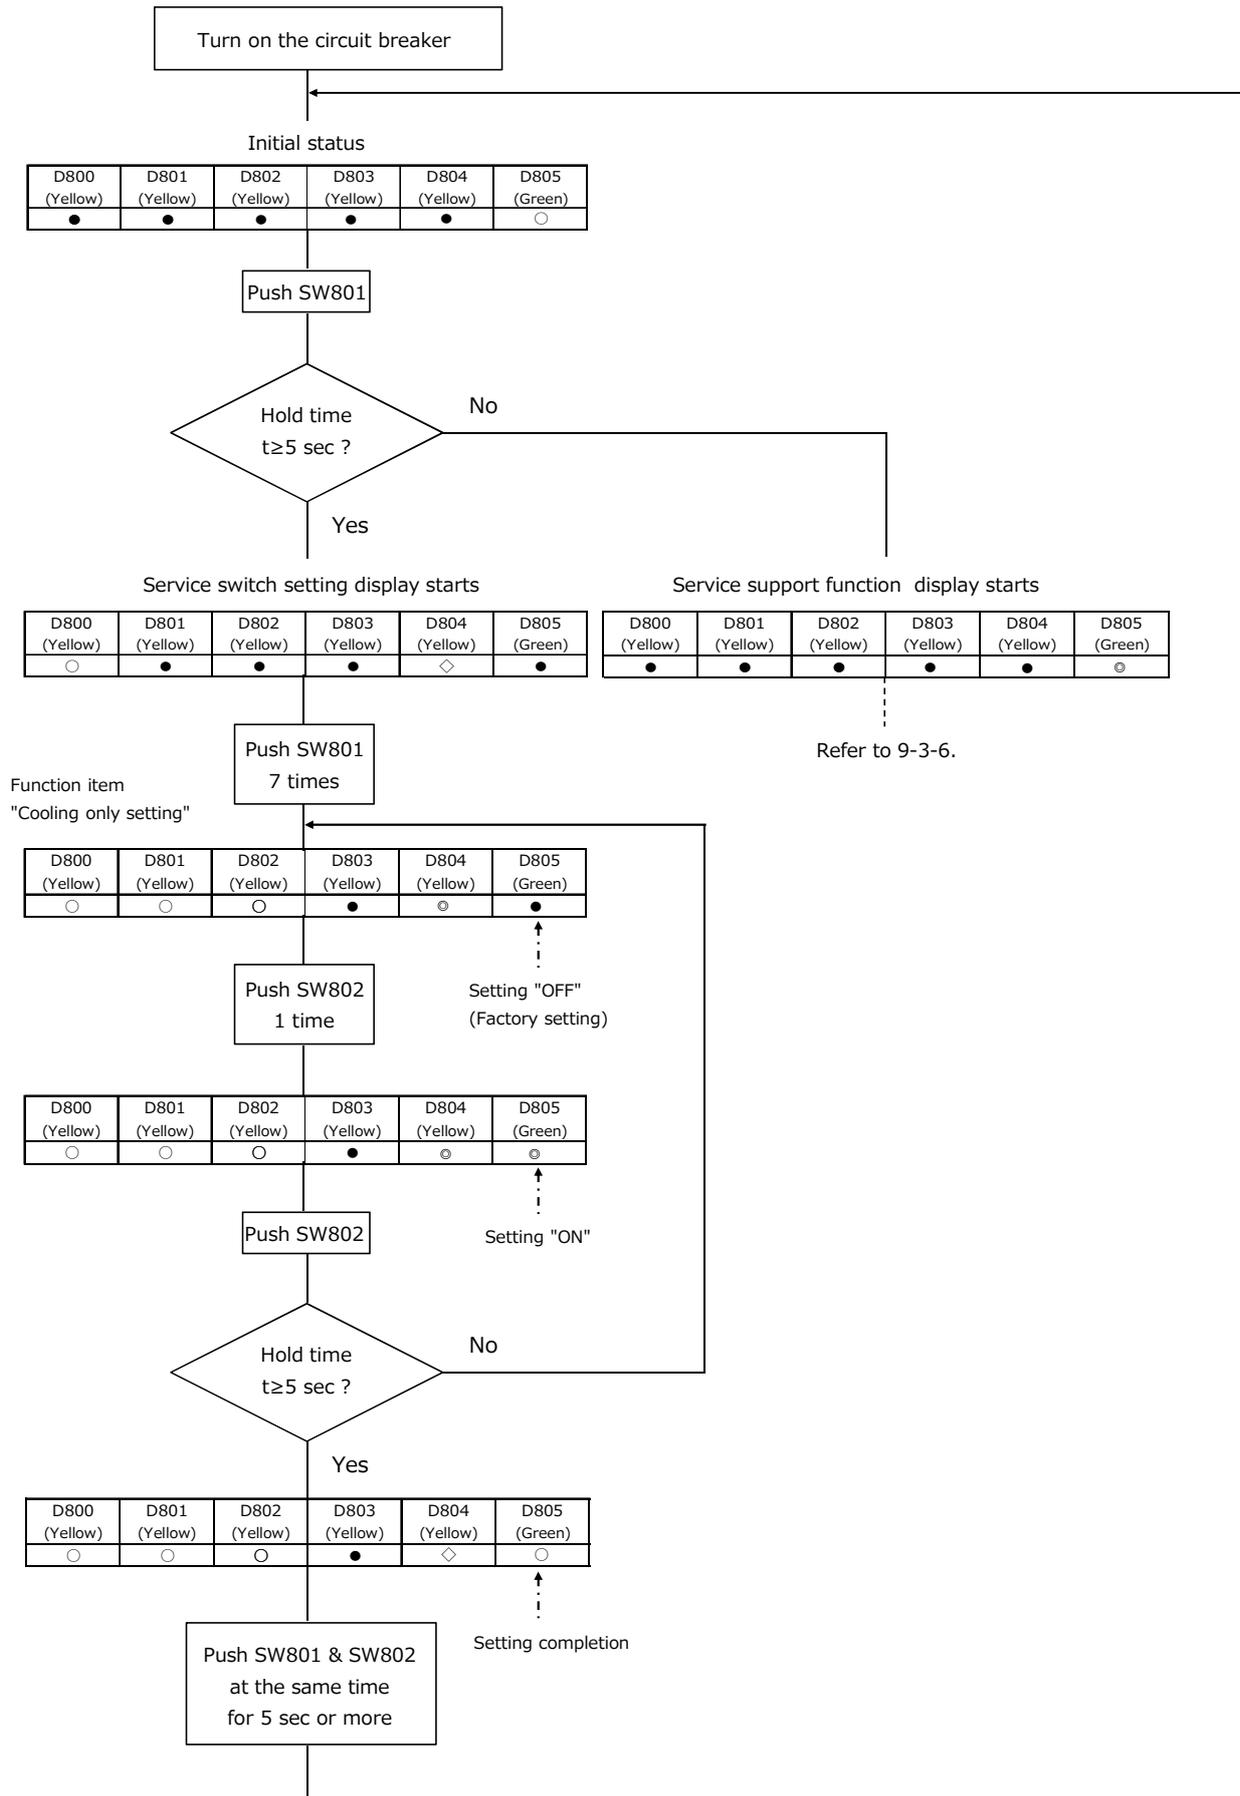○:ON, ●:OFF, ⊙:Rapid Flashing(5 times/sec), ◇:Slow Flashing(1 time/sec)



9-3-6. How to set the SERVICE SUPPORT FUNCTION.
 If you want to check the "COMPRESSOR FREQUENCY" .

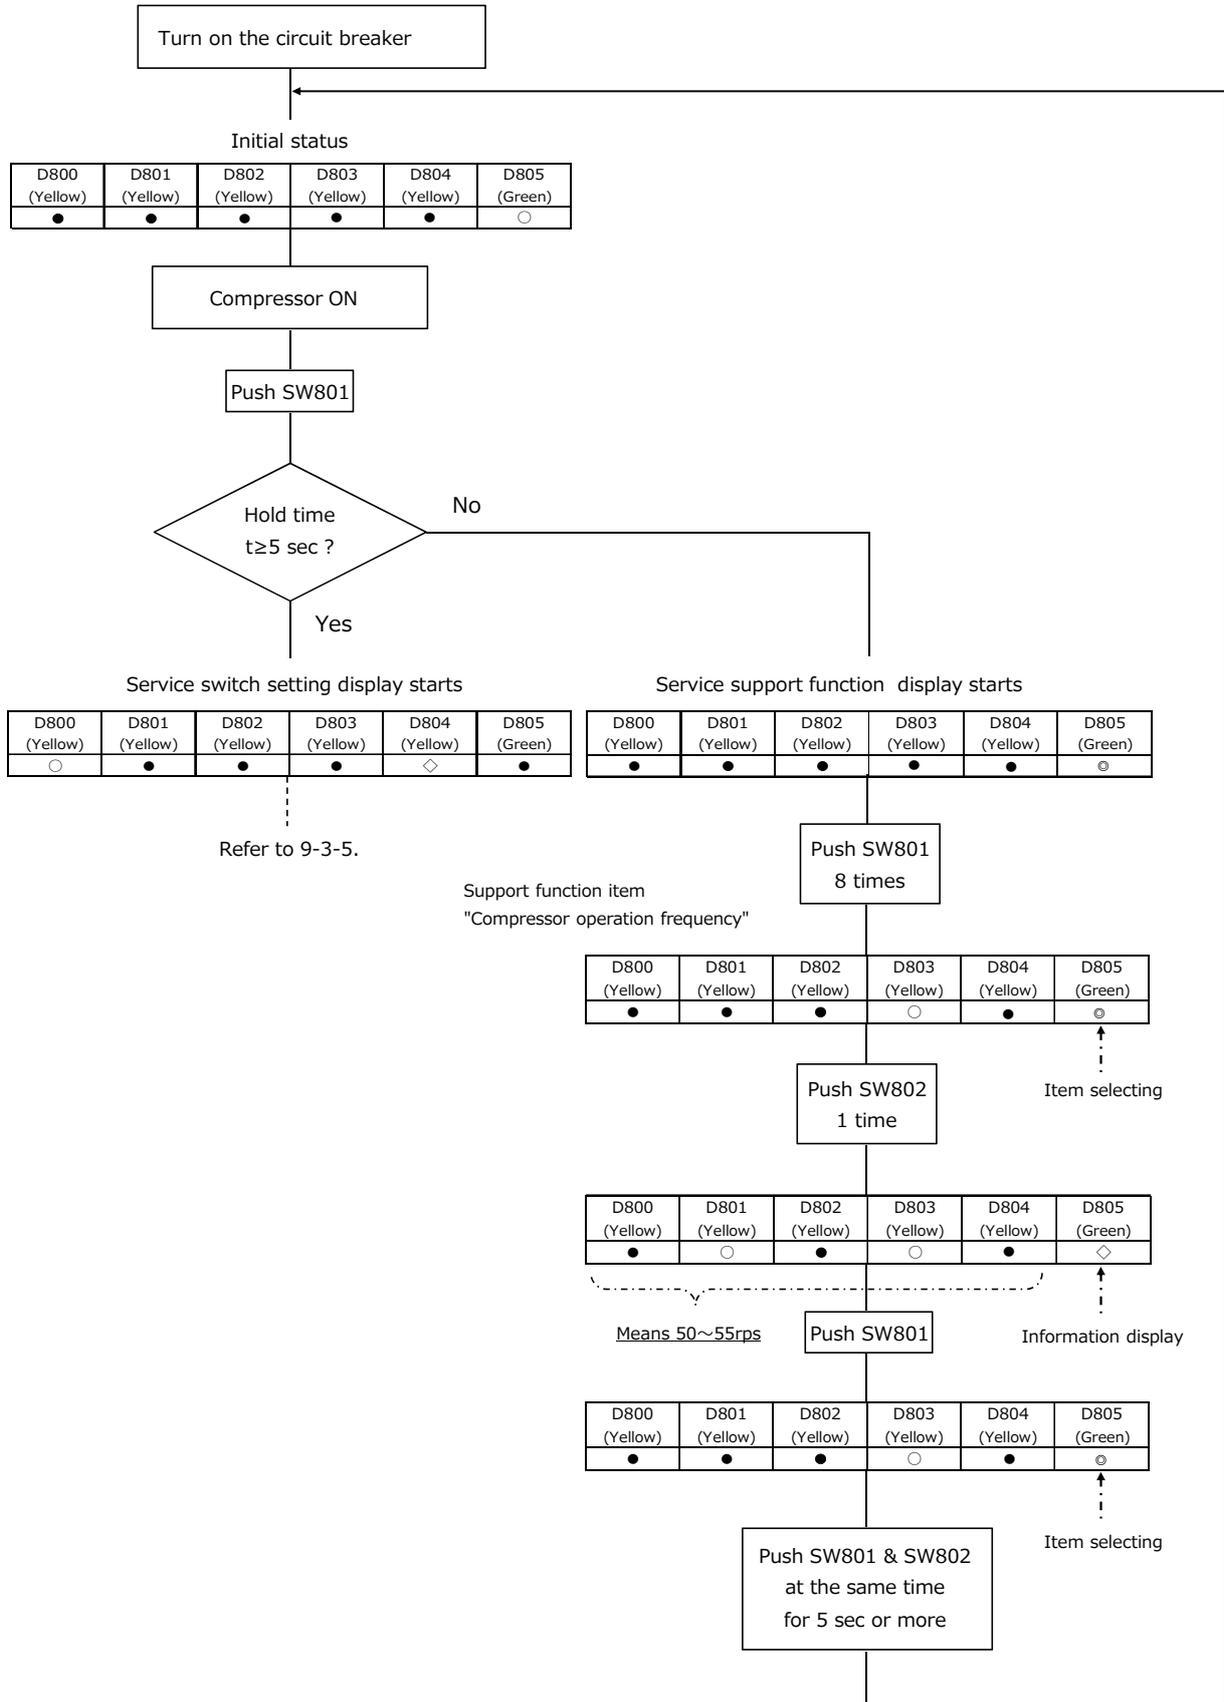○:ON, ●:OFF, ◎:Rapid Flashing(5 times/sec), ◇:Slow Flashing(1 time/sec)




9-4. Intermittent Operation Control for Indoor Fans of the Indoor Unit at Thermo-off Side in Heating Operation

While heating operation is executed in two rooms, if room temperature reached the setup temperature in one room and thermo-off occurred, the following operations start. (Refer to the figure below.)

1. The indoor unit of the room (A room) in which thermo-off did not occur starts a continuous operation with the setup number of revolution.
2. The indoor unit of the room (B room) in which thermo-off occurred starts intermittent operation of the indoor fan. The indoor fan operates with number of revolution of UL or SUL. Fan-ON time is 2 minutes and Fan-OFF time is 2 to 4 minutes.

However if temperature of the indoor heat exchanger becomes over 55°C or more in B room, the indoor fan stops the intermittent operation and starts continuous operation.

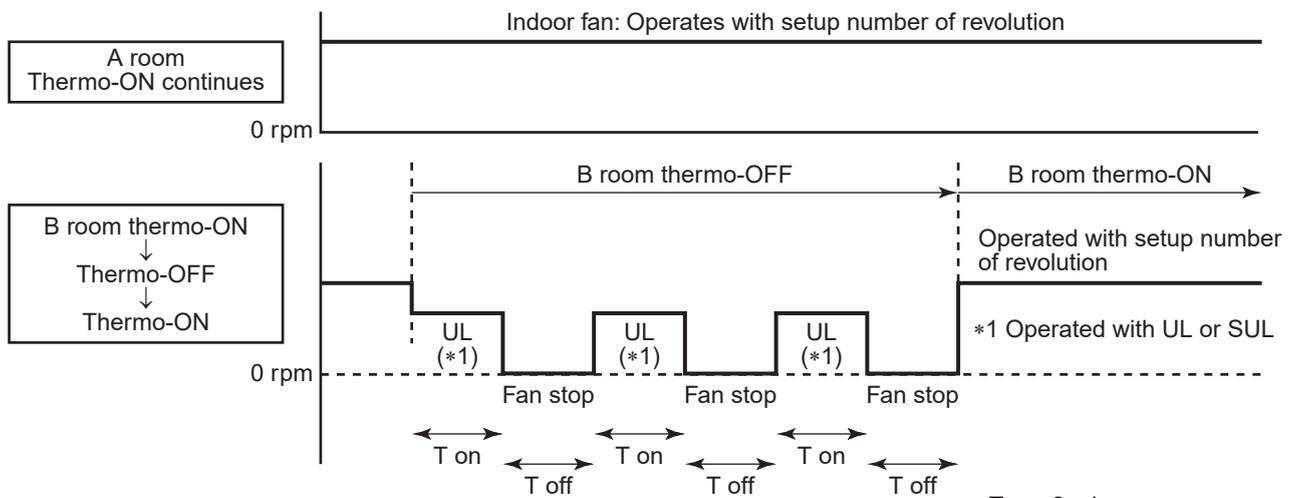While heating operation is executed in 2 rooms, if room temperature reached the setup temperature in both rooms and thermo-off occurred, both indoor units start intermittent operation of the indoor fan.



* In case which Tc sensor temperature exceeds 55°C in B room, the fan stops intermittent operation and starts continuous operation with UL or SUL (*1).

T on=2 min.

T off time	
To < 5°C	2 min.
5 ≤ To < 10	3 min.
10 ≤ To	4 min.

10. INSTALLATION PROCEDURE

10-1. Installation/Service Tools

Changes in the product and components

In the case of an air conditioner using R32, in order to prevent any other refrigerant from being charged accidentally, the service port diameter of the outdoor unit control valve (3-way valve) has been changed. (1/2 UNF 20 threads per inch)

- In order to increase the pressure resisting strength of the refrigerant piping flare processing diameter and size of opposite side of flare nuts has been changed. (for copper pipes with nominal dimensions 1/2 and 5/8)

New tools for R32 (R410A)

New tools for R32 (R410A)	Applicable to R22 model		Changes
Gauge manifold	×		As pressure is high, it is impossible to measure by means of conventional gauge. In order to prevent any other refrigerant from being charged, each port diameter has been changed.
Charge hose	×		In order to increase pressure resisting strength, hose materials and port size have been changed (to 1/2 UNF 20 threads per inch). When purchasing a charge hose, be sure to confirm the port size.
Electronic balance for refrigerant charging	○		As pressure is high and gasification speed is fast, it is difficult to read the indicated value by means of charging cylinder, as air bubbles occur.
Torque wrench (nominal diam. 1/2, 5/8)	×		The size of opposite sides of flare nuts have been increased. Incidentally, a common wrench is used for nominal diameters 1/4 and 3/8.
Flare tool (clutch type)	○		By increasing the clamp bar's receiving hole, strength of spring in the tool has been improved.
Gauge for projection adjustment	—	—	Used when flare is made by using conventional flare tool.
Vacuum pump adapter	○		Connected to conventional vacuum pump. It is necessary to use an adapter to prevent vacuum pump oil from flowing back to the charge hose. The charge hose connecting part has two ports-one for conventional refrigerant (7/16 UNF 20 threads per inch) and one for R410A. If the vacuum pump oil (mineral) mixes with R410A a sludge may occur and damage the equipment.
Gas leakage detector	×		Exclusive for HFC refrigerant.

- Incidentally, the “refrigerant cylinder” comes with the refrigerant designation R32 (R410A) and protector coating in the U. S's ARI specified rose color (ARI color code: PMS 507).
- Also, the “charge port and packing for refrigerant cylinder” require 1/2 UNF 20 threads per inch corresponding to the charge hose's port size.

CAUTION

- Incorrect wiring connection may cause electrical parts to burn out.
- Be sure to comply with local regulations/codes when running the wire from outdoor unit to indoor unit. (Size of wire and wiring method etc.)
- Every wire must be securely connected.
- If incorrect or incomplete wiring is carried out, fire or smoke may result.
- Prepare the power supply for the exclusive use of the air conditioner.

10-2. Outdoor Unit

10-2-1. Accessory and Installation Parts

Installation manual	1	
---------------------	---	---

10-2-2. Refrigerant Piping

- Piping kit used for the conventional refrigerant cannot be used.
- **Use copper pipe with 0.8 mm or more thickness.**
- Flare nut and flare works are also different from those of the conventional refrigerant. Take out the flare nut attached to the main unit of the air conditioner, and use it.

10-2-3. Installation Place

- A place which provides the spaces around the outdoor unit.
- A place where the operation noise and discharged air do not disturb your neighbors.
- A place which is not exposed to a strong wind.
- A place which does not block a passageway.
- When the outdoor unit is to be installed in an elevated position, be sure to secure its feet.
- There must be sufficient spaces for carrying the unit into and out of the site.
- A place where the drain water does not raise any problem.
- A place which can bear the weight of the outdoor unit and does not allow an increase in noise level and vibration.

CAUTION

1. Install the outdoor unit without anything blocking the air discharging.
2. When the outdoor unit is installed in a place exposed always to a strong wind like a coast or on a high story of a building, secure the normal fan operation using a duct or a wind shield.
3. Especially in windy area, install the unit to prevent the admission of wind.

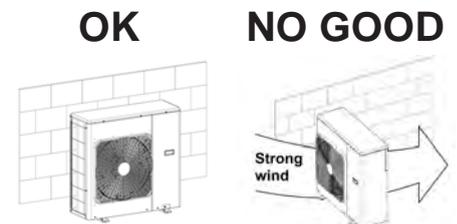


Fig. 10-2-1

4. Installation in the following places may result in trouble. Do not install the unit in such places.
 - A place full of machine oil.
 - A place full of sulfide gas.
 - A place where high-frequency waves are likely to be generated as from audio equipment, welders, and medical equipment.
 - A saline-place such as a coast.

10-2-4. Installation Parts (Local Supply)

Parts name	Specification			Q'ty
Refrigerant piping*4	Indoor unit (abbreviation)	Liquid side (O.D.)	Gas side (O.D.)	1 ea.
	05, 07, 10, 13	6.35 mm	9.52 mm	
	18, 24, 26	6.35 mm	12.7 mm	
Putty, PVC tapes	—			1 ea.

*4 Refrigerant piping covered with insulating material (Polyethylene form, 6 mm thick) When duct-type or cassette-type unit is to be installed, it shall be covered with thicker insulating material (Polyethylene form, 10 mm thick)

*1 If the air conditioner is used in conditions other than the above, the safety protection functions may be activated.

* Example of indoor unit class: RAS-M10U2KCVG-SG1 is abbreviated as "10"

	Indoor unit class	Standard connecting pipe diameter
E	10 or 13	6.35, 9.52 mm
D	10 or 13	6.35, 9.52 mm
C	10 or 13 or 18*2	6.35, 9.52 mm
B	10*3 or 13*3 or 18 or 24 or 26	6.35, 12.7 mm
A	10*3 or 13*3 or 18 or 24 or 26	6.35, 12.7 mm
Total	75 (RAS-5M51U2ACVG-SG)	—

All combinations that do not exceed the "Total" number can be installed.

More than 2 indoor units must be connected to an outdoor unit.

When 2 indoor units are connected to an outdoor unit, note that some combinations of indoor units are not compatible. For the further details, refer to the catalogue.

*2 Need the reducer (12.7 to 9.52 mm).

*3 Need the expander (9.52 to 12.7 mm).

• Locally procured.

10-2-5. Installation

■ Installation Location

- A place which can bear the weight of the outdoor unit and does not cause an increase in noise level and vibration.
- A place where the operation noise and air discharge do not disturb neighbours.
- A place which is not exposed to strong wind.
- A place free of combustible gas.
- A place which does not block a passageway.
- A place where the drain water does not cause any problems.
- A place where there are no obstructions near its air intake or air discharge.

Installation in the following places may result in trouble:

- A place with a lot of machine oil.
- A place with saline-rich atmosphere such as a coastal area.
- A place with high level of sulfide gas.
- A place where high-frequency waves are likely to be generated, such as from audio equipment, welders, or medical equipment.

Do not install the unit in such places.

⚠ CAUTION

When the outdoor unit is installed in a place where the drain water might cause any problems, Seal the water leakage point tightly using a silicone adhesive or caulking compound.

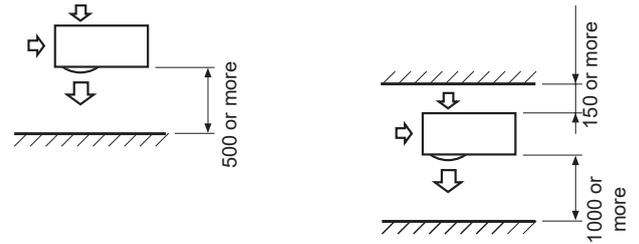
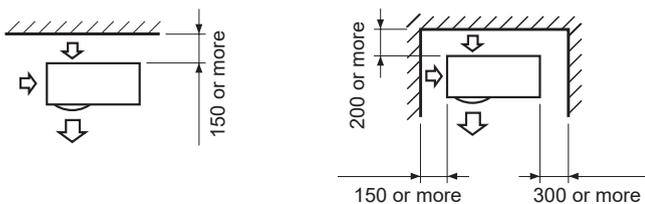
■ Precautions for Installation

- When the outdoor unit is to be installed in an elevated position, be sure to secure its feet.
- If the outdoor unit is to be mounted on a wall, make sure the base plate supporting it is sturdy enough.
- The base plate should be designed and manufactured to maintain its strength over a long period of time, and sufficient consideration should be given to ensure that the outdoor unit will not fall.
- When the outdoor unit is installed in a place that is always exposed to strong wind such as a coastal area or on a high story of a building, secure the normal fan operation using a duct or a wind shield.
- Especially in windy areas, install the unit in such a way as to prevent the admission of wind.
- When the outdoor unit is to be mounted high on a wall, take particular care to ensure that parts do not fall, and that the installer is protected.
- When doing installation work at ground level, it is usual to make wiring and pipe connections to the indoor units first, and then to make connections to the outdoor units. However, if outdoor work is difficult, you can change the procedure. For example, by making adjustments to the wiring and piping lengths on the inside (rather than the outside).


Necessary Space for Installation

If you need to install the outdoor unit in a location where there are some obstructions or a wall, secure sufficient space as shown in the figure below. The cooling effect may be reduced by 10%.

Upper side view (Unit: mm)




Side view (Unit: mm)

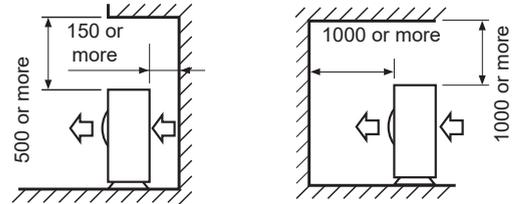


Fixing the Outdoor Unit

Fix the outdoor unit using attachment bolts.

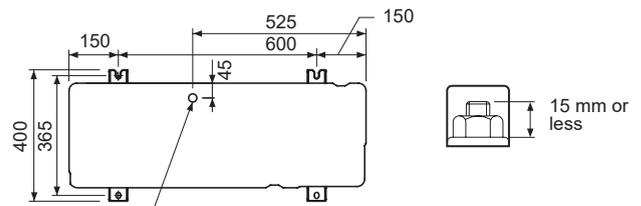- Use 8 mm or 10 mm anchor bolts and nuts.
- Do not allow the attachment bolts to protrude by more than 15 mm.
- Install the outdoor unit at ground level.
- Attach the vibration-proof rubber pads under the fixing legs.



Drain nipple mounting hole

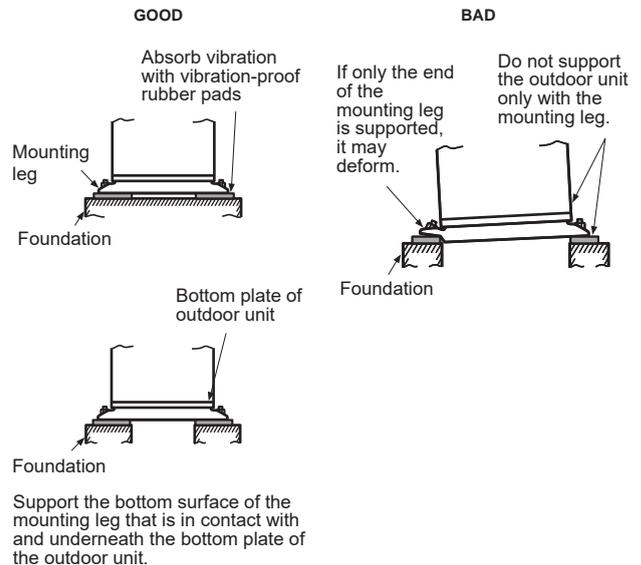

12-2-6. Refrigerant piping

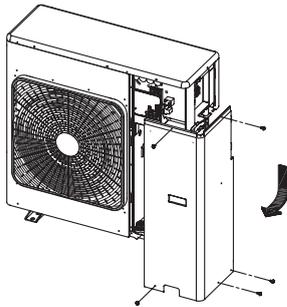
CAUTION

Install in rooms that are 13 m³ or larger. If a leak of refrigerant gas occurs inside the room, an oxygen deficiency may occur.

■ Detaching the Front Panel

Remove the 5 screws.

- Pull out the front panel according to the direction of the arrows on the illustration below.



■ Refrigerant Piping Connection

Flaring

1. Cut the pipe with a pipe cutter.



2. Remove the burr inside of the pipe.

When removing the burr, be careful so that chips do not fall into the pipe.

3. Remove the flare nuts attached to the outdoor/indoor unit, then insert the into each of the pipes.

4. Flare the pipes.

See the following table for the projection margin (A) and flaring size (B)



Pipe		A		B	Flare Nut		
Outside diameter	Thickness	Rigid (clutch type) R32 tool	Imperial (wing nut type) R32 tool		Width across fla	Tighten torque	
mm	mm	mm	mm	mm	mm	N•m	kgf•m
6.35	0.8	0 to 0.5	1.5 to 2.0	9.1	17	14 to 18	1.4 to 1.8
9.52	0.8	0 to 0.5	1.5 to 2.0	13.2	22	33 to 42	3.3 to 4.2
12.7	0.8	0 to 0.5	2.0 to 2.5	16.6	26	50 to 62	5.0 to 6.2

CAUTION

- Do not scratch the inner surface of the flared part when removing burrs
- Flare processing under the condition of scratches on the inner surface of flar processing part will cause refrigerant gas leak.

Pipe connecting

1. Piping connections to the outdoor unit should be arranged in the sequence A, B, C, D, E (5 rooms) starting from the bottom.
(For each piping connection, the gas pipe is on the bottom and the liquid pipe is on the top.)
2. When multiple indoor units are to be connected to the outdoor unit, make the ends of the pipes and wires from each indoor unit to ensure that they will be connected to the outdoor unit correctly.
(Problems caused by indoor units being con-nected to the outdoor unit incorrectly are very common in multiple-unit installations.)
3. The length and height difference of the connect-ing pipes between the indoor and outdoor units must be within the ranges indicated below.
 - Total piping length :

Non. Additional refrigerant 40 m
 Additional refrigerant 80 m
 41 to 80 m
 Additional 20 g of refrigerant..... Per every 1 m

- Minimum piping length :
A or B or C or D or E(5 rooms) = 3 m or more
- Maximum indoor piping length :
A or B or C or D or E(5 rooms) = 25 m or less
- Maximum piping height difference :
A or B or C or D or E(5 rooms) = 15 m or less
- Maximum piping/height difference between 2 units = 15 m or less

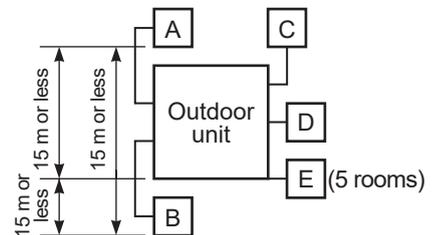


Fig. 10-2-2

4. If the outdoor units is to be mounted on a wall, make sure that the platform supporting it is sufficiently strong. The platform should be designed and manufac-tured to maintain its strength over a long period of time, and sufficient consideration should be given to ensuring that the outdoor unit will not fall.
5. When the outdoor unit is to be mounted high on a wall, take particular care to ensure that parts do not fall installer is protected.
6. When doing installation work on level ground, it is usual to wiring and piping connections to the indoor units. And/then make to the outdoor unit. However if outdoor work is difficult it is possible instead to make changes to the procedure.
For example by making adjustments to the wiring and piping length on the inside (rather than the outside).

◆ Tightening connection

Align the centers of the connecting pipes and tighten the flare nut as far as possible with your fingers.

Then tighten the nut with a spanner and torque wrench as shown in the figure.

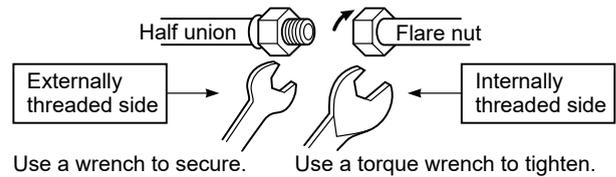


Fig. 10-2-4

⚠ CAUTION

- Do not apply excess torque. Otherwise, the nut may break.

(Unit : N·m)

Outer dia. of copper pipe	Tightening torque
Ø6.35 mm	14 to 18 (1.4 to 1.8 kgf·m)
Ø9.52 mm	33 to 42 (3.3 to 4.2 kgf·m)
Ø12.7 mm	50 to 62 (5.0 to 6.2 kgf·m)

• Tightening torque of flare pipe

The pressure of R410A is higher than R22. (Approx. 1.6 times)

Therefore securely tighten the flare pipes which connect the outdoor unit and indoor unit with the specified tightening torque using a torque wrench.

If any flare pipe is incorrectly connected, it may cause not only a gas leakage but also trouble in the refrigeration cycle.

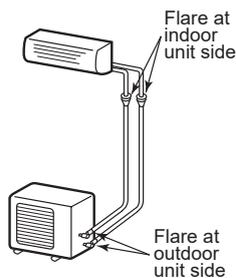


Fig. 10-2-3

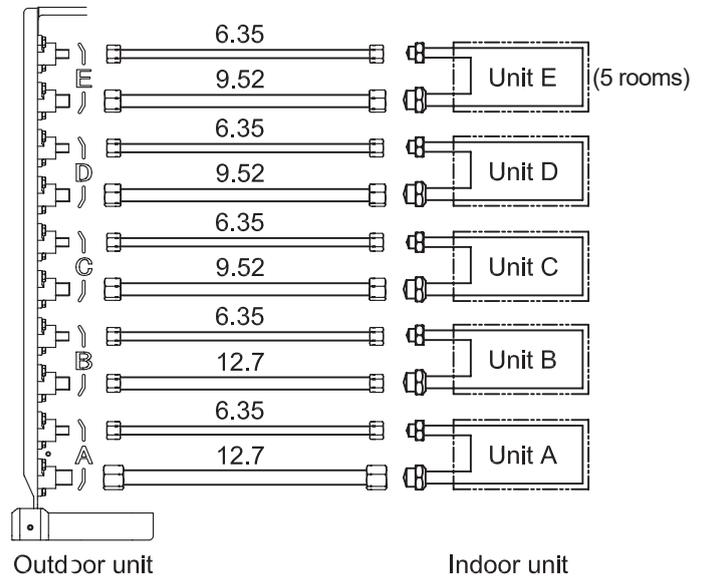


Fig. 10-2-5

Connectable capacity class				
A	B		D	E (5 rooms)
10, 13 (with reducer)		16 (with expander)		
16, 22, 24		10, 13		

Pipe connection

1. Make wire and pipe connections for each indoor unit separately.
2. Align the centres of the connecting pipes and tighten the flare nut as much as possible with your fingers, then tighten the nut using a torque wrench. Be sure to tighten the nut at the specified torque value.
 - If you use one outdoor unit for several indoor units of a different class, connect the largest one first A, then connect the rest in the order B to E.
 - Do not remove the flare nuts for any ports you are not going to use for connection.
 - Do not leave the flare nut unattached for a long period of time.
 - Use a different-diameter joint if the diameters of the connection port and connection piping are different.
 - Mount the different-diameter joint on the connection port of the outdoor unit.

⚠ CAUTION

- **KEEP IMPORTANT 6 POINTS FOR PIPING WORK.**
 - (1) Take away dust and moisture (inside of the connecting pipes).
 - (2) Tighten the connections (between pipes and unit).
 - (3) Evacuate the air in the connecting pipes using a VACUUM PUMP.
 - (4) Check gas leak (connected points).
 - (5) Be sure to fully open the packed valves before operation.
 - (6) Reusable mechanical connectors and flared joints are not allowed indoors. When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be refabricated.

■ Air Purge

From the sake of environmental protection, use a vacuum pump to extract the air during installation.

* Prepare a 4 mm hexagon wrench.

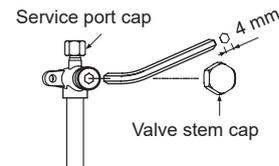
1. Connect a charge hose.
 - Make sure that the Handle Hi of the gauge manifold valve is closed fully.
 - Connect the port of the gauge manifold valve and the service port (Valve core (Setting Pin)) using the charge hose.

NOTE

If a control valve or charge valve is attached to the charge hose, leak of R32 refrigerant can be avoided.

2. Open the Handle Low of the gauge manifold valve fully, then operate the vacuum pump.
 - Loosen the flare nut of the at the gas end a little to make sure that air is taken in, then tighten the nut.
 - If you find air is not taken in, make sure that the charge hose is connected to the port(s) securely.
 - Perform extraction for about 40 minutes and make sure that the compound pressure gauge reading is -101 kPa (-76 cmHg).
 - If the compound pressure gauge reading is not -101 kPa (-76 cmHg), there is a possibility air is being taken in from the port(s).
 - Make sure that the charge hose is connected to the port(s) securely.
3. Close the Handle Low of the gauge manifold valve fully, then stop operating the vacuum pump.
 - Leave the gauge and pump as they are for 1 or 2 minutes, then make sure that the compound pressure gauge reading stays at -101 kPa (-76 cmHg).
 - You need not add refrigerant if the piping length is 40 m or less. If the length exceeds 41 m, add 20 g of refrigerant per 1 meter over.
4. Disconnect the charge hose from the service port, then open the valve stem fully using a 4 mm hexagon wrench.

Hexagon wrench is required.




5. Tighten the service valve stem cap and service port cap securely.

⚠ CAUTION

Use a torque wrench and tighten the nut at the specified torque value

6. Tighten all the caps on the valves securely, then perform a gas leak inspection.
 - The cap with the 9.52 mm outer diameter is available in two sizes in accordance with the type of packed valve for which the cap is used. The tightening torque depends on the width across flats of the cap s check it in the table below.

Service valve	mm	Tighten torque			
		Valve stem cap		Service port cap	
		N•m	kgf•m	N•m	kgf•m
Liquid side (9.52)	H19 mm	14 to 18	1.4 to 1.8	—	—
	H22 mm	33 to 42	3.3 to 4.2	—	—
Gas side (12.7)		33 to 42	3.3 to 4.2	14 to 18	1.4 to 1.8

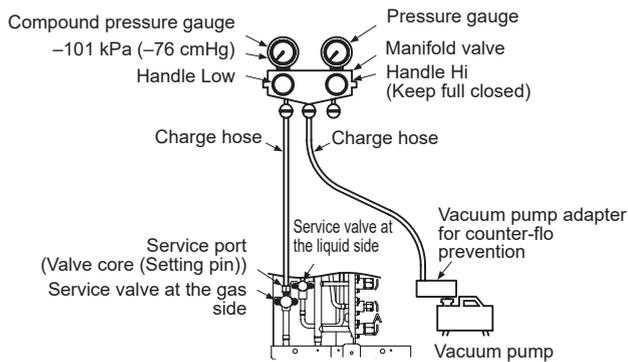

■ Charging Refrigerant

- You need not add refrigerant if the piping length is 40 m or less.
- If the length exceeds 41 m, add 20 g of refrigerant per 1 meter over .

Procedure to Charge Refrigerant

After extraction is complete, close the valves, then charge the refrigerant.

- Make sure that no operations are in progress while charging the refrigerant.
If you cannot charge the refrigerant fully, add it from the service port of the service valve at the gas end while cooling operation is in progress.

NOTE

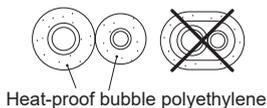
- Charge the refrigerant in a liquid state
- If you charge the refrigerant in a gas state, the air conditioner will no operate properly since the refrigerant undergoes a change in its composition.

Precautions for Adding Refrigerant

- Use a scale with a precision of at least 10 g per index line when adding the refrigerant.
Do not use bathroom scales or similar instruments.
- Use liquid refrigerant when refilling
Since the refrigerant is in liquid form, it can fill up quickl .
Therefore add the refrigerant gradually.

■ Insulation of the Refrigerant Pipes


- Insulate the refrigerant pipes for liquid and gas separately.



Underground piping: 10t
(Laying the pipes on the wall,
ceiling, or under the floor)

■ Gas Leak Inspection

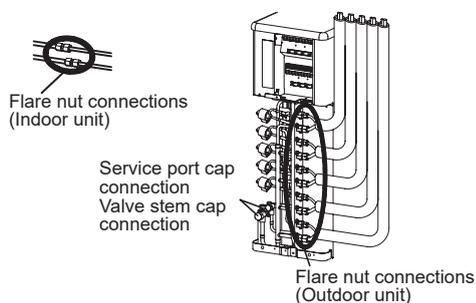- Perform a gas leak inspection for the flare nut connections, valve stem connection, and service port cap without fail.
- Use a leak detector exclusively manufactured for R32.



* Check point example (RAS-5M51U2ACVG-SG)

■ Performing Additional Installation of an Indoor Unit

1. Collect refrigerant from the outdoor unit.
2. Turn off the circuit breake .
3. Perform additional installation referring to the procedure from "Refrigerant Piping Connection" on the previous page.

12-2-7. Electrical work

⚠ WARNING

- Be sure to comply with local regulations/ codes when running the wire from the outdoor unit to the indoor unit.
(Size of wire and wiring method etc.)
- A lack of electrical capacitance or incorrect wiring may cause an electric shock or a fire
- To make sure that the wiring connection are secure, use designated cables.
- Fix the cables securely so that no external force applied to the cables may effect th terminals.
- If wiring connections are incomplete or cables are not fixed securel , it may cause a fire
- Be sure to ground the outdoor unit.
- Incomplete grounding may lead to an electric shock.

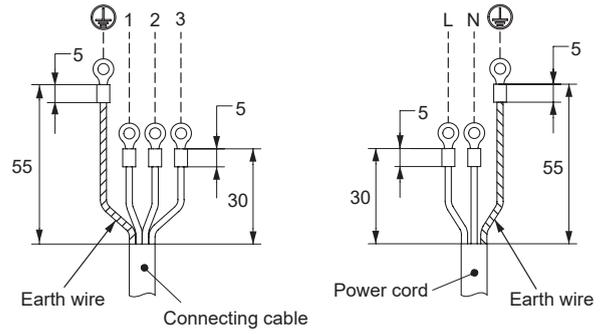
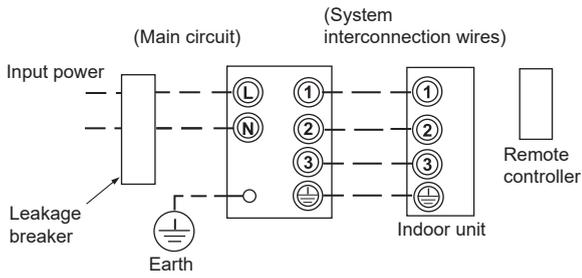
⚠ CAUTION

- Use a circuit breaker of a type that is not tripped by shock waves.
- Incorrect/incomplete wiring will cause electrical fires or smoke
- Prepare the power source for exclusive use with the air conditioner.
- This product can be connected to the main power.
Fixed wire connections:
A switch that disconnects all poles and has a contact separation of at least 3 mm must be incorporated into the fixed wiring

■ Wire Connection

- The dash lines show on-site wiring.

For indoor unit RAS-M series.





- Connect the indoor/outdoor connecting cables to the identical terminal numbers on the terminal block of each unit.
- Incorrect connection may cause a failure.

Model	RAS-5M51U2ACVG-SG
Power supply	1ph, 50Hz, 220-240V
Maximum running current	17.5A
Circuit breaker rating	25A (All types can be used)
Power cord	H07RN-F or 60245 IEC 66 3-core 4mm ²
Connecting cable	H07RN-F or 60245 IEC 66 4-core 1.5 mm ²

- Detach the front panel from the outdoor unit.
- Remove the cord clamp.
- Connect the wires for the power source and each indoor unit.
 - Connect the connecting cable to the terminal as identified by the matching numbers on the terminal block of the indoor and the outdoor unit.
- Fix the wiring connections for the power source and each indoor unit securely using a cord clamp.
- Attach the front panel to the outdoor unit.

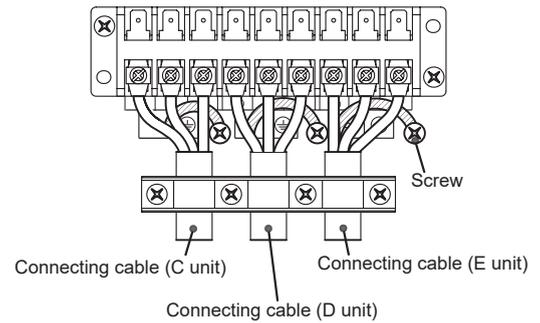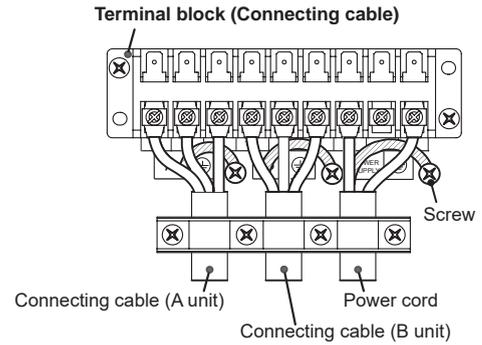Stripping Length of connecting cable for outdoor unit




* Connection example (RAS-5M51U2ACVG-SG)


■ Important instruction

To all installers

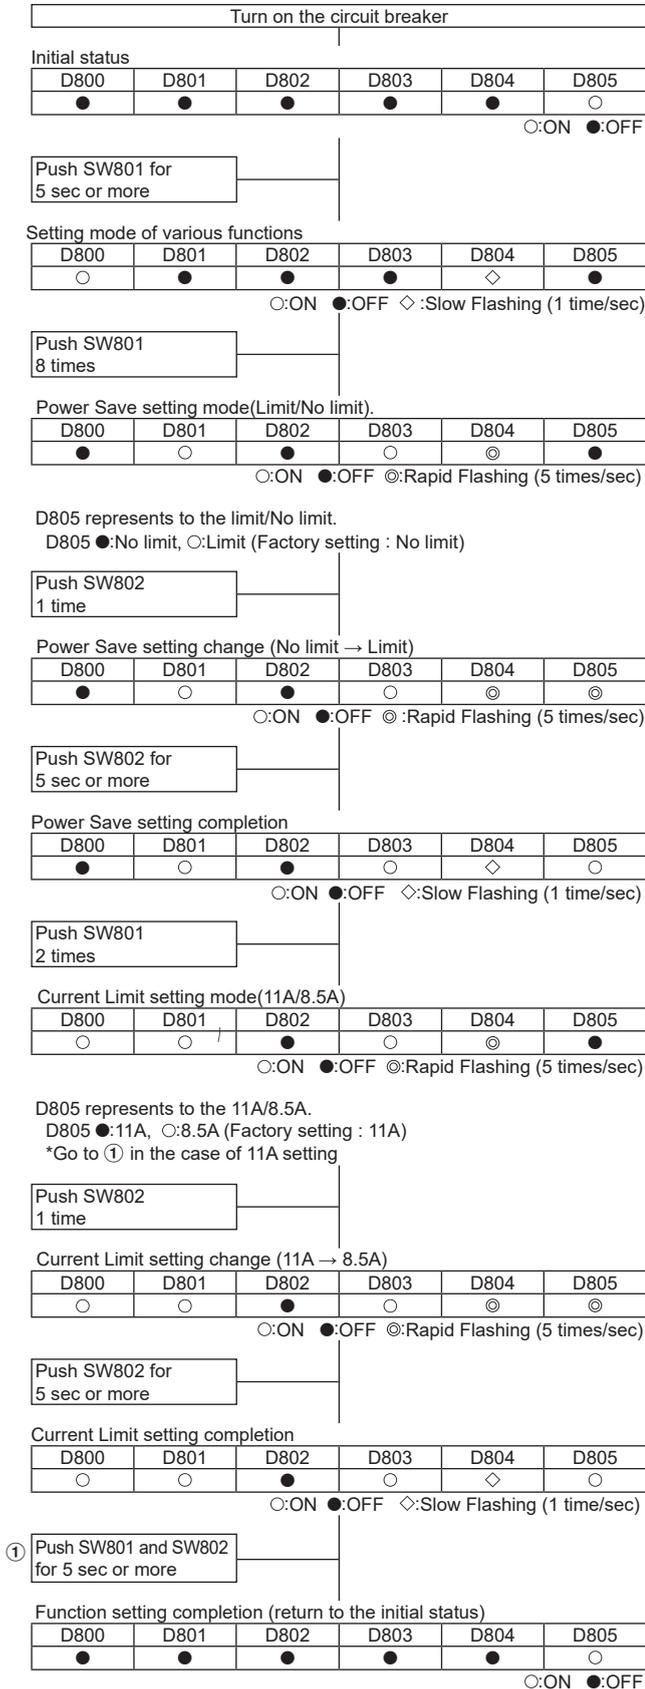Please be reminded that all air conditioners installed at HDB flats are subjected to a current restriction of 11A or 8.5A.
It is the installer's responsibility to have to current release control set correctly for the type of HDB flat which the IMS unit is installed.
The setting method is the following.
For details refer also to the service manual.


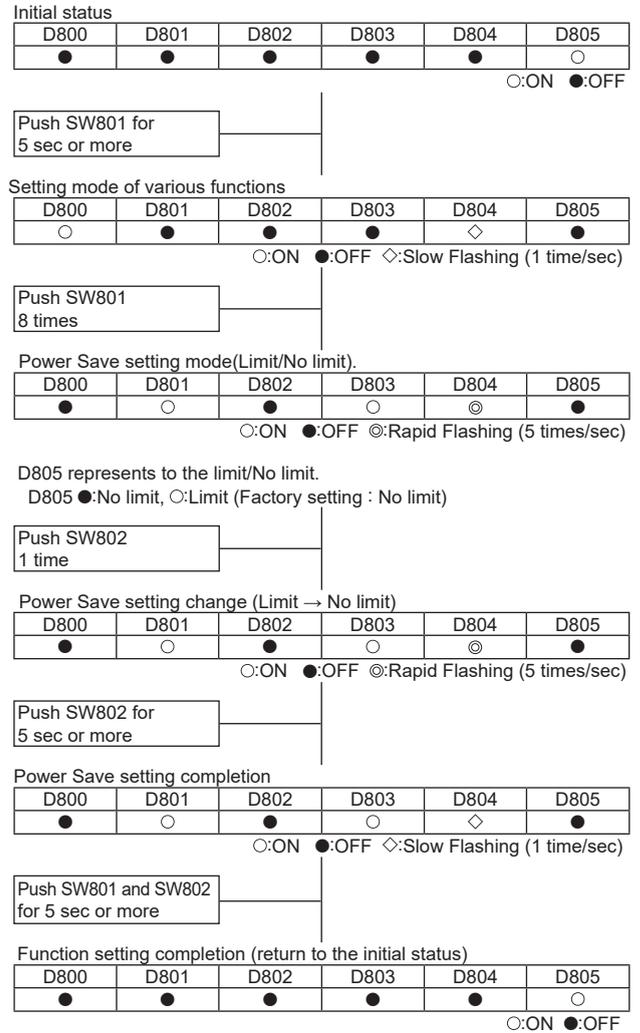
<Cancellation method of Power Save setting >



Notice

- If an unknown point generated on the way of the operation, push and hold SW801 and SW802 for 5 seconds or more simultaneously. You can return to the initial status.

12-2-8. Grounding

This air conditioner must be grounded without fail.

- Grounding is necessary not only to safeguard against the possibility of receiving an electric shock but also to absorb both static, which is generated by high frequencies and held in the surface of the outdoor unit, and noise since the air conditioner incorporates a frequency conversion device (called an inverter) in the outdoor unit.
- If the air conditioner is not grounded, users may receive an electric shock if they touch the surface of the outdoor unit and that unit is charged with static.

12-2-9. Test run

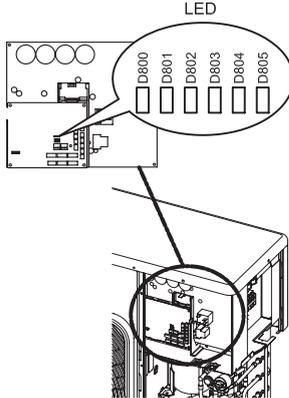
■ Wiring/Piping Check

⚠ CAUTION



Electric current is applied on the control board. Beware of electric shock.

1. Detach the front panel of the outdoor unit.
Do not remove the air discharge grille.



2. Turn on the circuit breaker to supply electricity.
In the initial LED display status, D805 is lighted as below.

○ : ON, ● : OFF, ⊙ : Rapid Flashing (5 times/sec.),
◇ : Slow Flashing (1 time/sec.)

D800	D801	D802	D803	D804	D805
●	●	●	●	●	○

Start running all the indoor units connected to the outdoor unit in the cooling mode.
(The indoor unit in the room that doesn't operate the cooling mode cannot be checked.)

3. After 5 minutes, hold down SW801 for at least 5 seconds, and check that D800 is lighted and D804 light is flashing (1 time/sec.)

D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

4. Press the SW801 4 times until the LED is displayed as below.

D800	D801	D802	D803	D804	D805
●	●	○	●	⊙	●

5. Press SW802 for 1 times. Then D805 light is flashing (5 times/sec.)

D800	D801	D802	D803	D804	D805
●	●	○	●	⊙	⊙

6. Hold down SW802 for at least 5 seconds. Then the wiring/piping check starts automatically. (The LED display is lighted for a moment.)

D800	D801	D802	D803	D804	D805
●	●	○	●	◇	○

- If no problems are detected, the checking operation returns to the normal operation automatically. The LED is displayed as below.

D800	D801	D802	D803	D804	D805
●	●	●	●	●	○

7. The below is displayed when the error is detected.
(* Repetition of 3 sec ON / 0.5 sec OFF)

D800	D801	D802	D803	D804	D805
○*	○*	○*	○*	○*	○

Press the SW801 3 times until the LED is displayed as below, to check the room judged as error.

D800	D801	D802	D803	D804	D805
●	○	●	●	●	⊙

Incorrect wiring/piping can be checked by pressing SW802. The LED is displayed as below. Turn off the circuit breaker, then check wiring/piping again.

○ : ON, ● : OFF, ⊙ : Rapid Flashing (5 times/sec.),
◇ : Slow Flashing (1 time/sec.)

	LED						Description
	D800	D801	D802	D803	D804	D805	
Check results	●	●	●	●	●	◇	Normal operation (no error)
	○	●	●	●	●	◇	Trouble in unit A
	●	○	●	●	●	◇	Trouble in unit B
	●	●	○	●	●	◇	Trouble in unit C
	●	●	●	○	●	◇	Trouble in unit D
	●	●	●	●	○	◇	Trouble in unit E
	○	○	●	●	●	◇	Trouble in units A and B
	○	●	○	●	●	◇	Trouble in units A and C
	○	○	●	○	●	◇	Trouble in units A and D
	○	●	●	○	○	◇	Trouble in units A and E
	●	○	○	●	●	◇	Trouble in units B and C
	●	○	●	○	●	◇	Trouble in units B and D
	●	○	●	●	○	◇	Trouble in units B and E
	●	●	○	○	●	◇	Trouble in units C and D
	●	●	○	●	○	◇	Trouble in units C and E
	●	●	●	○	○	◇	Trouble in units D and E
	○	○	○	●	●	◇	Trouble in units A, B, and C
	○	○	●	○	●	◇	Trouble in units A, B, and D
	○	○	●	●	○	◇	Trouble in units A, B, and E
	○	●	○	○	●	◇	Trouble in units A, C, and D
	○	●	○	●	○	◇	Trouble in units A, C, and E
	○	●	●	○	○	◇	Trouble in units A, D, and E
	●	○	○	○	●	◇	Trouble in units B, C, and D
	●	○	○	●	○	◇	Trouble in units B, C, and E
	●	○	●	○	○	◇	Trouble in units B, D, and E
	●	●	○	○	○	◇	Trouble in units C, D, and E
	○	○	○	○	●	◇	Trouble in units A, B, C, and D
	○	○	○	●	○	◇	Trouble in units A, B, C, and E
	○	○	●	○	○	◇	Trouble in units A, B, D, and E
	○	●	○	○	○	◇	Trouble in units A, C, D, and E
●	○	○	○	○	◇	Trouble in units B, C, D, and E	
○	○	○	○	○	◇	"Trouble in all units Service valve stays closed"	

- The D800 LED represents unit A.
- The D801 LED represents unit B.
- The D802 LED represents unit C.
- The D803 LED represents unit D.
- The D804 LED represents unit E.

8. When you want to start over the operation of the SW801 and SW802, press the SW801 and the SW802 at the same time for 5 sec. (The procedure will set back to step 3.) However, do not execute the operation during the check. If by any chance the check is stopped by the operation, start over the check after turning off the power once

9. Notes

- It sometimes takes about 30 minutes maximum for the check.
- During the check, the compressor and the fan of the outdoor/indoor unit repeat ON/OFF.
- You cannot check wiring/piping when the external temperature is 5°C or less. Also, there is a possibility to misjudge if the indoor temperature becomes too low by cooling operation. In that case, execute the cooling operation for per room and check if the connection is normal.

■ Gas Leak Inspection

Refer to the "■ Gas Leak Inspection"

■ Test run

1. If you perform the test run in summer, start running in the cooling mode first to decrease the temperature of the room, then run in the heating mode. (Heating mode: Set the temperature to 30°C.)
 - If you perform the test run in winter, start running in the heating mode first to increase the temperature of the room, then run in the cooling mode. (Cooling mode: Set the temperature to 17°C.)
2. For the test run, be sure to satisfy the following conditions below:
 - Perform the test run for each indoor unit respectively.
 - Perform the test run for about 10 minutes in both the cooling mode and the heating mode.
 - You can perform the test run in the cooling/heating mode by utilizing the thermo sensor of the indoor unit.
Cooling mode: Warm the thermo sensor using an appliance such as a hair dryer.
Heating mode: Put a cold towel on the thermo sensor.

■ Instructions for the Customers

- Explain to the customers the proper operation procedure and let them operate the air conditioner along with the supplied instruction manual.
- When multiple indoor units are connected to the outdoor unit, the cooling mode and the heating mode are not available at the same time. When multiple indoor units are running at the same time, the operation mode of the unit which starts running first is applied to the other units
- When you start running the indoor unit or change the operation mode, the unit starts running after 3 minutes. This is due to the protection function of the unit, not a malfunction.
- When the external temperature becomes low, the pre-heating of the compressor starts to protect it. Keep the circuit breaker on for use. The electricity consumption during pre-heating is about 100 W. If the circuit breaker is turned off, the indoor unit may not start running for about 11 minutes.
- Electronic expansion valves are used for the outdoor unit. When you turn on the power, the outdoor unit starts clattering every 1 or 2 months. This clattering is not a malfunction, but occurs when the unit is returning to the default setting for optimised control.
- While an indoor unit is running in the heating mode, the outdoor unit supplies refrigerant to the other indoor units which are not running. Therefore, noise may come from the other indoor units or the exterior of them may become warm.

■ Pump-down Operation (Recovering refrigerant)

⚠ CAUTION

Since the forcible running for collecting refrigerant stops automatically after 10 minutes, finish collecting refrigerant within 10 minutes.



Electric current is applied on the control board. Beware of electric shock.


- The following must be certainly done during pump down.
 - Do not incorporate air into the refrigeration cycle.
 - Close the 2 service valves. Stop the compressor and remove the refrigerant pipe.
- If the refrigerant pipe is removed when the compressor is operating and service valves are opened, the refrigerant cycle will inhale unwanted matter such as air and the pressure in the cycle becomes abnormally elevated. It may cause a burst or injury.

- Detach the front panel. Do not remove the air discharge grille.
- Turn on the circuit breaker to supply electricity. In the initial LED display status, D805 is lighted as below.

○ : ON, ● : OFF, ⊙ : Rapid Flashing (5 times/sec.), ◇ : Slow Flashing (1 time/sec.)

D800	D801	D802	D803	D804	D805
●	●	●	●	●	○

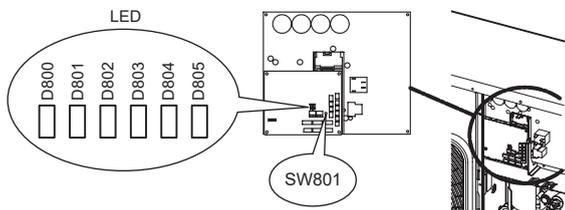Start running all the indoor units connected to the outdoor unit in the cooling mode. The checking procedure cannot be completed if the cooling mode is not operated in every indoor units.



- Hold down SW801 for at least 5 seconds, and check that D800 is lighted and D804 light is flashing (1time/sec.)

D800	D801	D802	D803	D804	D805
○	●	●	●	◇	●

- Press SW801 for 1 time. Then D804 light is flashing (5 times/sec.)

D800	D801	D802	D803	D804	D805
○	●	●	●	⊙	●

- Press SW802 for 1 time. Then D805 light is flashing (5 times/sec.)

D800	D801	D802	D803	D804	D805
○	●	●	●	⊙	⊙

- Hold down SW802 for at least 5 seconds. Then outdoor unit start cooling mode. (The display is kept during the refrigerants collection operation.)

D800	D801	D802	D803	D804	D805
○	●	●	●	◇	○

- Close the valve stem of the service valve at the liquid end.
- Make sure that the compound pressure gauge reading is -101 kPa (-76 cmHg)
- Close the valve stem of the service valve at the gas end.
- The refrigerants collection operation is finished in maximum 10 minutes. After the collection is finished, promptly stop the operation of all th indoor unit. (There are cases that the compressor restarts.)
- When you want to start over the operation of the SW801 and SW802, press the SW801 and SW802 at the same time for 5 sec. (It back to the initial condition of 3.) However, do not execute the operation during the refrigerants collection. If by any chance the collection is stopped by the operation, start over the refrigerants collection operation.

12-2-10. Troubleshooting

You can perform fault diagnosis of the outdoor unit with the LEDs on the P.C. board of the outdoor unit in addition to using the check codes displayed on the remote controller of the indoor unit. Use the LEDs and check codes for various checks. Details of the check codes displayed on the remote controller of the indoor unit are described in the Installation Manual of the indoor unit.

LED displays and check codes

○ : ON (○* : 3 sec ON/0.5 sec OFF) ● : OFF

Indoor check code	Display						Description
	D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)	D805 (GN)	
-	●	●	●	●	●	●	Normal operation (no error)
1C	○*	●	●	●	●	●	Compressor case thermostat error
21	●	○*	●	●	●	●	High pressure switch error
1C	○*	○*	●	●	●	●	Compressor system error
1d	●	●	○*	○*	●	●	Compressor lock
1F	○*	●	○*	●	●	●	Compressor breakdown
14	●	○*	○*	●	●	●	Driving element short circuit
16	○*	○*	○*	●	●	●	Position detection circuit error
17	●	●	●	○*	●	●	Current detection circuit error
1C	○*	●	●	○*	●	●	Communication error between MCU
1A	●	○*	●	○*	●	●	Fan system error
1E	○*	○*	○*	○*	●	●	Discharge temperature error
19	●	●	○*	○*	●	●	Discharge temperature sensor (TD) error
1b	○*	●	○*	○*	●	●	Outdoor air temperature sensor (TO) error
18	●	○*	○*	○*	●	●	Suction temperature sensor (TS) error
18	○*	○*	○*	○*	●	○	Heat exchanger temperature sensor (TE) error
1C	○*	●	●	●	○*	●	Gas pipe (unit A) temperature sensor (TGA) error
1C	○*	○*	●	●	○*	●	Gas pipe (unit B) temperature sensor (TGB) error
1C	○*	○*	●	●	○*	●	Gas pipe (unit C) temperature sensor (TGC) error
1C	○*	○*	●	●	○*	●	Gas pipe (unit D) temperature sensor (TGD) error
1C	○*	●	○*	●	○*	●	Gas pipe (unit E) temperature sensor (TGE) error
-	○*	●	○*	○*	○*	○*	PMV error (SH \geq 20)
-	●	○*	○*	●	○*	○*	PMV error (SH \leq -8)
20	●	●	●	○*	○*	○*	PMV leakage error (unit A)
20	○*	●	●	○*	○*	○*	PMV leakage error (unit B)
20	●	○*	●	○*	○*	○*	PMV leakage error (unit C)
20	○*	○*	●	○*	○*	○*	PMV leakage error (unit D)
20	●	●	○*	○*	○*	○*	PMV leakage error (unit E)
-	○*	●	○*	○*	○*	○*	Miswiring (mispiping) check error
1C	●	○*	○*	○*	○*	○*	Communication error between MCU
1C	○*	○*	○*	○*	○*	○*	Communication error between MCU

*1 : Back-up operation is performed without error display of the indoor unit.

*2 : Operated normally when the air conditioners in other rooms are driven.

- The D800 LED represents unit A.
- The D801 LED represents unit B.
- The D802 LED represents unit C.
- The D803 LED represents unit D.
- The D804 LED represents unit E.

10-3. Test Operation

10-3-1. Gas Leak Test

Check the flare nut connections for gas leaks with a gas leak detector and/or soapy water.

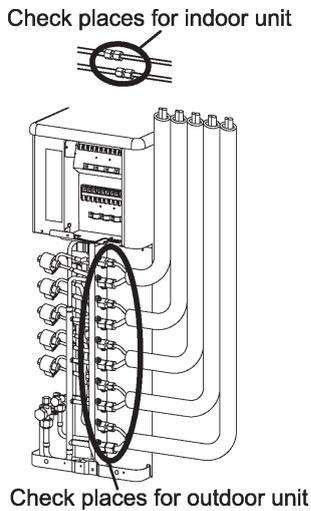


Fig. 10-3-1

10-3-2. Test Operation

To switch the TEST RUN (COOL) mode, press RESET button for 10 sec.
(The beeper will make a short beep.)

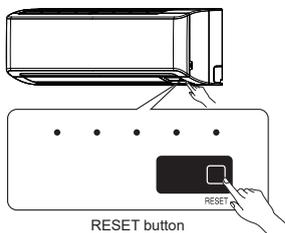


Fig. 10-3-2

10-3-3. Setting the Auto Restart

This product is designed so that, after a power failure, it can restart automatically in the same operating mode as before the power failure.

NOTE

The product was shipped with Auto Restart function in the OFF position. Turn it ON as required.

- 1) Push and hold the RESET button for about 3 seconds. After 3 seconds, three short electric beeps will be heard to inform you that the Auto Restart has been selected.
- 2) To cancel the Auto Restart, follow the steps described in the section Auto Restart Function of the Owner's Manual.

10-3-4. Remote Control A-B Selection

- When two indoor units are installed in the same room or adjacent two rooms, if operating a unit, two units may receive the remote control signal simultaneously and operate. In this case, the operation can be preserved by setting either one remote control to B setting. (Both are set to A setting in factory shipment.)
- The remote control signal is not received when the settings of indoor unit and remote control are different.
- There is no relation between A setting/B setting and A room/B room when connecting the piping and cables.

<Remote control A-B selection>

To separate using of remote control for each indoor unit in case of 2 air conditioners are installed nearby.

<Remote Control B Setup>

1. Press [RESET] button on the indoor unit to turn the air conditioner ON.
2. Point the remote control at the indoor unit
3. Push and hold [CHECK] button on the Remote Control by the tip of the pencil. "00" will be shown on the display (Picture ①)
4. Press [MODE] during pushing [CHECK]. "B" will show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote Control B is memorized [Picture ②].

- NOTE :**
1. Repeat above step to reset Remote Control to be A.
 2. Remote Control A has not "A" display
 3. Default setting of Remote Control from factory is A.

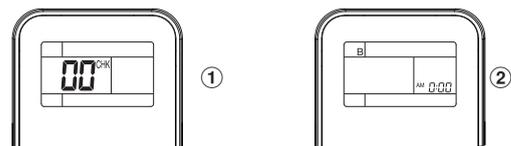


Fig. 10-3-3

11. HOW TO DIAGNOSE THE TROUBLE

The pulse modulating circuits are mounted to both indoor and outdoor units.

Therefore, diagnose troubles according to the trouble diagnosis procedure as described below.

(Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

Table 11-1

No.	Troubleshooting Procedure	Page
1	First Confirmation	61
2	Primary Judgment	62
3	Judgment by Flashing LED of Indoor Unit	62
4	Self-Diagnosis by Remote Controller (Check Code)	63
5	Judgment of Trouble by Symptom	70
6	Trouble Diagnosis by Outdoor LED	72
7	Inspection of the Main Parts	80
8	Outdoor Unit	80
9	How to Simply Judge Whether Outdoor Fan Motor is Good or Bad	81

NOTE

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge (charging voltage DC280V to 373V) remains and discharging takes a lot of time (for more than 5 minutes). After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused.

Discharge the electrolytic capacitor completely by using solder iron, etc.

WARNING

The electrolytic capacitor may not normally discharge according to error contents and the voltage may remain. Therefore, be sure to discharge the capacitor.

WARNING

For discharging, never use a screwdriver and others for short-circuiting between + and – electrodes, As the electrolytic capacitor is one with a large capacity, it is very dangerous because a large electric spark will occur.

<Discharging method>

Connect the discharge resistance (approx. 100Ω/40W) or plug of the soldering iron to voltage between + and – of C13 on the main P.C. board MCC-1571, and then perform discharging.

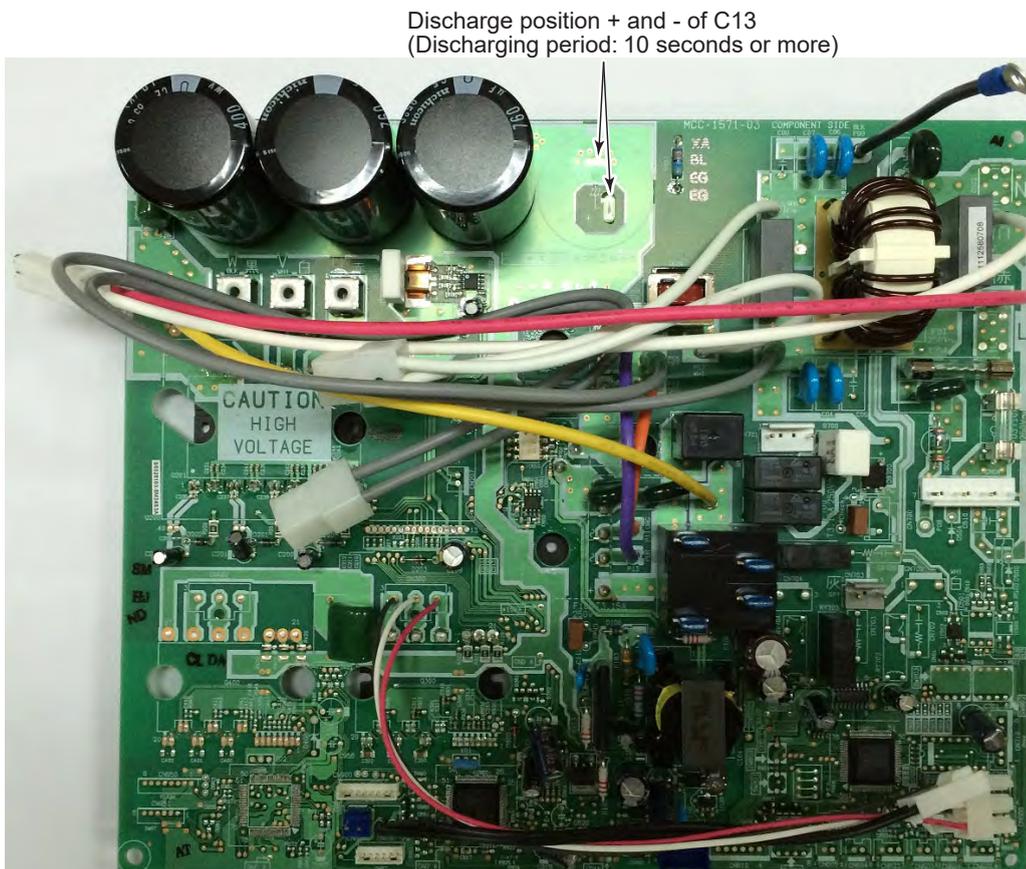


Fig. 11-1

11-1. First Confirmation

11-1-1. Confirmation of Power Supply

Confirm that the power breaker operates (ON) normally.

11-1-2. Confirmation of Power Voltage

Confirm that power voltage is AC 220–240 ±10%.

If power voltage is not in this range, the unit may not operate normally.

11-1-3. Operation Which is not a Trouble (Program Operation)

For controlling the air conditioner, the program operations are built in the microcomputer as described in the following table.

If a claim is made for running operation, check whether or not it meets to the contents in the following table.

When it does, we inform you that it is not trouble of equipment, but it is indispensable for controlling and maintaining of air conditioner.

Table 11-1-1

No.	Operation of air conditioner	Description
1	When power breaker is turned "ON", the operation lamp (Green) of the indoor unit flashes.	The OPERATION lamp of the indoor unit flashes when power source is turned on. If "START/STOP" button is operated once, flashing stops. (Flashes also in power failure)
2	Compressor may not operate even if the room temperature is within range of compressor-ON.	The compressor does not operate while compressor restart delay timer (3-minutes timer) operates. The same phenomenon is found after power source has been turned on because 3-minutes timer operates.
3	In DRY and SLEEP MODE, FAN (air flow) display does not change even though FAN (air flow select) button is operated.	The air flow indication is fixed to [AUTO].
4	Increasing of compressor motor speed stops approx. 30 seconds after operation started, and then compressor motor speed increases again approx. 30 seconds after.	For smooth operation of the compressor, the compressor motor speed is restricted to Max. 33 rps for 2 minutes and Max. 57 rps for 2 minutes to 4 minutes, respectively after the operation has started.
5	The set value of the remote control should be below the room temperature.	If the set value is above the room temperature, Cooling operation is not performed. And check whether battery of the remote control is consumed or not.

11-2. Primary Judgment

To diagnose the troubles, use the following methods.

- 1) Judgment by flashing LED of indoor unit
- 2) Self-diagnosis by service check remote controller
- 3) Judgment of trouble by every symptom

Firstly use the method (1) for diagnosis. Then, use the method (2) or (3) to diagnose the details of troubles.

For any trouble occurred at the outdoor unit side, detailed diagnosis is possible by 6-serial LED on the control P.C. board.

11-3. Judgment by Flashing LED of Indoor Unit

While the indoor unit monitors the operation status of the air conditioner, if the protective circuit operates, the contents of self-diagnosis are displayed with block on the indoor unit indication section.

Table 11-3-1

	Item	Check code	Block display	Description for self-diagnosis
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;">Indoor indication lamp flashes.</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-bottom: 5px;">Which lamp does flash?</div> <div style="text-align: center;">↓</div> <div style="text-align: center;">→</div>	A	—	OPERATION (Green) Flashing display (1 Hz)	Power failure (when power is ON)
	B	00	OPERATION (Green) Flashing display (5 Hz)	Protective circuit operation for indoor P.C. board
	C	01	OPERATION (Green) TIMER (Orange) Flashing display (5 Hz)	Protective circuit operation for connecting cable and serial signal system
	D	02	OPERATION (Green) Flashing display (5 Hz)	Protective circuit operation for outdoor P.C. board
	E	03	OPERATION (Green) TIMER (Orange) Flashing display (5 Hz)	Protective circuit operation for others (including compressor)

NOTE

- The contents of items B and C and a part of item E are displayed when air conditioner operates.
- When item B and C, and item B and a part of item E occur concurrently, priority is given to the block of item B.
- The check codes can be confirmed on the remote controller for servicing.
- Please refer to the service manual of the indoor unit for more details.

11-4. Self-Diagnosis by Remote Controller (Check Code)

1. If the lamps are indicated as shown B to E in Table 11-3-1, execute the self-diagnosis by the remote controller.
2. When the remote controller is set to the service mode, the indoor controller diagnoses the operation condition and indicates the information of the self-diagnosis on the display of the remote controller with the check codes.

If a fault is detected, all lamps on the indoor unit will flash at 5Hz and it will beep for 10 seconds (beep, beep, beep ...). The timer lamp usually flashes (5Hz) during self-diagnosis.

11-4-1. How to Use Remote Controller in Service Mode

1 Press [CHECK] button with a tip of pencil to set the remote controller to the service mode.

- “00” is indicated on the display of the remote controller.

2 Press [ON ▲] or [OFF ▲] button

If there is no fault with a code, the indoor unit will beep once (Beep) and the display of the remote controller will change as follows :

→ 00 → 01 → 02 .. 1d → 1E → 33 →

- The TIMER indicator of the indoor unit flashes continuously. (5 times per 1 sec.)
- Check the unit with all 52 check codes (00 to 33) as shown in Table-11-4-1.
- Press [ON▼] or [OFF▼] button to change the check code backward.

If there is a fault, the indoor unit will beep for 10 seconds (Beep, Beep, Beep...).

Note the check code on the display of the remote controller.

- 2-digits alphanumeric will be indicated on the display.
- All indicators on the indoor unit will flash. (5 times per 1 sec.)

3 Press [CLR] button. After service finish for clear service code in memory.

- "7F" is indicated on the display of the remote control.

4 Press [⏻] button to release the service mode.

- The display of the remote controller returns to as it was before service mode was engaged.

Alphanumeric characters are used for the check codes.

5 is 5.	6 is 6.
A is A.	B is B.
C is C.	D is D.

Fig. 11-4-1

11-4-2 Caution at Servicing

1. After using the service mode of remote controller finished, press the [⏻] button to reset the remote controller to normal function.
2. After finished the diagnosis by the remote controller, turn OFF power supply and turn its ON again to reset the air conditioner to normal operation. However, the check codes are not deleted from memory of the microcomputer.
3. After servicing finished, press [CLR] button of remote controller under service mode status to send code "7F" to the indoor unit. The check code stored in memory is cleared.

Table 11-4-1

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
00	Indoor	01	TA sensor ; The room temperature sensor is short-Circuit or disconnection.	Operation continues.	Flashes when error is detected.	1. Check the sensor TA and connection. 2. In case of the sensor and its connection is normal, check the P.C. board.
		02	TC sensor ; The heat exchanger temperature sensor of the indoor unit is out of place, disconnection, short-circuit or migration.	Operation continues.	Flashes when error is detected.	1. Check the sensor TC and connection. 2. In case of the sensor and its connection is normal, check the P.C. board.
		11	Fan motor of the indoor unit is failure, lock-rotor, short-circuit, disconnection, etc. Or its circuit on P.C. board has problem.	All OFF	Flashes when error is detected.	1. Check the fan motor and connection. 2. In case of the motor and its connection is normal, check the P.C. board.
		12	Other trouble on the indoor P.C. board.	Depend on cause of failure.	Depend on cause of failure.	Replace P.C. board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
01	Serial signal and connecting cable.	04	1) Defective wiring of the connecting cable or miss-wiring. 2) Operation signal has not send from the indoor unit when operation start. 3) Outdoor unit has not send return signal to the indoor unit when operation started. 4) Return signal from the outdoor unit is stop during operation. <ul style="list-style-type: none"> • Some protector (hardware, if exist) of the outdoor unit open circuit of signal. • Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period. 	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	1) to 3) The outdoor unit never operate. <ul style="list-style-type: none"> • Check connecting cable and correct if defective wiring. • Check 25A fuse of inverter P.C. board. • Check 3.15A fuse of inverter P.C. board. • Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board. 4) The outdoor unit abnormal stop at some time. <ul style="list-style-type: none"> • If the other check codes are found concurrently, check them together. • Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. • Check refrigerant amount or any possibility case which may caused high temperature or high pressure. • Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

Note : Operation signal of the indoor unit shall be measured in the sending period as picture below.

Sending signal of the indoor unit when have not return signal from the outdoor unit.

* Signal send only 1 minute and stop. Because of return signal from outdoor unit has not received.
 ** Signal resend again after 3 minutes stop. And the signal will send continuously.
 *** 1 minute after resending, the indoor unit display flashes error.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
02	Outdoor	14	Current on inverter circuit is over limit in short time. <ul style="list-style-type: none"> • Inverter P.C. board is failure, IGBT shortage, etc. • Compressor current is higher than limitation, lock rotor, etc. 	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operate but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. 4. If 3-Phase output is abnormal, replace inverter P.C.Board. 5. If 3-Phase output is normal, replace compressor. (lock rotor, etc.)
		15	Compressor position-detect circuit error or short-circuit between winding of compressor.	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure resistance of compressor winding. If circuit is shortage, replace the compressor.
		17	Current-detect circuit of inverter P.C. board error.	All OFF	Flashes after error is detected 4 times*.	Even if trying to operate again, all operations stop, replace inverter P.C. board.
		18	TE or TS sensor; abnormal. Out of place, disconnection, shortage, or misconnection (TE sensor is connected to TS connector, TS sensor is connected to TE sensor connector) TE sensor; Outdoor heat exchanger temperature sensor TS sensor; Suction pipe temperature sensor	All OFF	Flashes after error is detected 4 times*.	<ol style="list-style-type: none"> 1. Check sensors, TE, TS connection. In case of sensors and it's connection is normal, check the inverter P.C. board 2. Check 4way valve operation/position. In case TE, TS detected temperature relationship are different from normal operation, "18" might be detected.
		19	TD sensor ; Discharge pipe temperature sensor is disconnection or shortage.	All OFF	Flashes after error is detected 4 times*.	<ol style="list-style-type: none"> 1. Check sensors TD and connection. 2. In case of the sensor and its connection is normal, check the inverter P.C. board.
		1A	Outdoor fan failure or its drive-circuit on the inverter P.C. board failure.	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Check the motor, measure winding resistance, shortage or lock rotor. 2. Check the inverter P.C. board.
		1b	TO sensor ; The outdoor temperature sensor is disconnection or shortage.	Operation continues.	Record error after detected 4 times*. But does not flash display.	<ol style="list-style-type: none"> 1. Check sensors TO and connection. 2. In case of the sensor and its connection is normal, check the inverter P.C. board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
02	Outdoor	11	<p>Compressor drive output error. (Relation of voltage, current and frequency is abnormal)</p> <ul style="list-style-type: none"> • Overloading operation of compressor caused by over-charge refrigerant, P.M.V. failure, etc. • Compressor failure (High current). • TE or TS sensor; abnormal. Out of place, disconnection, shortage, or misconnection (TE sensor is connected to TS connector, TS sensor is connected to TE sensor connector) <p>TE sensor; Outdoor heat exchanger temperature sensor TS sensor; Suction pipe temperature sensor</p>	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Check installation conditions such as packed valve opening, refrigerant amount and power supply (rate $\pm 10\%$, both of operation and non operation condition). 2. (In case of P.M.V. exists) Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 3. Observe any possibility cause which may affect operation load of compressor. 4. Operate again. If compressor operation is failure when 20 seconds passed (count time from operation starting of compressor), replace compressor. 5. Check sensors, TE, TS connection. In case of sensors and it's connection is normal, check the inverter P.C. board. 6. Check 4way valve operation/position. In case TE, TS detected temperature relationship are different from normal operation, "1C" might be detected.
<p>* 4 or 8 times ; When first error is detected, error is count as 1 time, then once operation is stop and re-started. After re-starting operation within 6 minutes, if same error is detected, error count is add (count become 2 times) When error count comes 4, 8, 11 or 18 times, record error to check code. But after re-starting operation, if no error is detected and air conditioner can operate more than 6 minutes, error count is cleared.</p>						
03	The others (including compressor)	07	<p>Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time.</p> <ul style="list-style-type: none"> • Instantaneous power failure. • Some protector (hardware) of the outdoor unit open circuit of signal. • Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period. 	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	<ol style="list-style-type: none"> 1. Check power supply (Rate $\pm 10\%$) 2. If the air conditioner repeat operates and stop with interval of approx. 10 to 40 minutes. <ul style="list-style-type: none"> • (In case of these exist) Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. • Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. 3. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
03	The others (including compressor)	1d	Compressor does not rotate. Because of missed wiring, missed phase or shortage.	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. 4. If 3-Phase output is abnormal, replace inverter P.C.Board. 5. If 3-Phase output is normal, measure resistance of compressor winding. 6. If winding is shortage, replace the compressor.
		1E	Discharge temperature exceeded 117°C.	All OFF	Flashes after error is detected 4 times*.	<ol style="list-style-type: none"> 1. Check sensors TD. 2. Check refrigerant amount. 3. (In case of P.M.V. exists) Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 4. Observe any possibility cause which may affect high temperature of compressor.
		1F	Compressor is high current though operation Hz is decreased to minimum limit. <ul style="list-style-type: none"> • Installation problem. • Instantaneous power failure. • Refrigeration cycle problem. • Compressor break down. • Compressor failure (High current).operation, etc.) 	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Check installation conditions such as packed valve opening, refrigerant amount and power supply (rate $\pm 10\%$, both of operation and non operation condition). 2. (In case of P.M.V. exists) Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 3. Observe any possibility cause which may affect high current of compressor. 4. If 1, 2 and 3 are normal, replace compressor.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
03	The others (including compressor)	21	<p>Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time.</p> <ul style="list-style-type: none"> Instantaneous power failure. Some protector (hardware) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period. TE, TC high temperature TE for cooling operation TC for heating operation. (TE only exists in the Heat Pump system) TE or TS sensor; abnormal. Out of place, disconnection, shortage, or misconnection (TE sensor is connected to TS connector, TS sensor is connected to TE sensor connector) <p>TE sensor; Outdoor heat exchanger temperature sensor TS sensor; Suction pipe temperature sensor</p>	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected 11 times*. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	<ol style="list-style-type: none"> Check power supply (Rate $\pm 10\%$) If the air conditioner repeat operate and stop with interval of approx. 10 to 40 minutes. <ul style="list-style-type: none"> (In case of these exist) Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board. Check and clean heat exchanger area Indoor and Outdoor unit. Check sensors, TE, TS connection. In case of sensors and it's connection is normal, check the inverter P.C. board. Check 4way valve operation/position. In case TE, TS detected temperature relationship are different from normal operation, "21" might be detected.
<p>* 4, 8 or 11 times ; When first error is detected, error is count as 1 time, then once operation is stop and re-started.</p> <p>After re-starting operation within 6 minutes, if same error is detected, error count is add (count become 2 times) When error count comes 4, 8, 11 or 18 times, record error to check code. But after re-starting operation, if no error is detected and air conditioner can operate more than 6 minutes, error count is cleared.</p>						

11-5. Judgment of Trouble by Symptom

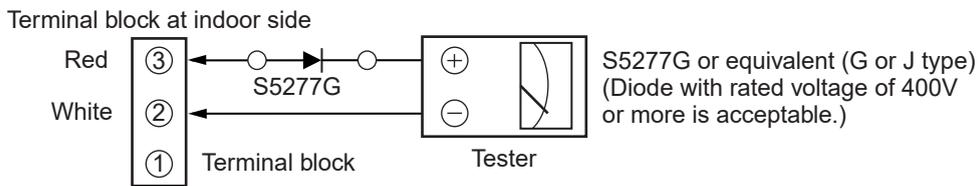
11-5-1. Wiring Failure (Interconnecting and Serial Signal)

Wire)(1) Outdoor unit does not operate

- 1) Is the voltage between ② and ③ of the indoor terminal block varied?
- 2) Confirm that transmission from indoor unit to outdoor unit is correctly performed based upon the following diagram.

NOTE

- Measurement should be performed 2 minutes and 30 seconds after starting of the operation.
- Be sure to prepare a diode for judgment.




Normal time : Voltage swings between DC15 and 60V. Inverter Assembly check

Abnormal time : Voltage does not vary.

(2) Outdoor unit stops in a little while after operation started

<Check procedure> Select phenomena described below.

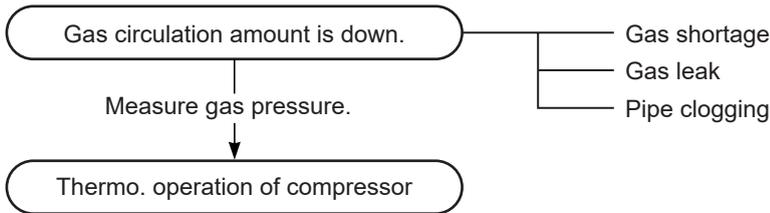
- 1) The outdoor unit stops 10 to 20 minutes after operation started, and 10 minutes or more are required to restart the unit.



- 2) If the unit stops once, it does not operate until the power will be turned on again.

To item of Outdoor unit does not operate.

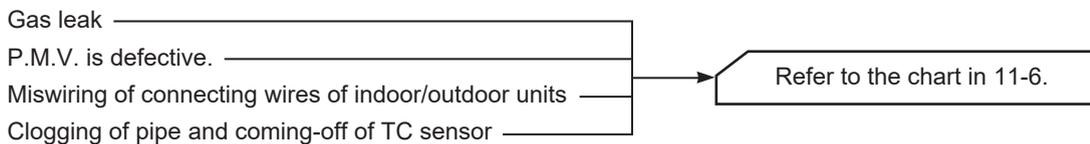- 3) The outdoor unit stops 10 minutes to 1 hour after operation started, and an alarm is displayed. (Discharge temp. error check code 03, 1E Sensor temp. error check code 02, 1C)



Service Support Function (LED Display, Switch Operation)

1. Outline

A various setup and operation check can be performed by the push down button switches (SW801, SW802) on the outdoor control P.C. board WP-041.

Operation part


Part No.	Specifications	Operation contents
SW801 SW802	Push down button switch	Performs the specific operation to check maintenance and various initial settings.

Display part

Part No.	Specifications	Operation contents
D502, D511, D517, D525, D534	Orange LED	Indoor/Outdoor communication (Serial communication) signal display (Receive signal from indoor signal)
D501, D508, D515, D524, D533	Green LED	Indoor/Outdoor communication (Serial communication) signal display (Send signal from outdoor signal)
D805	Green LED	(1) Power-ON display When the power of the outdoor unit is turned on, D805 LED goes on. (2) Error display When the outdoor controller detects some errors, some LEDs go on or flash according to the error as described in Error display table. (Refer to 11-6)
D800 to D804	Yellow LED	(3) Specific operation display When SW801 is pushed and a specific operation is operated, some LEDs go on or flash.

* Every LED is colorless when it goes off.

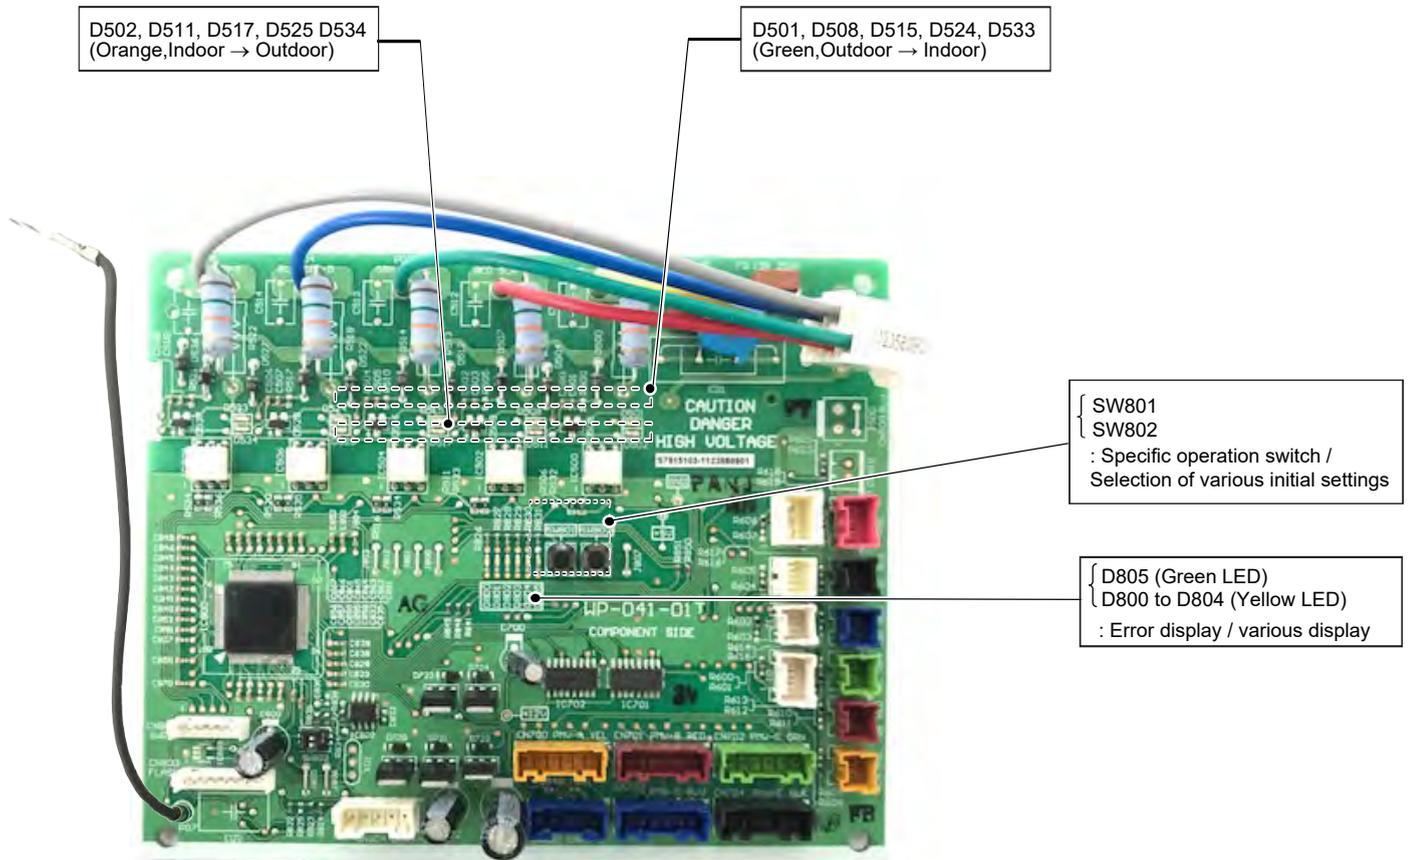Control P.C.B WP-041



11-6. Trouble Diagnosis by Outdoor LED

For the outdoor unit, the self-diagnosis is possible by LED (Green) and five LEDs (Yellow). Green LED (D805) and Yellow LEDs (D800 to D804) are provided on the display P.C. board WP-041.

1. In the initial LED display status, Green LED(D805) is lighted as below.

Normal						Error occurring					
D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)	D800 (Yellow)	D801 (Yellow)	D802 (Yellow)	D803 (Yellow)	D804 (Yellow)	D805 (Green)
●	●	●	●	●	○	●/○*	●/○*	●/○*	●/○*	●/○*	○

○:ON ●:OFF ○:ON ○*:3 sec ON/0.5 sec OFF ●:OFF

- If there is an error, Yellow LED are lighted according to the error as described in the below table.
- When there are two or more errors, LEDs flash cyclically.
- When D804 or D805 are flashing (rapid or slow), push and hold SW801 and SW802 simultaneously for 5 seconds or more. (Display returns to the error display.)

○:ON (○*:3 sec ON/0.5 sec OFF) ●:OFF

Display						Indoor check code	Description
D800 (YL)	D801 (YL)	D802 (YL)	D803 (YL)	D804 (YL)	D805 (GN)		
●	●	●	●	●	○	-	Normal operation (no error)
○*	●	●	●	●	○	1C	Compressor case thermostat error
●	○*	●	●	●	○	21	High pressure switch error
○*	○*	●	●	●	○	1C	Compressor system error
●	●	○*	●	●	○	1d	Compressor lock
○*	●	○*	●	●	○	1F	Compressor breakdown
●	○*	○*	●	●	○	14	Driving element short circuit
○*	○*	○*	●	●	○	16	Position detection circuit error
●	●	●	○*	●	○	17	Current detection circuit error
○*	●	●	○*	●	○	1C	Communication error between MCU
●	○*	●	○*	●	○	1A	Fan system error
○*	○*	●	○*	●	○	1E	Discharge temperature error
●	●	○*	○*	●	○	19	Discharge temperature sensor (TD) error
1 ○	●	○*	○*	●	○	1b	Outdoor air temperature sensor (TO) error
●	○*	○*	○*	●	○	18	Suction temperature sensor (TS) error
○*	○*	○*	○*	●	○	18	Heat exchanger temperature sensor (TE) error
2 ●	●	●	●	○	○	1C	Gas pipe (unit A) temperature sensor (TGa) error
2 ○	●	●	●	○*	○	1C	Gas pipe (unit B) temperature sensor (TGb) error
2 ●	○	●	●	○*	○	1C	Gas pipe (unit C) temperature sensor (TGc) error
2 ○	○*	●	●	○*	○	1C	Gas pipe (unit D) temperature sensor (TGd) error
2 ●	●	○	●	○*	○	1C	Gas pipe (unit E) temperature sensor (TGe) error
○*	●	○*	●	○*	○	-	PMV error (SH≥20)
●	○*	○*	●	○*	○	-	PMV error (SH≤-8)
●	●	●	○*	○*	○	20	PMV leakage error (unit A)
○*	●	●	○*	○*	○	20	PMV leakage error (unit B)
●	○*	●	○*	○*	○	20	PMV leakage error (unit C)
○*	○*	●	○*	○*	○	20	PMV leakage error (unit D)
●	●	○*	○*	○*	○	20	PMV leakage error (unit E)
○*	●	○*	○*	○*	○	-	Miswiring (mispiping) check error
●	○*	○*	○*	○*	○	1C	Communication error between MCU
○*	○*	○*	○*	○*	○	1C	Communication error between MCU

*1: Back-up operation is performed without error display of the indoor unit.

*2: Operated normally when the air conditioners in other rooms are driven.

- The D800 LED represents unit A.
- The D801 LED represents unit B.
- The D802 LED represents unit C.
- The D803 LED represents unit D.
- The D804 LED represents unit E.

○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[1C]	○*●●●●○	<p>[Case thermo operation, Power supply error]</p>
[14]	●○*○*●●○	<p>[Short-circuit of compressor drive element]</p>
[16]	○*○*○*●●○	<p>[Position detection circuit error]</p> <p>Check outdoor P.C.B MCC-1571. Defect → Replace.</p>
[17]	●●●○*●○	<p>[Current detection circuit error]</p> <p>Check outdoor P.C.B MCC-1571. Defect → Replace.</p>









○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[19]	●●○*○*●○	<p>[Discharge temp. sensor (TD) error]</p> <pre> graph TD A{Is connection of CN600 on P.C.B WP-041 correct? Is resistance value of TD sensor correct?} -- NO --> B[Correct connector. Sensor error -> Replace.] A -- YES --> C[Check outdoor P.C.B WP-041 Defect -> Replace.] </pre>
[1A]	●○*●○*●○	<p>[Fan system error]</p> <pre> graph TD A{Is AC mains voltage correct? (198 to 264V)} -- NO --> B[Check wiring construction. Ask repair of power supply.] A -- YES --> C{Rotate shaft of the fan motor by hands during power-OFF, Can it rotate smoothly? Is coil resistance of fan motor correct? Between red and white lead wire :12 to 20Ω. Between white and black lead wire :12 to 20Ω. Between black and red lead wire :12 to 20Ω.} C -- NO --> D[Check outdoor P.C.B MCC-1571 Defect -> Replace.] C -- YES --> E[Replace fan motor.] </pre>
[1b]	○*●○○*○*●○	<p>[Outside temp. sensor (TO) error]</p> <pre> graph TD A{Is connection of CN602 on P.C.B WP-041 correct? Is resistance value of TO sensor correct?} -- NO --> B[Correct connector. Sensor error -> Replace.] A -- YES --> C[Check outdoor P.C.B WP-041 Defect -> Replace.] </pre>

○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[1C]	○*○*●●●○	<p>* There is a possibility that it is one of the following errors. Confirm LED on display P.C. board to judge which error it is. Compressor system error, Compressor lock, Gas side temp. sensor (TGa to TGe) error, Gas leakage, PMV error</p> <p>[Compressor system error, Compressor lock]</p> <pre> graph TD Q1{{Is AC mains voltage correct? (198 to 264V)}} -- NO --> A1[Check wiring construction. Ask repair of power supply.] Q1 -- YES --> Q2{{Is wire connection correct? Compressor lead (Board side, Compressor Side), Reactor lead, Power supply lead.}} Q2 -- NO --> A2[Check wire connection and correct it.] Q2 -- YES --> Q3{{Is compressor under correct condition?}} Q3 -- YES --> S1((1)) Q3 -- NO --> Q4{{Is there refrigerant stagnation?}} Q4 -- NO --> A3[Compressor lock → Replace.] Q4 -- YES --> Q5{{Does PMV correctly operate?}} Q5 -- NO --> A4[Check TE, TS sensor and PMV. Detect → Replace..] Q5 -- YES --> S2((1)) S1 --> S2 S2 --> Q6{{Are the power devices on P.C. board MCC-1571 screwed without looseness? (Rear sides of (Q201, Q300, Q650, DB01, DB02) Are radiation grease properly applied these?}} Q6 -- NO --> A5[Apply radiation grease to objective parts. Retightening of screws.] Q6 -- YES --> Q7{{Does something block the ventilation around the heat sink? Does something air flow from the fan?}} Q7 -- YES --> A6[Remove blocking matter. Correct short-circuit.] Q7 -- NO --> A7[Check outdoor P.C.B MCC-1571 and WP-041. Defect → Replace] </pre>

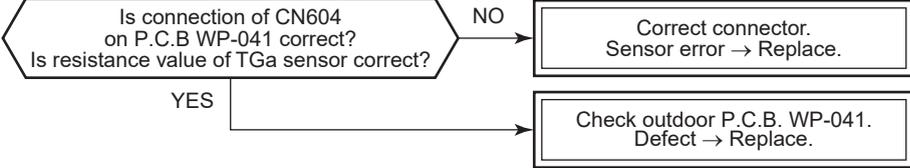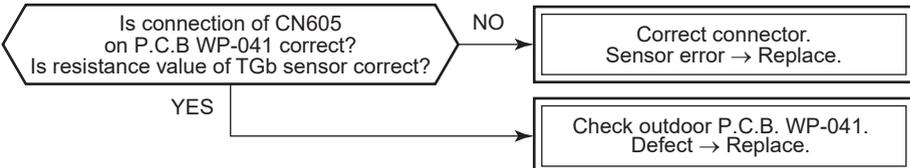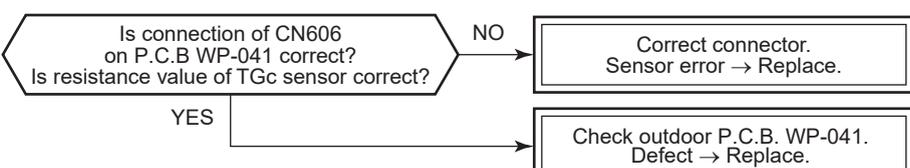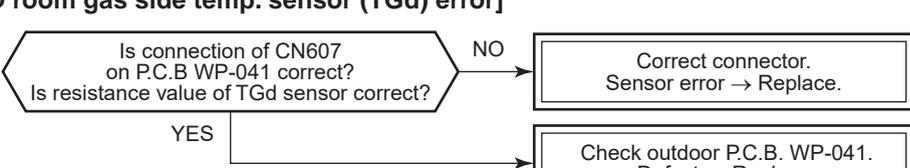
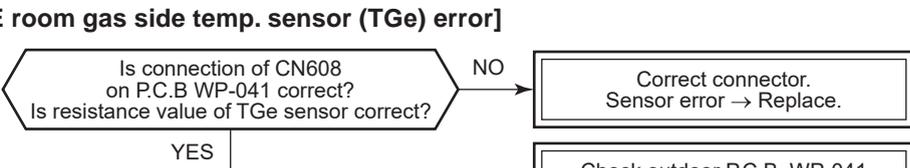
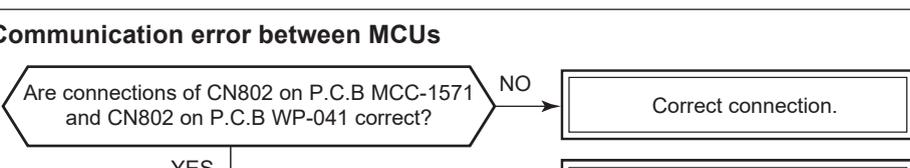
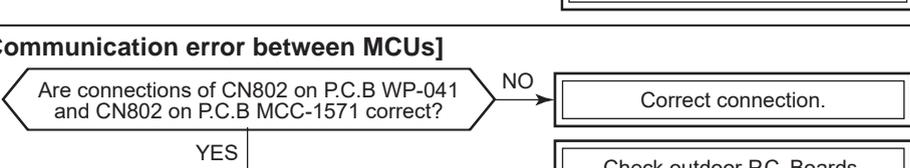
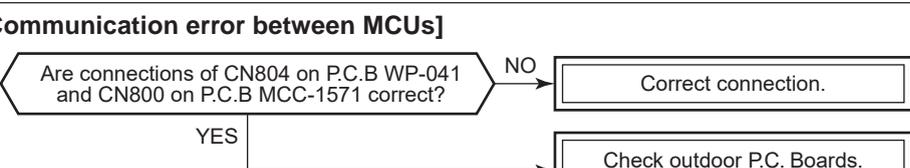
○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[1C] (Continued)	●●●●○*○	<p>[A room gas side temp. sensor (TGa) error]</p> 
	○*●●●○*○	<p>[B room gas side temp. sensor (TGb) error]</p> 
	●○*●●○*○	<p>[C room gas side temp. sensor (TGc) error]</p> 
	○*○*●●○*○	<p>[D room gas side temp. sensor (TGd) error]</p> 
	●●○*●○*○	<p>[E room gas side temp. sensor (TGe) error]</p> 
	○*●●○*●○	<p>Communication error between MCUs</p> 
	●○*○*○*○*○	<p>[Communication error between MCUs]</p> 
	○*○*○*○*○	<p>[Communication error between MCUs]</p> 

○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[1d]	●●○*●●○	<p>[Compressor lock]</p> <pre> graph TD Q1{{Is AC mains voltage correct? (198 to 264V)}} -- NO --> A1[Check wiring construction. Ask repair of power supply.] Q1 -- YES --> Q2{{Is wire connection correct? Compressor lead (Board side, Compressor Side), Reactor lead, Power supply lead.}} Q2 -- NO --> A2[Check wire connection and correct it.] Q2 -- YES --> Q3{{Is compressor under correct condition?}} Q3 -- YES --> A3[Check outdoor P.C.B MCC-1571. Defect → Replace.] Q3 -- NO --> Q4{{Is there refrigerant stagnation?}} Q4 -- NO --> A4[Compressor lock → Replace.] Q4 -- YES --> Q5{{Does PMV correctly operate?}} Q5 -- NO --> A5[Check TE, TS sensors and PMV. Defect → Replace.] Q5 -- YES --> A6[Check outdoor P.C.B WP-041. Defect → Replace.] </pre>
[1E]	○*○*●○*●○	<p>[Discharge temp. error]</p> <pre> graph TD Q1{{Is there gas leak? Is there refrigerant shortage?}} -- YES --> A1[Repair defective position. Recharge refrigerant.] Q1 -- NO --> Q2{{Is PMV under correct conditions?}} Q2 -- NO --> A2[Repair defective position. Replace defective part.] Q2 -- YES --> Q3{{Does an abnormal overload happen?}} Q3 -- YES --> A3[Remove and improve the cause of overload.] Q3 -- NO --> Q4{{Is connection of CN600 on P.C.B. WP-041? Is resistance value of TD sensor correct?}} Q4 -- NO --> A4[Correct connector. Sensor error → Replace.] Q4 -- YES --> A5[Check outdoor P.C.B WP-041. Defect → Replace.] </pre>
[1F]	○*●○*●●○	<p>[Compressor break down]</p> <pre> graph TD Q1{{Is AC mains voltage correct? (198 to 264V)}} -- NO --> A1[Check wiring construction. Ask repair of power supply.] Q1 -- YES --> Q2{{Is wire connection correct? Compressor lead (Board side, Compressor Side), Reactor lead, Power supply lead.}} Q2 -- NO --> A2[Check wire connection and correct it.] Q2 -- YES --> Q3{{Does an abnormal overload happen?}} Q3 -- YES --> A3[Remove and improve the cause of overload.] Q3 -- NO --> A4[Check outdoor P.C.B MCC-1571 Defect → Replace.] </pre>

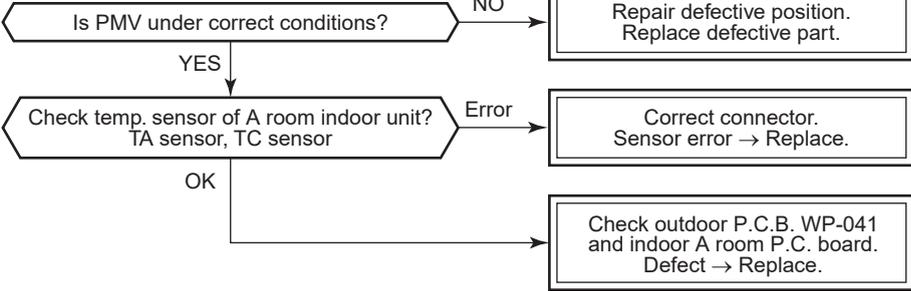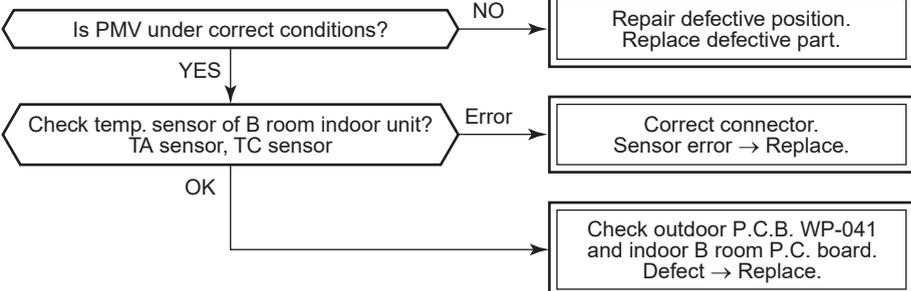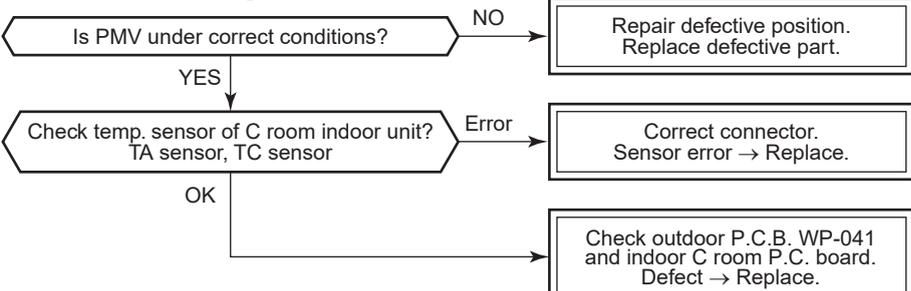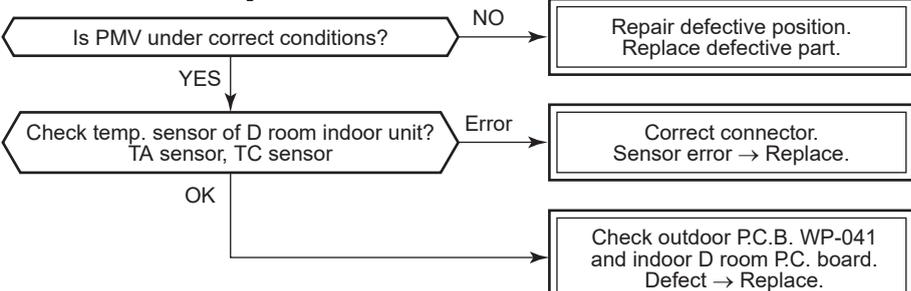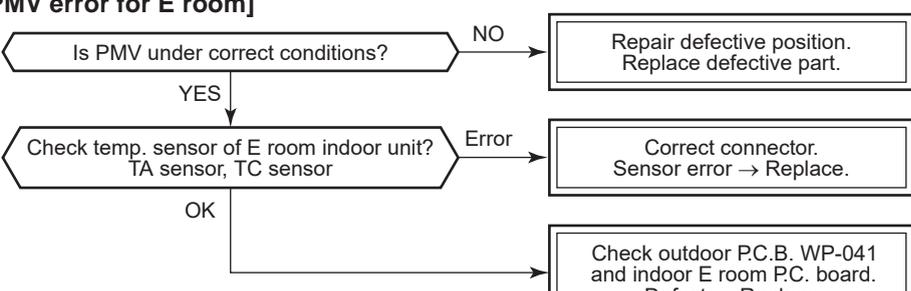○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF


Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[20]		<p>* There is a possibility that it is one of the following errors. Confirm LED on outdoor P.C. board to judge which error it is. PMV error for A room, B room, C room, D room and E room.</p>
	●●●○*○*○	<p>[PMV error for A room]</p> 
	○*●●○*○*○	<p>[PMV error for B room]</p> 
	●○*●○*○*○	<p>[PMV error for C room]</p> 
	○*○*●○*○*○	<p>[PMV error for D room]</p> 
	●●○*○*○*○	<p>[PMV error for E room]</p> 

○:ON (○*:3 sec ON / 0.5 sec OFF) ●:OFF

Check code	Outdoor LED display	Check and troubleshooting (Item without special mention indicates part of outdoor unit.)
[21]	* There is a possibility that it is one of the following errors. Confirm LED on outdoor P.C. board to judge which error it is. (1) high-pressure SW system error, (2) power supply error (Vdc), (3) high-pressure protective operation, (4) case thermo operation.	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p>● ○ * ● ● ● ○</p> </div> <div> <p>[High pressure SW system error] High pressure protective operation.</p> <pre> graph TD Q1{{Doesn't high pressure switch operate?}} -- YES --> Q2{{Are parts of high pressure switch normal?}} Q1 -- NO --> Q3{{Is circuit wiring normal?}} Q2 -- YES --> Q4{{Is service valve fully opened?}} Q2 -- NO --> R1[Parts check Defective -> Replace] Q3 -- NO --> R2[Wiring check, Correct.] Q4 -- YES --> R3[Reset the power supply and then do a trial operation according to the season.] Q4 -- NO --> R4[Open service valve fully.] R3 --> B1[(B) Cooling operation.] B1 --> Q5{{Does cooling outdoor fan normally operate?}} Q5 -- YES --> Q6{{Is there any element which blocks heat exchanger of the outdoor unit?}} Q5 -- NO --> Q7{{Is there no fan breakage or coming-off?}} Q6 -- YES --> R5[Elimination of blocking element] Q6 -- NO --> R6[Overcharge of refrigerant/ Clogging/Pipe breakage/ Abnormal overload] Q7 -- YES --> R7[Repair defective position. Connection of connectors, IPDU, Fan motor, Wiring.] Q7 -- NO --> R8[Check IPDU PC board Defective -> Replace] R2 --> R8 </pre> </div> </div>



11-7. Inspection of the Main Parts

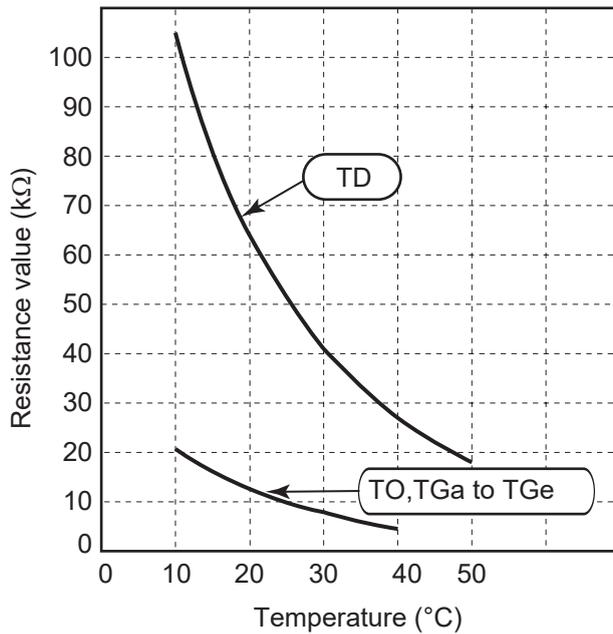[1] Sensor characteristic table



TD : Discharge temp. sensor
 TO : Outdoor temp. sensor
 TGa to TGe : Gas side temp. sensor

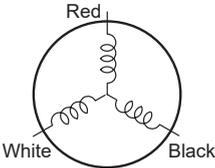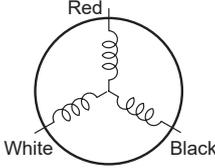11-8. Outdoor Unit

No.	Part name	Checking procedure																														
1	Compressor (Model : DX270A2T-20L)	Measure the resistance value of each winding by using the tester. <div style="display: flex; align-items: center; justify-content: center; margin: 10px 0;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Red - White</td> <td rowspan="3" style="text-align: center; vertical-align: middle;">$0.49 \pm 0.03\Omega$</td> </tr> <tr> <td>White - Black</td> </tr> <tr> <td>Black - Red</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-right: 50px;">Under 20°C</p>	Position	Resistance value	Red - White	$0.49 \pm 0.03\Omega$	White - Black	Black - Red																								
Position	Resistance value																															
Red - White	$0.49 \pm 0.03\Omega$																															
White - Black																																
Black - Red																																
2	Outdoor fan motor (Model : WDF-340-A100-1)	Measure the resistance value of winding by using the tester. <div style="display: flex; align-items: center; justify-content: center; margin: 10px 0;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Red - White</td> <td rowspan="3" style="text-align: center; vertical-align: middle;">$17.3 \pm 1.7\Omega$</td> </tr> <tr> <td>White - Black</td> </tr> <tr> <td>Black - Red</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-right: 50px;">Under 20°C</p>	Position	Resistance value	Red - White	$17.3 \pm 1.7\Omega$	White - Black	Black - Red																								
Position	Resistance value																															
Red - White	$17.3 \pm 1.7\Omega$																															
White - Black																																
Black - Red																																
3	Compressor thermo. Bimetal type (Model : CS-12AL)	Check conduction by using the tester.																														
4	High pressure switch (Model : ACB-1UB177W)	Check conduction by using the tester.																														
5	Outdoor temperature sensor (TO), pipe temperature sensor (TGa, TGb, TGc, TGd, TGe), discharge temperature sensor (TD)	Disconnect the connector, and measure resistance value with the tester. (Normal temperature) <table border="1" style="width: 100%; margin-top: 10px;"> <thead> <tr> <th>Sensor</th> <th colspan="5">Temperature</th> </tr> <tr> <th></th> <th>10°C</th> <th>20°C</th> <th>25°C</th> <th>40°C</th> <th>50°C</th> </tr> </thead> <tbody> <tr> <td>TD (kΩ)</td> <td>105</td> <td>64</td> <td>51</td> <td>27</td> <td>18</td> </tr> <tr> <td>TO (kΩ)</td> <td>20.6</td> <td>12.6</td> <td>10.0</td> <td>5.1</td> <td>3.4</td> </tr> <tr> <td>TGa to TGe (kΩ)</td> <td>20.0</td> <td>12.5</td> <td>10.0</td> <td>5.3</td> <td>3.6</td> </tr> </tbody> </table>	Sensor	Temperature						10°C	20°C	25°C	40°C	50°C	TD (kΩ)	105	64	51	27	18	TO (kΩ)	20.6	12.6	10.0	5.1	3.4	TGa to TGe (kΩ)	20.0	12.5	10.0	5.3	3.6
Sensor	Temperature																															
	10°C	20°C	25°C	40°C	50°C																											
TD (kΩ)	105	64	51	27	18																											
TO (kΩ)	20.6	12.6	10.0	5.1	3.4																											
TGa to TGe (kΩ)	20.0	12.5	10.0	5.3	3.6																											

11-9. How to Simply Judge Whether Outdoor Fan Motor is Good or Bad

1. Symptom

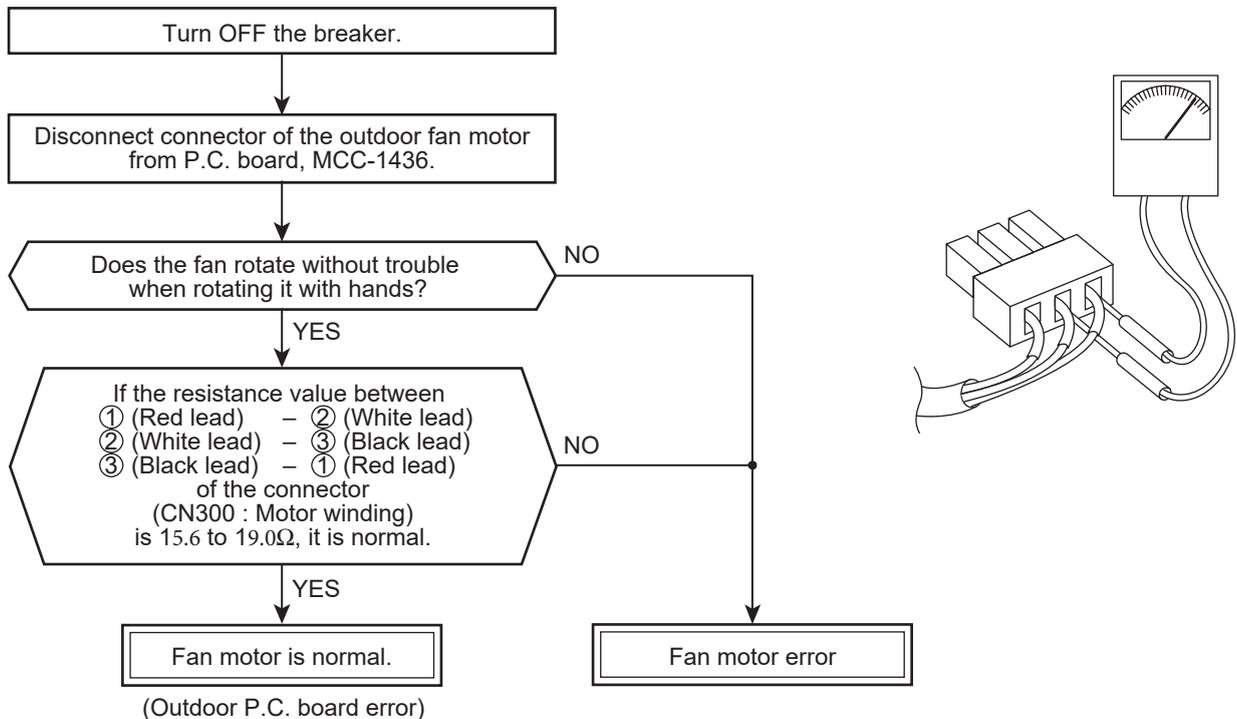
- Outdoor fan motor does not rotate.
 - Outdoor fan motor stops within several tens seconds though it started rotating.
 - Outdoor fan motor rotates or does not rotate according to the position where the fan stopped, etc.
- Remote controller check code "02 : Outdoor block, 1A : Outdoor fan drive system error"

2. Cause

The following causes are considered when the outdoor fan motor does not normally rotate.

- 1) Mechanical lock of the outdoor fan motor
- 2) Winding error of the outdoor fan motor
- 3) Position-detect circuit error inside of the outdoor fan motor
- 4) Motor drive circuit error of the outdoor P.C. board

3. How to simply judge whether outdoor fan motor is good or bad




NOTE


However, GND circuit error inside of the motor may be accepted in some cases when the above check is performed.

When the fan motor does not become normal even if P.C. board is replaced, replace the outdoor fan motor.
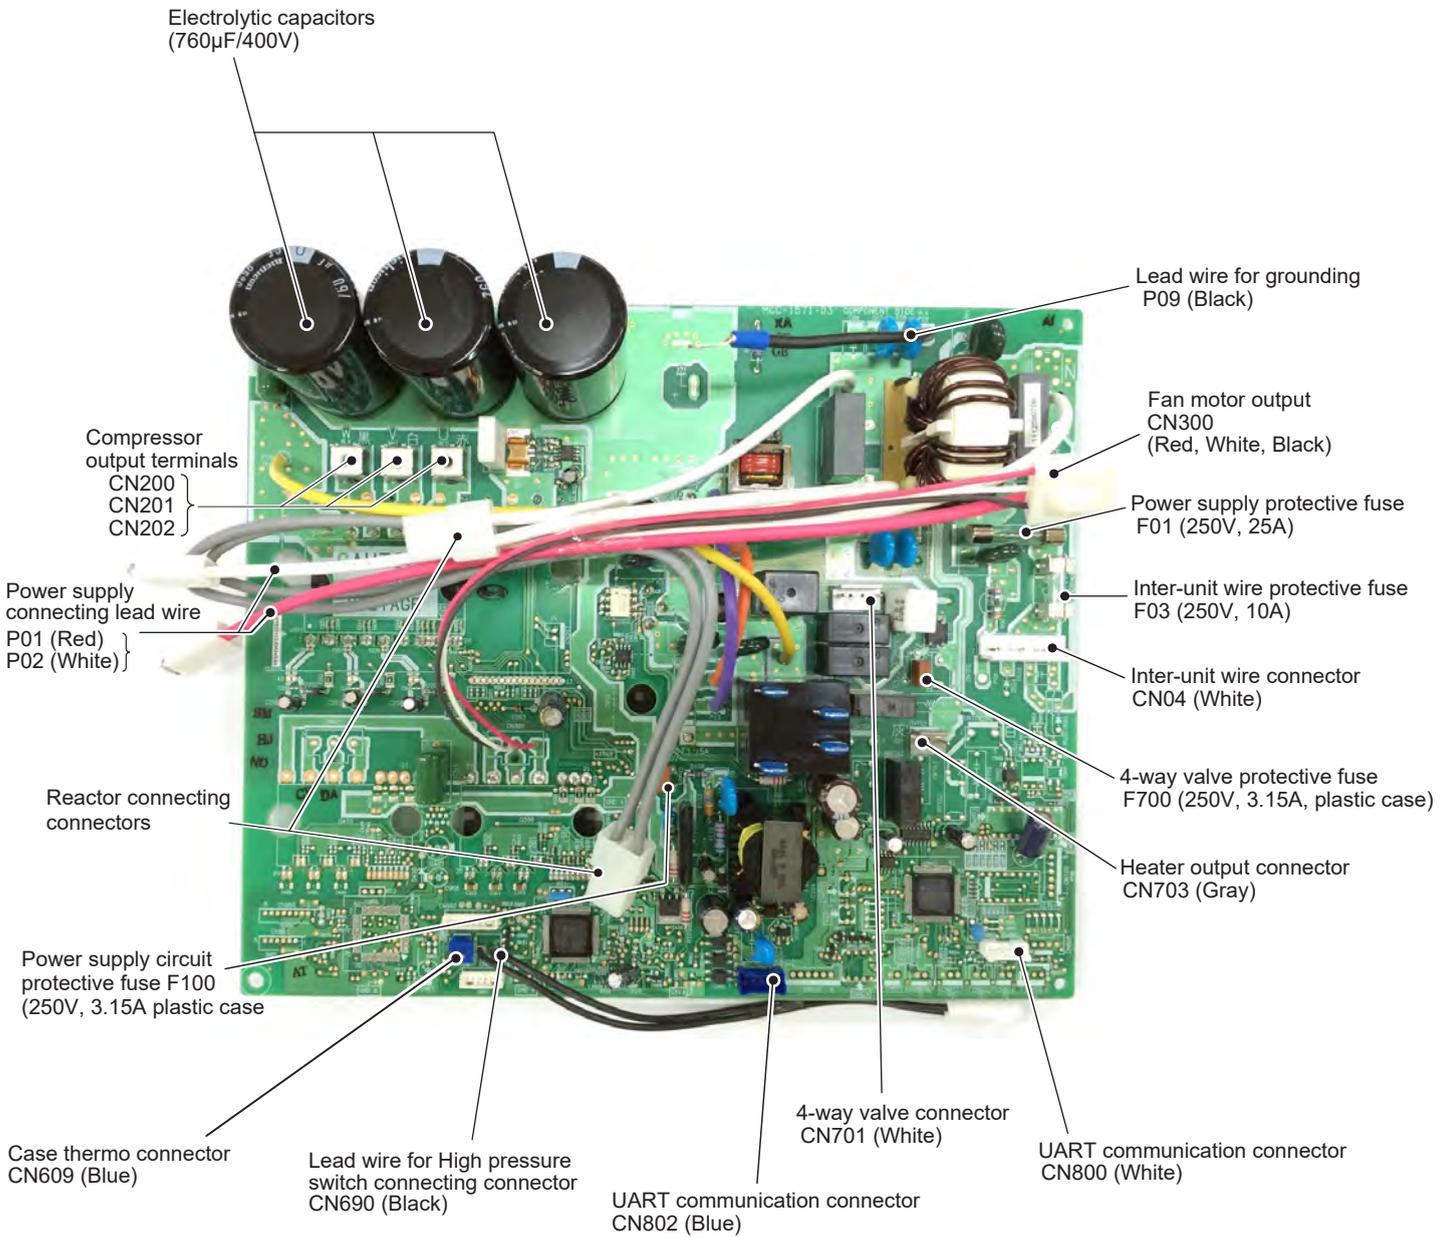
<MCC-1571>








<WP-041>




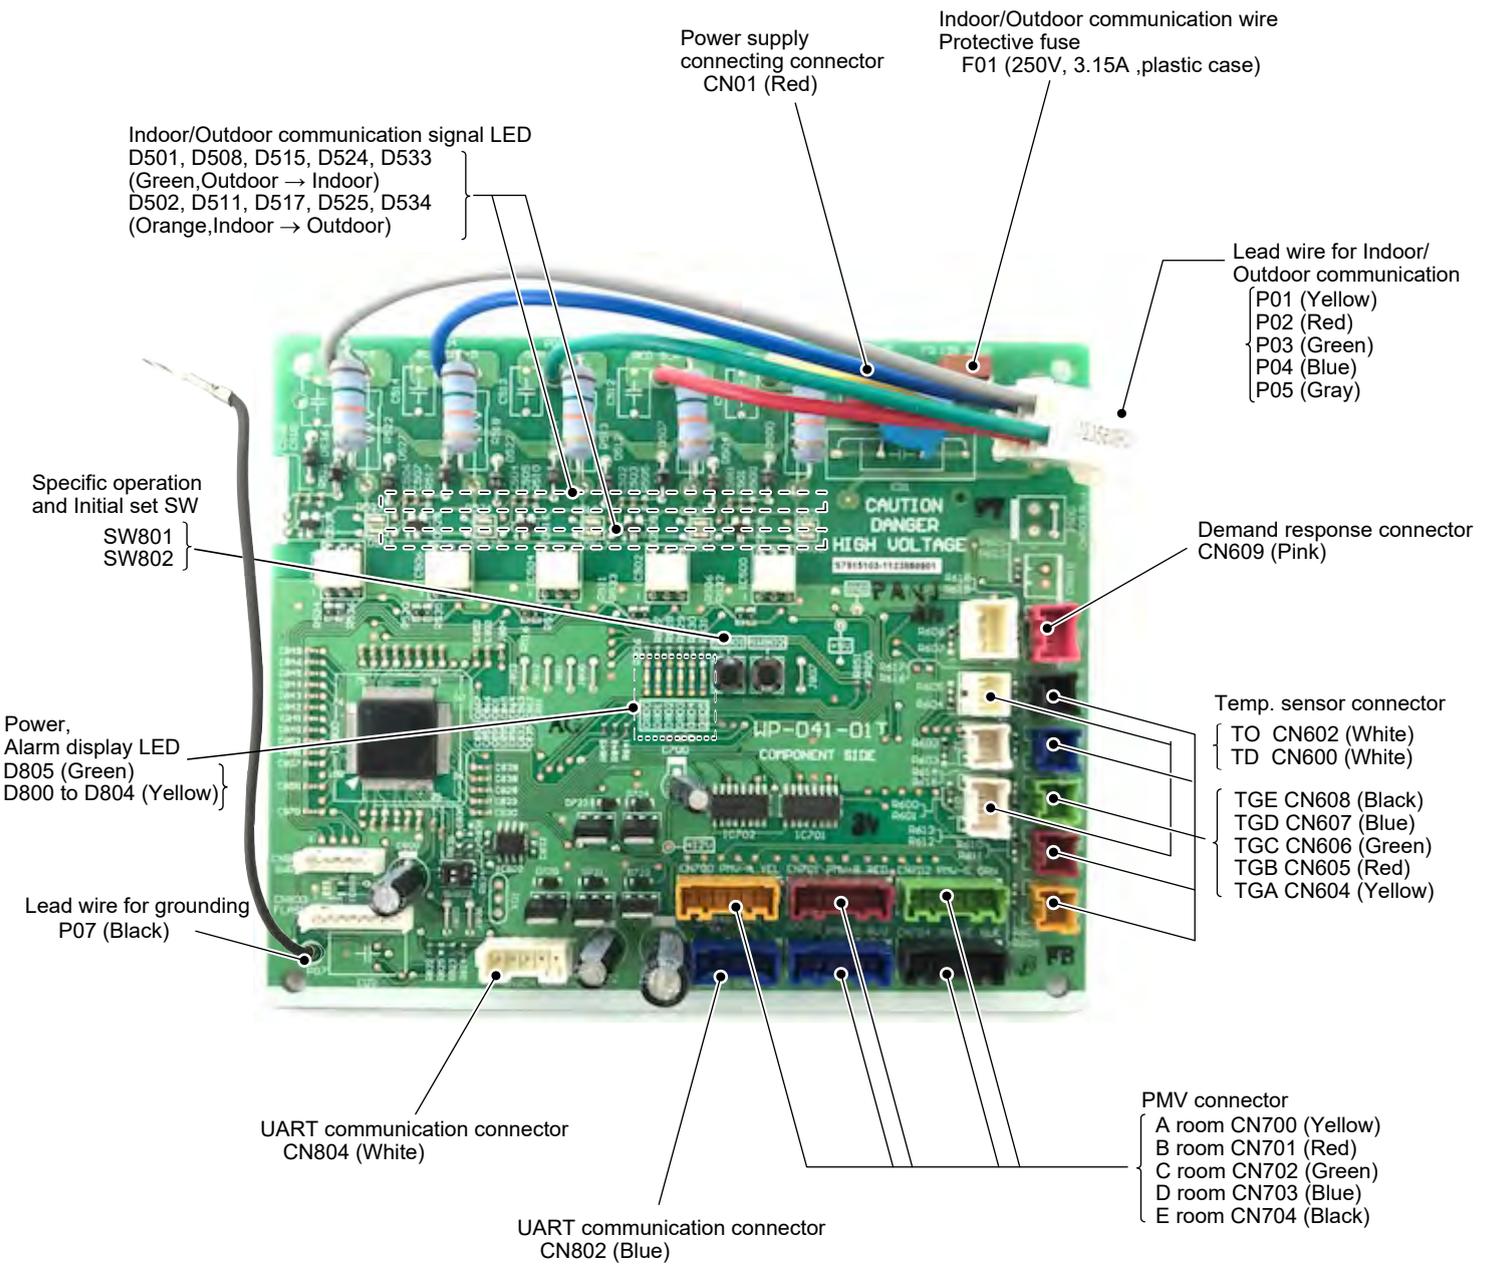





12. HOW TO REPLACE THE MAIN PARTS

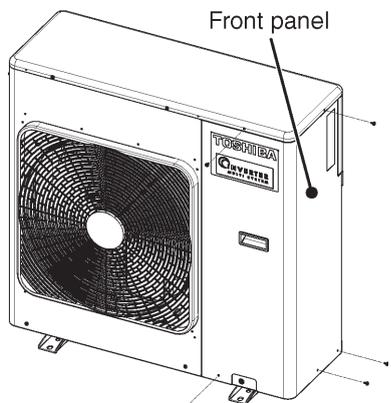
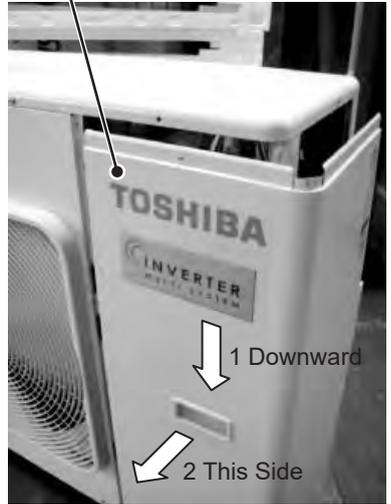
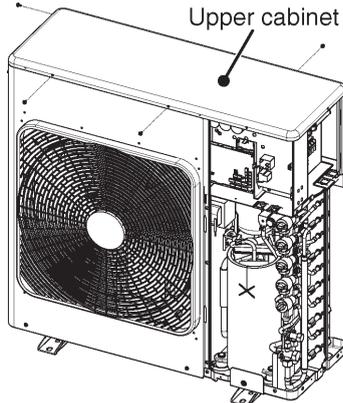
12-1. Outdoor Unit



No.	Part name	Procedure	Remarks
①	Common procedure	<p style="text-align: center;">CAUTION</p> <hr/> <p>Never forget to put on the gloves at working time; otherwise an injury will be caused by the parts etc.</p> <hr/> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner, and turn off the switch of the breaker. 2) Remove the front panel. (Hexagonal screw $\varnothing 4 \times 10$, 5 pcs.) <ul style="list-style-type: none"> • After taking off screws, draw the front panel ② to this side and remove it while pulling the front panel downward ① . 3) Remove the power supply cable and the indoor/outdoor connecting wire from the cord clamp and the terminal. 4) Remove the upper cabinet. (Hexagonal screw $\varnothing 4 \times 10$, 4 pcs.) <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Mount the upper cabinet. (Hexagonal screw $\varnothing 4 \times 10$, 4 pcs.) In this time, insert the fin guard at rear side between the front panel and the heat exchanger (at rear side). 2) Connect the power supply cable and the indoor/outdoor connecting wire to the terminal and then fix them with the cord clamp. 3) Mount the front panel. (Hexagonal screw $\varnothing 4 \times 10$, 5 pcs.) 	 <p>Front panel</p>  <p>Front panel</p> <p>1 Downward</p> <p>2 This Side</p>  <p>Upper cabinet</p> <p>Insert the fin guard at rear side between the front panel and the heat exchanger (at rear side).</p> 



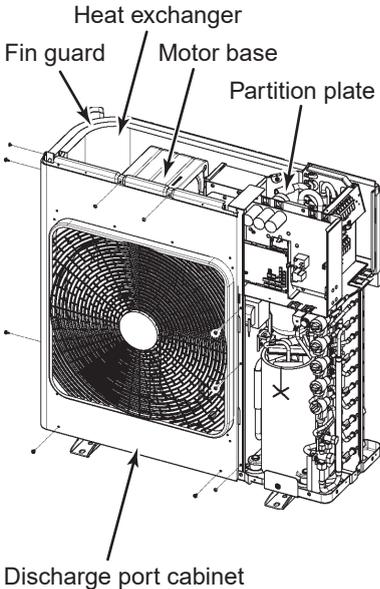
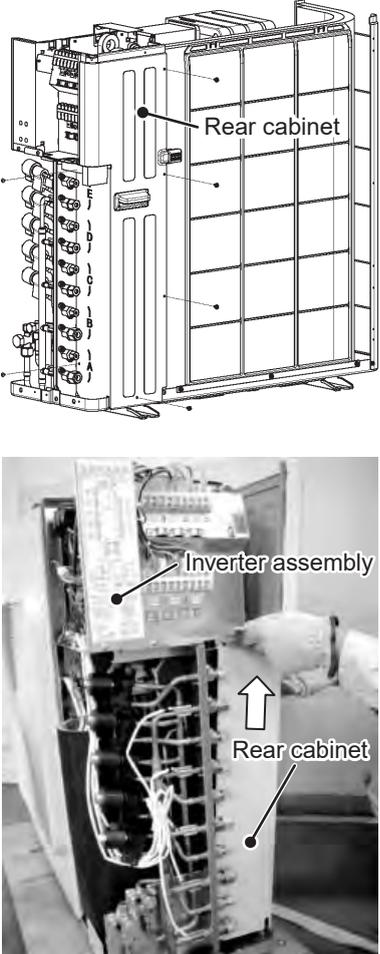
No.	Part name	Procedure	Remarks
②	Discharge port cabinet	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of Detachment 1 of ① . 2) Take off screws for the discharge port cabinet and the partition plate. (ST1T Ø4 × 8, 3 pcs.) 3) Take off screws for the discharge port cabinet and the bottom plate. (Hexagonal screw Ø4 × 10, 2 pcs.) 4) Take off screws for the discharge port cabinet and the motor base. (ST1T Ø4 × 8, 2 pcs.) 5) Take off screw for the discharge port cabinet and the heat exchanger. (ST1T Ø4 × 8, 1 pc.) 6) Take off screws for the discharge port cabinet and the fin guard. (Hexagonal screw Ø4 × 10, 2 pcs.) 	
③	Rear cabinet	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of Detachment 1 of ① . 2) Take off screw for the rear cabinet and the valve fixed board. (Hexagonal screw Ø4 × 10, 2 pcs.) 3) Take off screw for the rear cabinet and the anchor board. (Hexagonal screw Ø4 × 10, 1 pc.) 4) Take off screws for the rear cabinet and the heat exchanger. (Hexagonal screw Ø4 × 10, 3 pcs.) 5) Remove the rear cabinet by shifting it obliquely backward and upward. 	



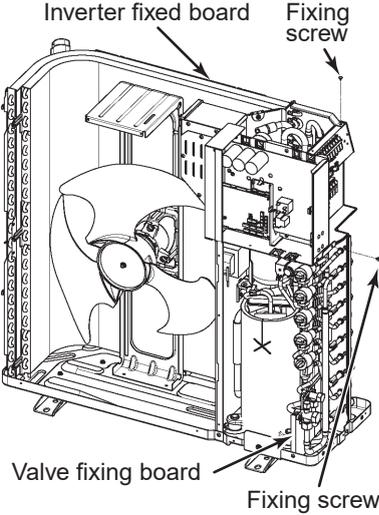
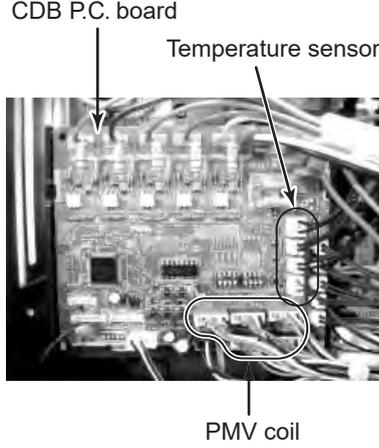
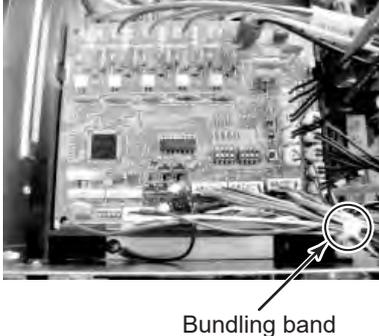
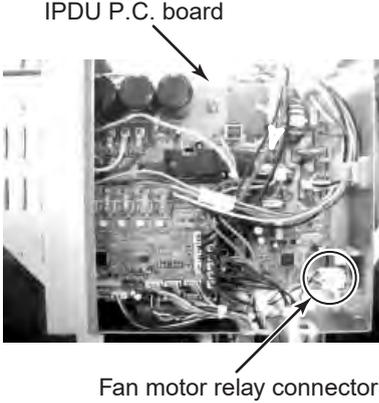
No.	Part name	Procedure	Remarks
④	Inverter assembly	<p>1) Perform works Detachment 1 of ① and ③ .</p> <hr/> <p style="text-align: center;">⚠ WARNING</p> <hr/> <p>Never disassemble the inverter until 5 minutes after the power supply was turned off because there is a fear that an electric shock may occur.</p> <hr/> <p>NOTE)</p> <hr/> <p>When working, be sure to use the insulate tools and put on the insulated gloves.</p> <hr/> <p>2) Take off screw for the inverter assembly and the valve fixed board. (ST1T Ø4 × 8, 1 pc.)</p> <p>3) Take off the screw fixed to the terminal fixed board in order to remove the inverter fixed board. (ST1T Ø4 × 8, 1 pc.)</p> <p>4) Remove the connectors that are connected from CDB P.C. board to the other parts. CN600: TD sensor (3P, White) CN602: TO sensor (2P, White) CN604: TGa sensor (2P, Yellow) CN605: TGb sensor (2P, Red) CN606: TGc sensor (2P, Green) CN607: TGe sensor (2P, Blue) CN608: TGe sensor (2P, Black) CN700: PMV coil (6P, Yellow) CN701: PMV coil (6P, Red) CN702: PMV coil (6P, Green) CN703: PMV coil (6P, Blue) CN704: PMV coil (6P, Black)</p> <p>5) Cut the bundling band that binds the PMV coil and the relay lead wire.</p> <p>6) Remove the connectors, relay connector and the lead wire that are connected from IPDU P.C. board to the other parts. CN609 : Compressor case thermo. (2P: Blue) CN690 : Relay connector for High pressure switch (2P: White)</p> <p>7) Remove connectors that are connected from the fan motor to the fan motor relay P.C. board. • Unlock the lock of the housing unit and then remove the connectors.</p>	 <p>Inverter fixed board Fixing screw</p> <p>Valve fixing board Fixing screw</p>  <p>CDB P.C. board Temperature sensor</p> <p>PMV coil</p>  <p>Bundling band</p>  <p>IPDU P.C. board</p> <p>Fan motor relay connector</p>

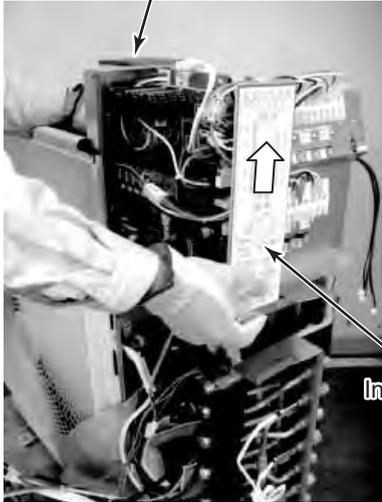
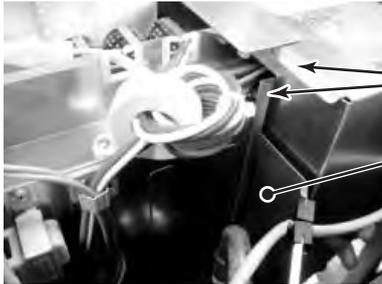
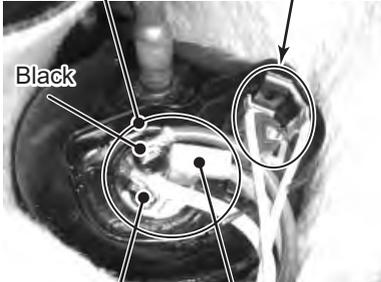
No.	Part name	Procedure	Remarks
④	Inverter assembly (Continued)	<p>8) Remove the soundproof plate (upper).</p> <p>9) Remove the terminal cover of the compressor and then remove the compressor lead of the compressor.</p> <p>10) Pull up the inverter assembly and then remove it.</p> <p style="text-align: center;">Reactor cover side</p>  <p style="text-align: right;">Inverter box side</p> <p>* Hold up both the reactor cover side and the inverter box side and then remove the inverter assembly upward.</p> <p>* Caution to mount the inverter assembly When mounting the inverter assembly to the partition plate, be sure to do hooking.</p>  <p style="text-align: right;">Hook Partition cover</p> <p>NOTE)</p> <hr/> <p>Using the bundling band on the market, be sure to bind the portions which were bound before.</p> <hr/>	<p>Soundproof plate (upper)</p>  <p>Compressor lead Case thermo</p>  <p>Black White Red</p>

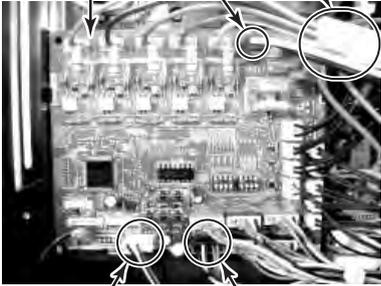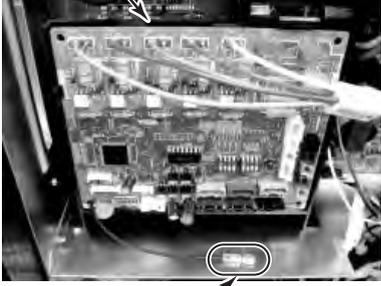
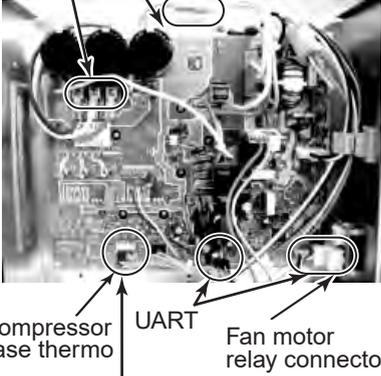
No.	Part name	Procedure	Remarks
⑤	CDB P.C. board	<p>1) Perform works of Detachment 1 of ① and 4) of ④ .</p> <p style="text-align: center;">⚠ CAUTION</p> <hr/> <p>Never disassemble the inverter until 5 minutes after the power supply was turned off because there is a fear that an electric shock may occur.</p> <hr/> <p>2) Remove the connector and the relay connector that are connected from CDB P.C. board to IPDU P.C. board, power supply and the inter-unit wire.</p> <p>CN802: UART (5P, Blue) CN804: UART (5P, White) CN01: Power supply (3P, Red) Terminal relay connector (6P, White)</p> <p>* Unlock the lock of the housing unit and then remove the connectors.</p> <p>3) Remove the earth wire of CDB P.C. board (Truss head B tight Ø4 × 6, 1 pc.)</p> <p>4) Remove CDB P.C. board from CDB fixed board.</p> <p>5) Mount a new CDB P.C. board.</p> <p>* When connecting the connectors on CDB P.C. board to support CDB fixed board with hand.</p>	<p>Power supply connector Terminal relay connector</p> <p>CDB P.C. board</p>  <p>UART (CN804) UART (CN802)</p> <p>CDB fixed board</p>  <p>Earth screw</p>
⑥	IPDU P.C. board	<p>1) Perform works of Detachment 1 of ① , 3) of ② , ④ and 2), 3) of ⑤ .</p> <p style="text-align: center;">⚠ CAUTION</p> <hr/> <p>Never disassemble the inverter until 5 minutes after the power supply was turned off because there is a fear that an electric shock may occur.</p> <hr/> <p>2) Take off screw for CDB fixed board and the inverter box. (ST1T Ø4 × 8, 1 pc.)</p> <p>3) Remove CDB P.C. board assembly.</p> <p>4) Remove the connectors connected to IPDU P.C. board. (compressor case thermo, UART × 2, Inter-unit wire)</p> <p>5) Remove the relay connector for fan motor, reactor, and High pressure switch.</p> <p>6) Remove the lead wire connected to IPDU P.C. board.</p> <p>(Tightening torque: 1.47 ± 0.1 N•m)</p> <p>Compressor lead U : CN200, Red V : CN201, White W : CN202, Black</p> <p>Remove the power supply cable from the power supply terminal block.</p> <p>Power supply lead L: Red Power supply lead N: White</p>	<p>Reactor relay connector</p> <p>Compressor lead IPDU P.C. board</p>  <p>Compressor case thermo UART Fan motor relay connector</p> <p>High pressure switch relay connector</p> <p>Power supply terminal block</p> 




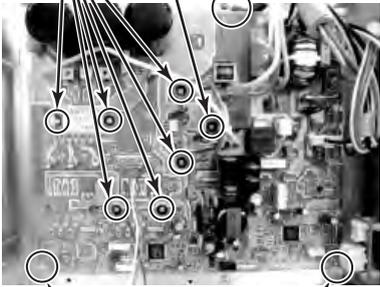
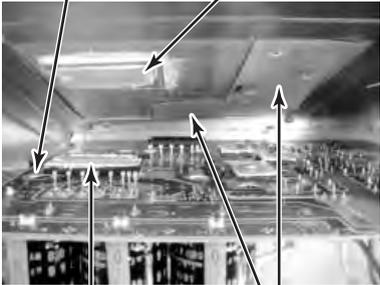
No.	Part name	Procedure	Remarks
⑥	IPDU P.C. board (Continued)	<p>7) Remove the earth wire of IPDU P.C. board. (Truss head B tight screw $\text{Ø}4 \times 6$, 1 pc.)</p> <p>8) Take off fixing screws for IPDU P.C. board. (Flange nut to fix element $\text{Ø}3 \times 16$, 7 pcs.: Pan head S tight screw to fix P.C. board $\text{Ø}3 \times 20$, 1 pc.)</p> <p>9) Remove IPDU P.C. board. (3 supporters)</p> <p>NOTE)</p> <hr/> <p>Be careful that IPDU P.C. board is difficult to be taken out by radiating grease for the heat sink.</p> <hr/> <p>10) Mount a new IPDU P.C. board.</p> <p>NOTE)</p> <hr/> <ul style="list-style-type: none"> • Take note that the compressor lead V: CN201 (white) and the reactor lead CN05, CN06 are correctly attached. (For the compressor lead, the transparent sleeve is attached to the circular terminal, and for the reactor lead, the transparent sleeve is not attached to the circular terminal.) • Be sure not to forget to attach the Sub heat sink and also the radiating sheet. (If you apply a little amount of radiating grease beforehand to the rear side of the insulation sheet, the attaching work to the heat sink will become easy.) <hr/>	<p>Fixing screws for element (7 positions)</p> <p>Earth screw</p>  <p>IPDU P.C. board fixing screw</p> <p>Supporters (3 positions)</p> <p>IPDU P.C. board</p> <p>Radiating grease</p>  <p>Sub heat sink</p> <p>Radiating sheet</p>

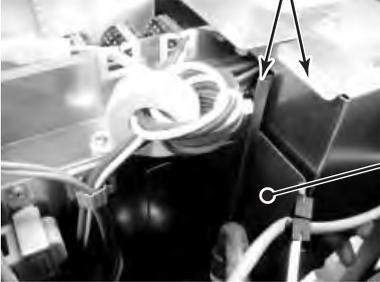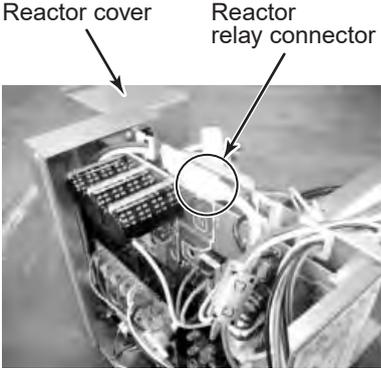
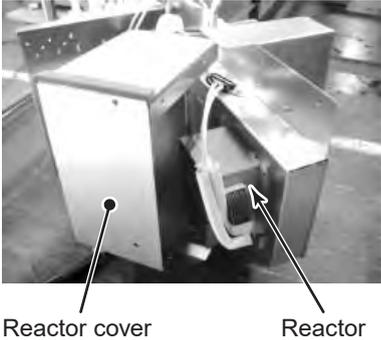
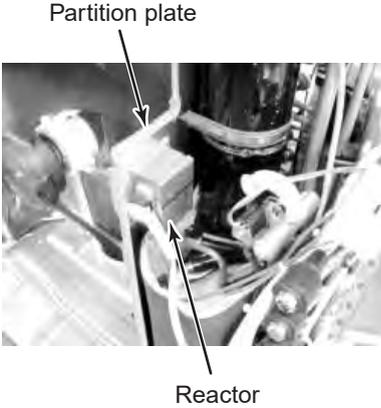
No.	Part name	Procedure	Remarks
⑦	Replacement of reactor	<p>1. Reactor to be attached to the inverter assembly</p> <ol style="list-style-type: none"> 1) Perform works of Detachment 1 of ① and ④ . 2) Remove the relay connector of the reactor. 3) Remove the reactor cover. (Truss head B tight screw Ø4 × 6, 4 pcs.) 4) Remove the reactor. (ST1T Ø4 × 6, 2 pcs.) 5) Mount a new reactor. <p>2. Reactor to be attached to the partition plate</p> <ol style="list-style-type: none"> 1) Perform works of Detachment 1 of ① and ④ . 2) Remove the reactor from the partition plate. (ST1T Ø4 × 8, 2 pcs.) 3) Mount a new reactor. <p>* Caution to mount the inverter assembly. When mounting the inverter assembly to the partition plate, be sure to attach the hooks certainly.</p> <div style="text-align: center;">  </div>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <div style="text-align: center;">  </div>

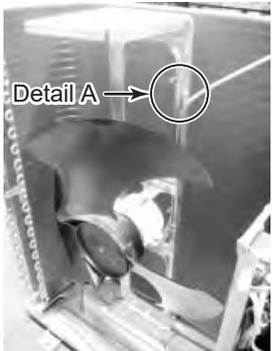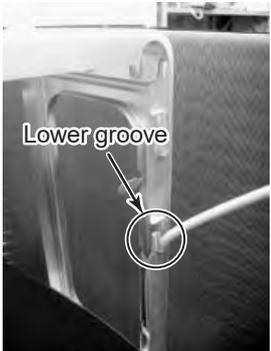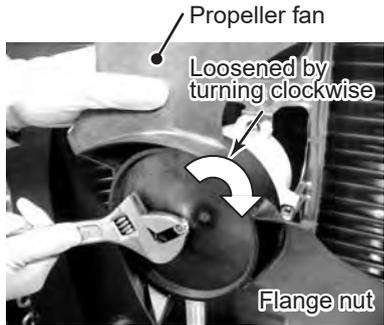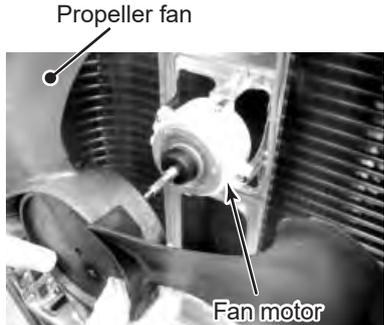
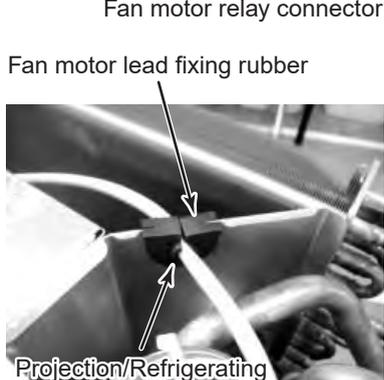
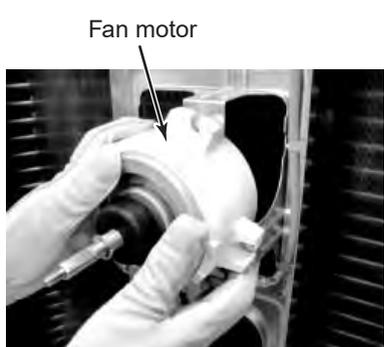
No.	Part name	Procedure	Remarks
⑧	Fan motor	<p>1) Perform works of Detachment 1 of ① and ② .</p> <p>2) Take off flange nut which fixes the fan motor and the propeller fan. * The flange nut is loosened by turning it clockwise. (To tighten the flange nut, turn it counterclockwise.)</p> <p>3) Remove the propeller fan.</p> <p>4) Remove the relay connector for fan motor from the inverter.</p> <p>5) Remove the fan motor lead from the fan motor lead fixing rubber of the penetrating part of the partition plate.</p> <p>6) Take off the fixing screws (4 pcs. each) while supporting the fan motor so that it does not fall. * Caution to assembly of fan motor</p> <ul style="list-style-type: none"> • Tighten the flange nut with 4.95N•m (50kgf•cm). • Adjust length of the fan motor lead fixing rubber so that the slackened fan motor lead does not come to contact with the propeller fan. <p>Put in the fan motor lead fixing rubber to the partition plate so that the projection comes to the refrigerating cycle side.</p> <ul style="list-style-type: none"> • There provided at 2 positions the grooves to pass the fan motor lead wire into the motor base. Use the lower groove. <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="text-align: center;"> <p>Motor base</p>  </div> <div style="text-align: center;"> <p>Detail A</p>  </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>CAUTION</p> <hr/> <p>Using the metal band of the motor base, be sure to fix the fan motor lead to the motor base so that the fan motor lead does not come to contact with the propeller fan.</p> <hr/> </div>	<div style="margin-bottom: 10px;">  <p>Propeller fan Loosened by turning clockwise Flange nut</p> </div> <div style="margin-bottom: 10px;">  <p>Propeller fan Fan motor</p> </div> <div style="margin-bottom: 10px;">  <p>Fan motor relay connector</p> </div> <div style="margin-bottom: 10px;">  <p>Fan motor lead fixing rubber Projection/Refrigerating cycle side</p> </div> <div style="margin-bottom: 10px;">  <p>Fan motor</p> </div>

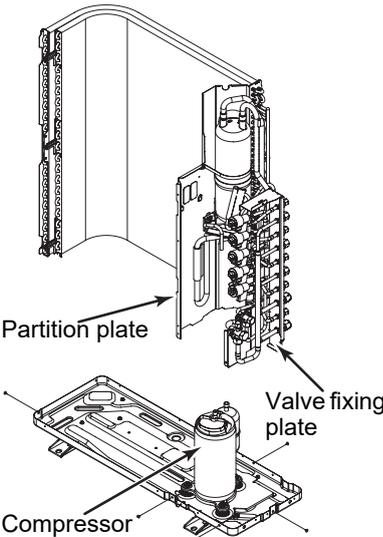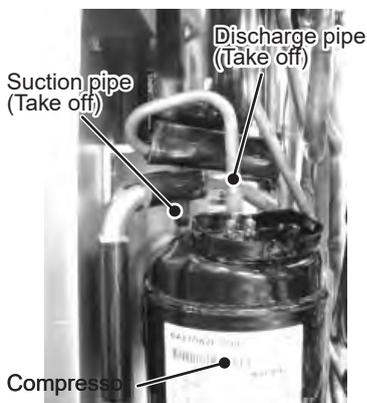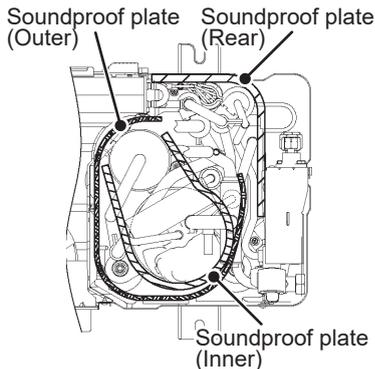
No.	Part name	Procedure	Remarks
⑨	Compressor assembly	<p>1. Removal of defective compressor</p> <ol style="list-style-type: none"> 1) Perform work of Detachment 1 of ① . 2) Recover the refrigerant gas from the outdoor unit. 3) Perform works of ② , ③ and ④ . 4) Remove the soundproof plate and TD sensor. 5) Take off fixing screw for the anchor board and the partition plate. (ST1T Ø4 × 8, 1 pc.) 6) Take off fixing screws for the anchor board and the heat exchanger. (ST1T Ø4 × 8, 2 pcs.) 7) Take off fixing screws for the anchor board and the valve fixing plate. (ST1T Ø4 × 8, 2 pcs.) 8) Using a burner, remove the welded parts (discharge pipe, suction pipe) connected to the compressor. <p>NOTE)</p> <hr/> <p>Take care that the electric parts, sensors, compressor, and etc. are not caught by flame. (Otherwise operation trouble may occur.)</p> <hr/> <p>9) Pull out the refrigerating cycle upward.</p> <p>NOTE)</p> <hr/> <p>Pull out the refrigerating cycle by two or more persons.</p> <hr/> <ol style="list-style-type: none"> 10) Take off the compressor bolts (3 pcs.) which fix the compressor to the compressor fixing plate. 11) Remove the compressor from the compressor fixing plate. <p>NOTE)</p> <hr/> <p>A compressor weighs approx. 15kg. Treat a compressor by two or more personals.</p> <hr/> <ul style="list-style-type: none"> * Caution to assemble compressor <ul style="list-style-type: none"> • Tighten the compressor bolt with 5N•m (50kgf•cm). • Be sure not to burn lead wire of the coil. • Take care there is no missing of sensor. 	  <p>* Mount the soundproof plate by passing between the compressor and pipes and between pipes and the partition plate in order of upper, inner, outer and rear sides.</p>  

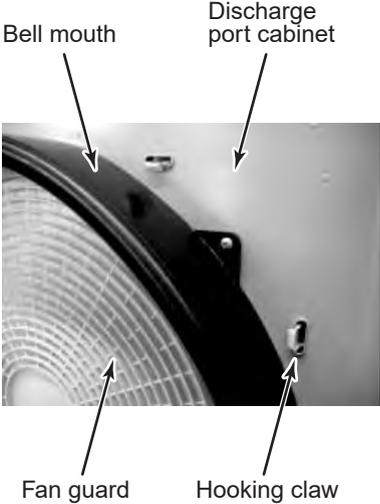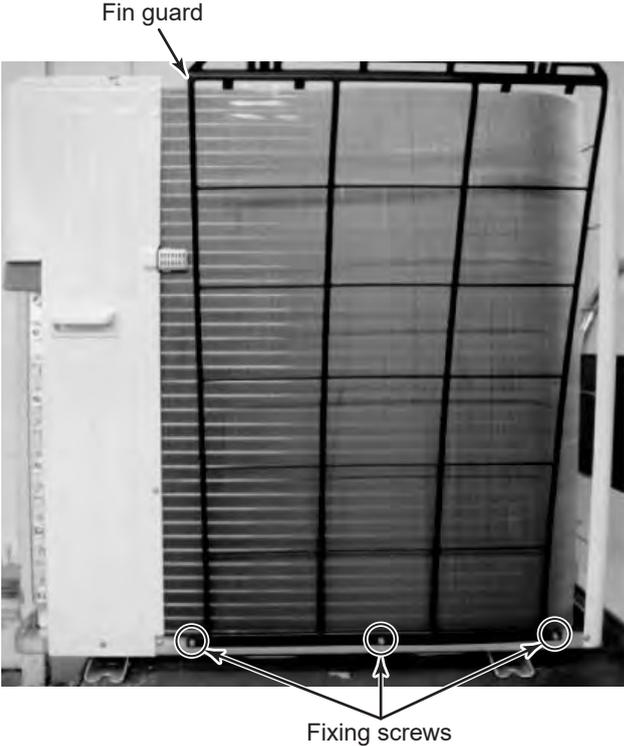No.	Part name	Procedure	Remarks
⑩	Fan guard	<p>1. Detachment</p> <p>1) Perform works of Detachment 1 of ① and ② .</p> <p style="text-align: center;">CAUTION</p> <hr/> <p>Work on the cardboard, cloth, and etc. in order to prevent damage on the product.</p> <hr/> <p>2) Take off the discharge port cabinet and put it as the fan guard side directs downward.</p> <p>3) Take off the hooking claws (8 positions) of the fan guard.</p> <p>2. Attachment</p> <p>1) Push the hooking claws (8 positions) with hands from the front side and then fix the claws.</p> <p style="text-align: center;">CAUTION</p> <hr/> <p>Check all the hooking claws are fixed at each specified position.</p> <hr/>	
⑪	Fin guard	<p>1. Detachment</p> <p>1) Remove the top plate. (Hexagonal screw Ø4 × 10, 6 pcs.)</p> <p>2) Take off fixing screws for the fin guard and the anchor board. (Hexagonal screw Ø4 × 10, 3 pcs.)</p> <p>3) Mount a new fin guard.</p>	

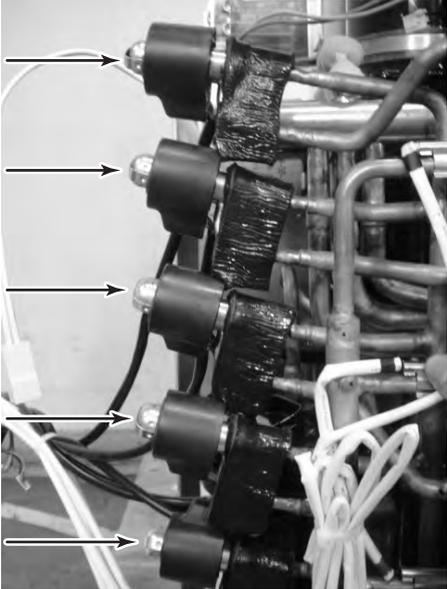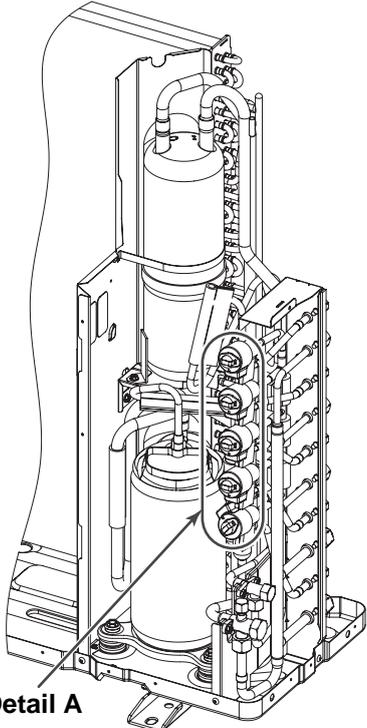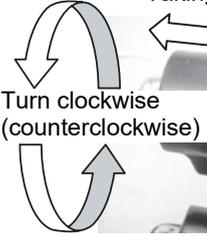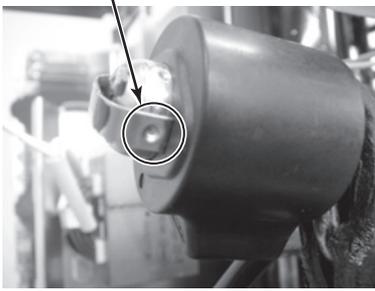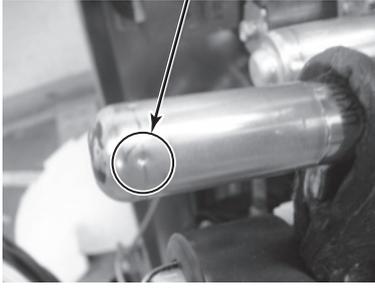No.	Part name	Procedure	Remarks
⑫	PMV Coil: Black Coil: Blue Coil: Green Coil: Red Coil: Yellow	<p>1. Detachment</p> <p>1) Perform work of Detachment 1 of [1].</p> <p>2) Turn the coil clockwise (counterclockwise) and then remove it from PMV main unit. (All 5 pcs.)</p> <p>2. Attachment</p> <p>1) Mount the PMV coil so that the coil lead wire taking-out part directs downward.</p> <hr/> <p>⚠ CAUTION</p> <hr/> <p>Coil: Mount yellow coil only so that lead wire taking-out part directs upward.</p> <hr/> <p>2) Match the positioning projection of coil with the concave part of PMV unit surely and fix it.</p> <p>Detail A</p> 	 <p>Detail A</p> <p>Taking-off direction</p>  <p>Turn clockwise (counterclockwise)</p> <p>PMV sideways</p> <p>Projection of PMV coil</p>  <p>Concave part of PMV</p> 

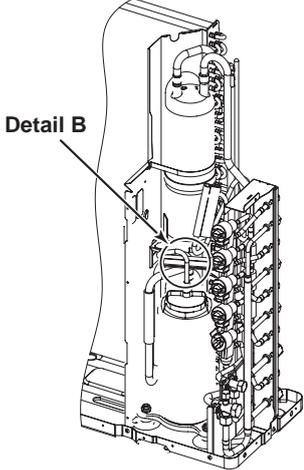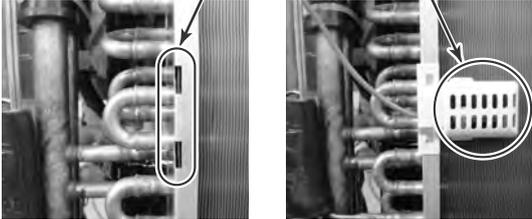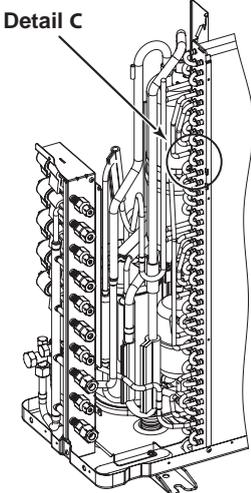
No.	Part name	Procedure	Remarks
⑬	TD sensor (Discharge temperature)	<p>* Attachment</p> <p>Mount TD sensor on the straight part of the discharge pipe so that the lead wire directs upward and the sensor directs upward of the cabinet.</p> <p>Detail B</p> 	
⑭	TO sensor (Outside temperature)	<p>* Attachment</p> <p>Insert TO sensor holder claw into the heat exchange terminal block hole and then mount it.</p> <p>Detail C Heat exchange terminal block hole TO sensor holder</p> 	
			<p>NOTE</p> <hr/> <p>At working time (finish time), be sure not to damage the cover of the sensor lead wire with edge of sheet metal, etc. If the cover of the sensor lead wire is damaged, it is dangerous because an electric shock or fire may be caused.</p> <hr/> <p>NOTE</p> <hr/> <p>After replacing of parts, check the sensors are mounted at the specified positions. If there are incorrect mounted positions, control of the product does not operate correctly and a trouble may be caused.</p> <hr/>

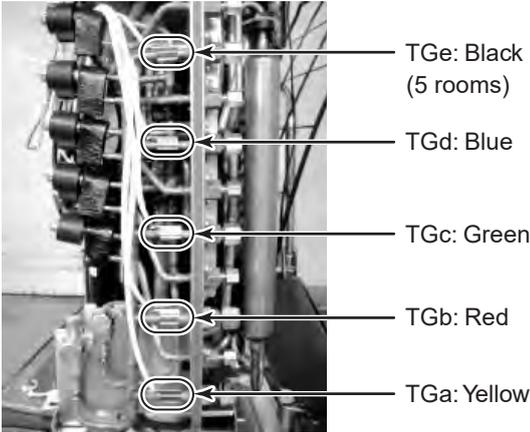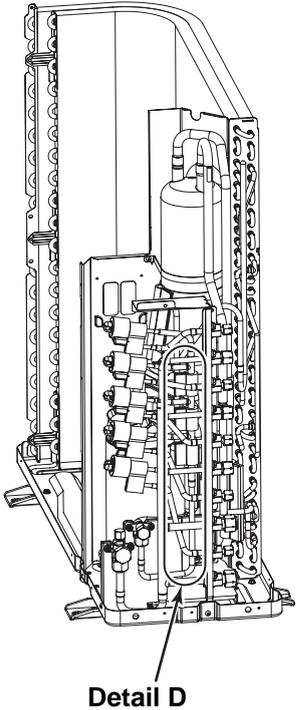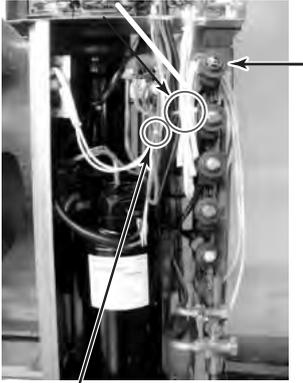No.	Part name	Procedure	Remarks
⑮	TG sensor TGe: Black TGd: Blue TGc: Green TGb: Red TGa: Yellow	<p>* Attachment</p> <p>Mount these sensors on the directly arranged part of the header connecting pipe at gas side so that the cabinet turns toward the front side and the sensors turn toward upper cabinet.</p> <p>NOTE)</p> <hr/> <p>When mounting the sensors, check paint color of the sensor lead tube part and the pipe color. Mount the sensors to the position of same color.</p> <hr/> <p>Detail D</p> 	
⑯	Sensor wiring process	<ul style="list-style-type: none"> Using bundling band, bind PMV coil (Black to Yellow) with Tga to Tge. For Td sensor, bind the case thermo and reactor lead by bundling band. <p>Bundling band PMV coil (Black to Yellow) TGa to TGe sensors</p>  <p>Bundling band Td sensor Case thermo Reactor lead</p> <p>Pass TG sensor through the upper side of connecting pipe of PMV unit (Black) and then bind it with lead wire of PMV coil.</p> <p>NOTE)</p> <hr/> <p>Using the bundling band being on the market, be sure to bind the position which was bound.</p> <hr/>	<p>NOTE)</p> <hr/> <p>At working time (finish time), be sure not to damage the cover of the sensor lead wire with edge of sheet metal, etc.</p> <p>If the cover of the sensor lead wire is damaged, it is dangerous because an electric shock or fire may be caused.</p> <hr/> <p>NOTE)</p> <hr/> <p>After replacing of parts, check the sensors are mounted at the specified positions.</p> <p>If there are incorrect mounted positions, control of the product does not operate correctly and a trouble may be caused.</p> <hr/>

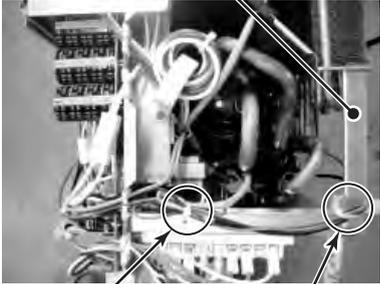No.	Part name	Procedure	Remarks
⑰	Sensor wiring process (Continued)	<p>* Bind TO sensor with the bundling band. * Pass TO sensor through upper part of the inverter fixing board and then bind them with the bundling band.</p> <p>NOTE)</p> <hr/> <p>Using the bundling band being on the market, be sure to bind the position which was bound.</p> <hr/>	 <p>Inverter fixing board</p> <p>Bundling band TO sensor</p> <p>Bundling band TO sensor</p>
⑱	Pressure switch	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of Detachment 1 of 1. 2) Recover the refrigerant gas from the outdoor unit. 3) Perform works of 2, 3 and 4. 4) Remove the soundproof plate, TD sensor, Reactor on the partition plate and butyl on the pipe of pressure switch. 5) Using a burner, remove the welded parts of the pipe of pressure switch. <p>NOTE)</p> <hr/> <p>Take care that the electric parts, 4-way valve unit, butyle, compressor, accum tank, and etc. are not caught by flame. (Otherwise operation trouble may occur.)</p> <hr/> <p>2. Attachment</p> <ul style="list-style-type: none"> • Be sure not to burn lead wire of the pressure switch. • Take care there is no missing of sensor. <p>NOTE)</p> <hr/> <p>Take care that the body of the pressure is not be 100°C or more. For cooling pressure switch, use the wet towel and etc. Use the protective plate for the welding.</p> <hr/>	 <p>Picture A</p> <p>High Pressure switch</p> <p>Protective plate for welding</p> <p>Wet towel</p>


13. EXPLODED VIEWS AND PARTS LIST

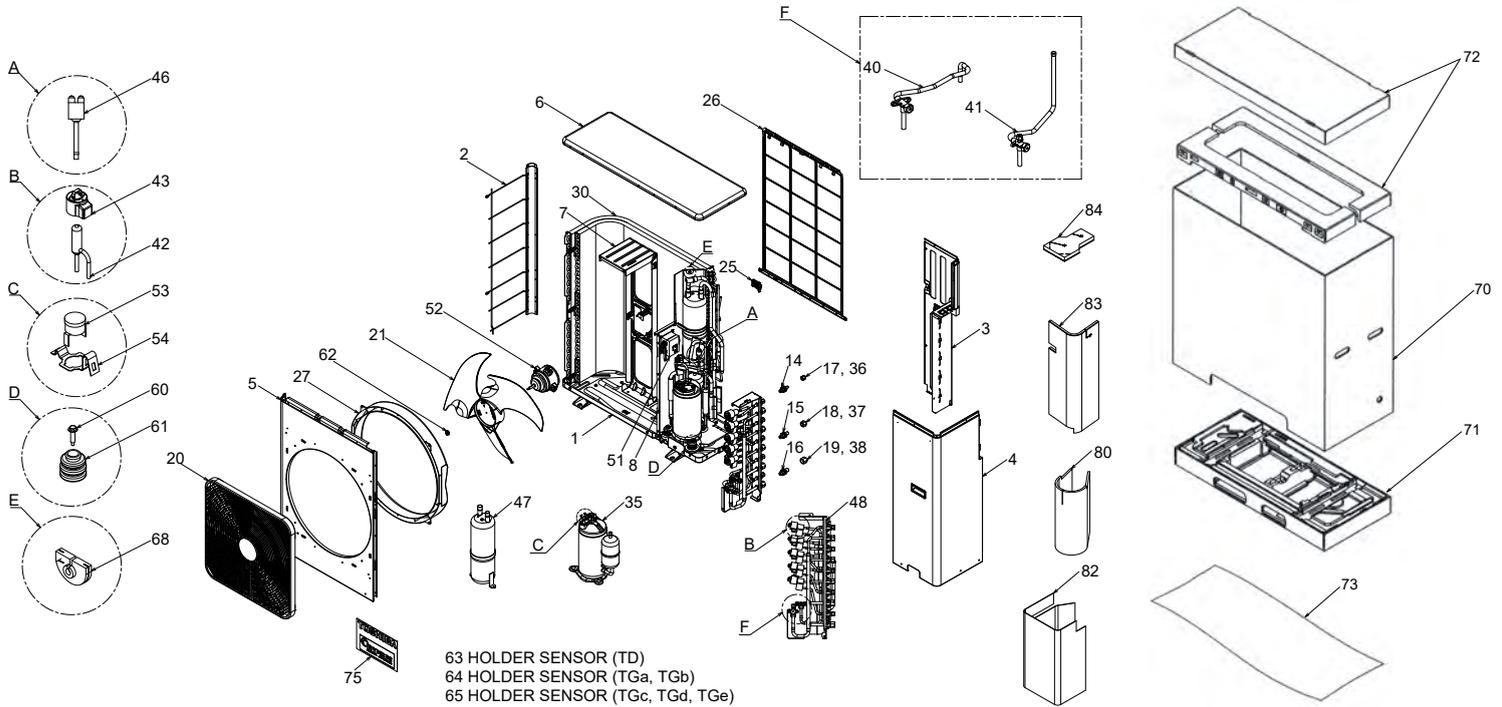13-1. Outdoor Unit



Location No.	Part No.	Description	Location No.	Part No.	Description
1	43T42342	BASE PLATE ASSEMBLY	42	43T46439	BODY-PMV
2	43T19346	FIN GUARD ASSEMBLY	43	43T46440	COIL-PMV
3	43T00662	ASM-COAT-P-P-BK	46	43T63380	HIGH PRESSURE SWITCH ASSEMBLY
4	43T00660	ASM-COAT-P-P-FR	47	43T48311	ACCUMULATOR ASSEMBLY
5	43T00658	ASM-COAT-C-A-O	48	43T45315	VALVE PIPE ASSEMBLY
6	43T00803	UPPER CABINET ASSEMBLY	51	43T58307	REACTOR
7	43T39342	MOTOR BASE	52	43T21437	FAN MOTOR
8	43T04426	PARTITION ASSEMBLY	53	43T54319	BIMETAL-THERMO
14	43T46501	SOCKET 6.35 DIA	54	43T50307	HOLDER-THERMO
15	43T46500	SOCKET 9.52 DIA	60	43T47385	BOLT, COMPRESSOR
16	43T46499	SOCKET 12.7 DIA	61	43T49346	RUBBER CUSHION
17	43T97311	NUT, FLARE, 1/4 IN	62	43T47001	NUT FLANGE
18	43T97312	NUT, FLARE, 3/8 IN	63	43T63317	HOLDER,SENSOR
19	43T97317	NUT, FLARE, 1/2 IN	64	43T63323	HOLDER,SENSOR
20	43T19343	FAN GUARD	65	43T63316	HOLDER,SENSOR
21	43T20329	PROPELLER FAN	68	43T96305	BUSHING
25	43T63335	SENSOR HOLDER	70	43T91323	CARTON-BOX
26	43T19345	FIN GUARD	71	43T91318	FIBERBOARD UNDER ASSEMBLY
27	43T22313	BELLMOUTH	72	43T91324	FIBERBOARD UPPER ASSEMBLY
30	43T43618	CONDENSER ASSEMBLY	73	43T91301	PE SHEET
35	43T41540	COMPRESSOR	75	43T85591	MARK-T
36	43T47403	BONNET, 6.35 DIA	80	43T04417	SOUND INSULATION(IN)
37	43T47404	BONNET, 9.52 DIA	82	43T04414	SOUND INSULATION(FR)
38	43T47405	BONNET, 12.7 DIA	83	43T04415	SOUND INSULATION(BK)
40	43T46510	VALVE PACKED ASSEMBLY, 9.52 DIA	84	43T04416	SOUND INSULATION(UP)
41	43T46511	VALVE PACKED ASSEMBLY, 12.7 DIA			

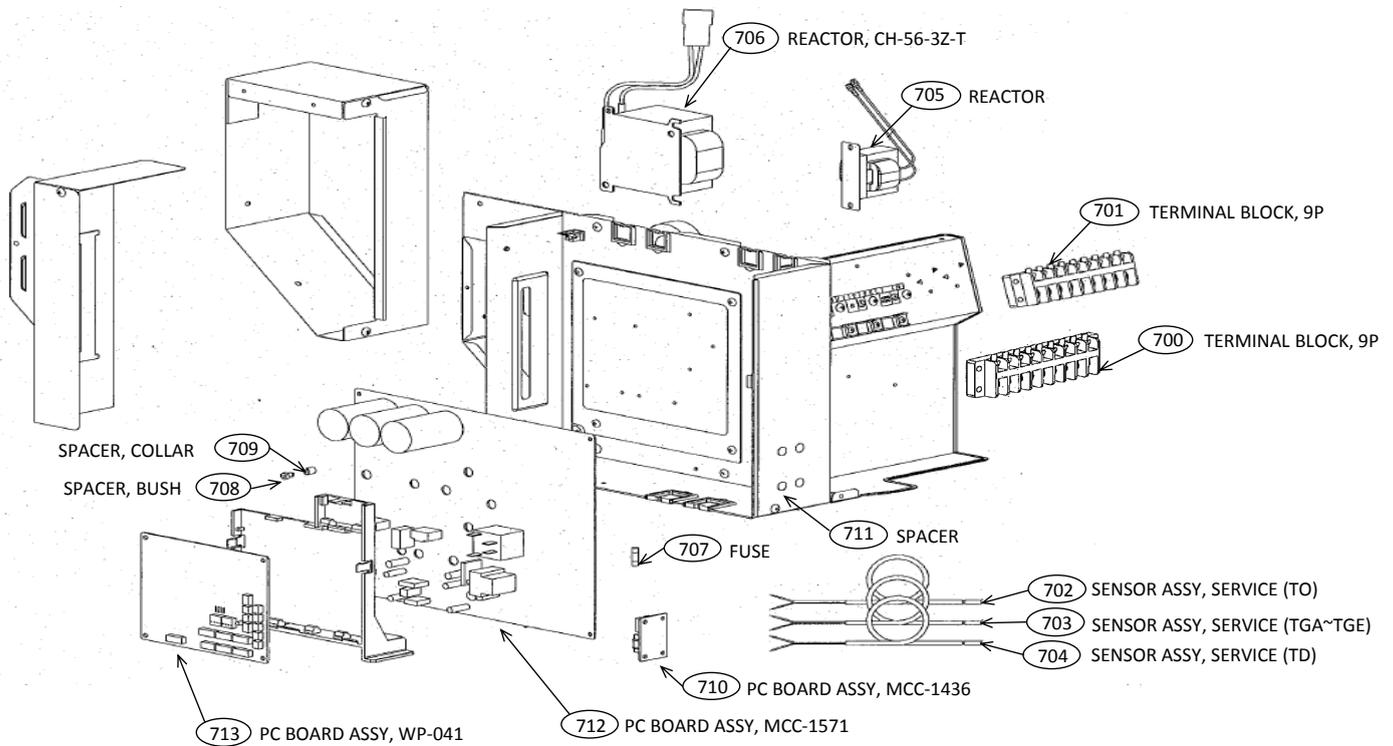13-2. Inverter Assembly



Location No.	Part No.	Description	Location No.	Part No.	Description
700	43T60451	SERV-TERMINAL	707	43T60413	FUSE
701	43T60452	SERV-TERMINAL	708	43T61315	SPACER(BUSH)
702	43T50347	SENSOR ASSY, SERVICE	709	43T61316	SPACER(COLLAR)
703	43T50356	SERVICE-SENSOR	710	43T6V587	ASM-PCB(FAN-REL)
704	43T60433	SENSOR ASSY,SERVICE	711	43T61324	ASM-SPACER-SET
705	43T58326	REACTOR,CH-76	712	43T6W379	PC-BOARD
706	43T58307	REACTOR	713	43T6W695	PC BOARD

Toshiba Carrier (Thailand) Co., Ltd.

**144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANG, PATHUMTHANI 12000, THAILAND.**